



Cover (D) unit

- Detach the cover (D) unit.
- Detach L/R lock knob (#25).
- Take out 4 screws (#36).

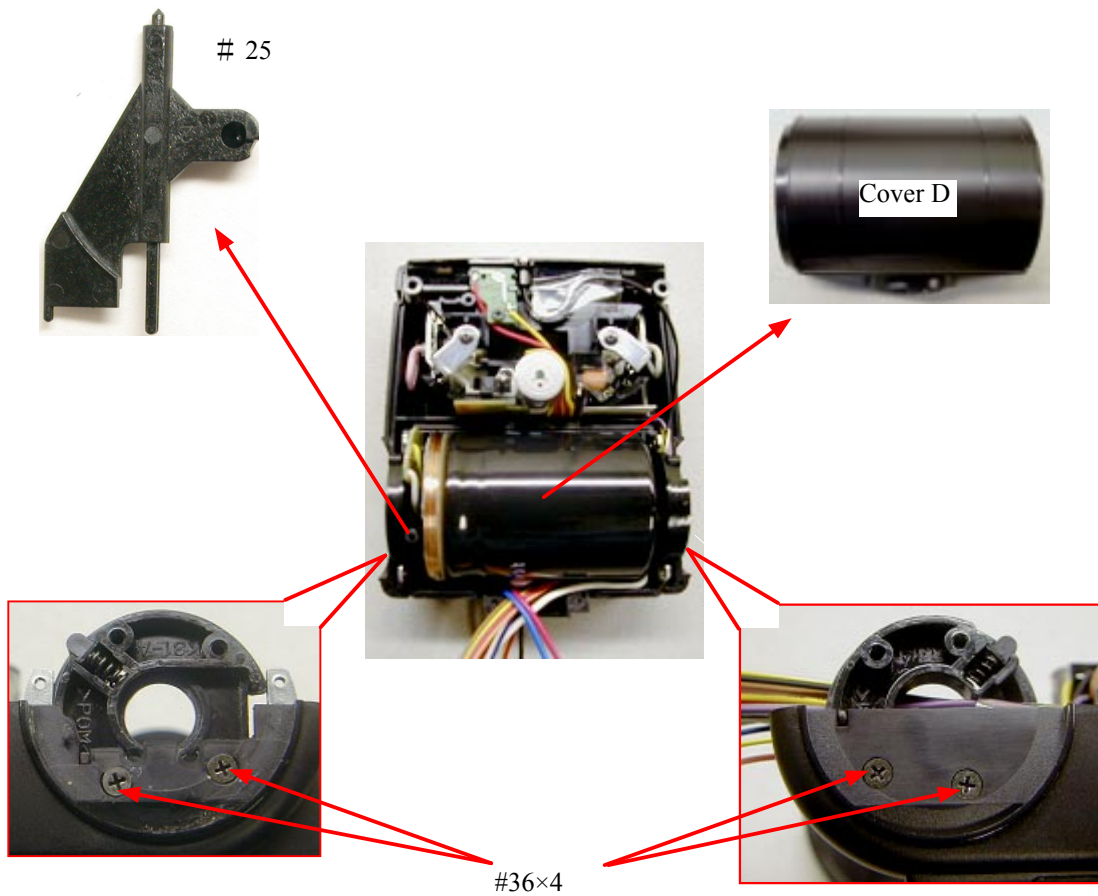


Cover (C) unit

- Detach the cover (C) from the head unit by turning it in the direction indicated by the arrow.
- The bounce shaft A comes off.

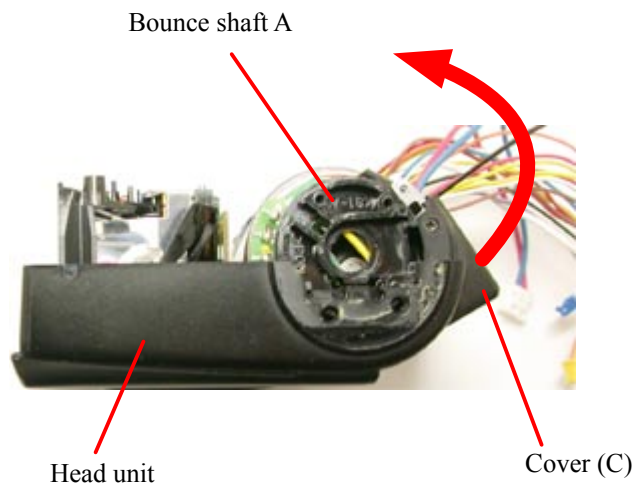

Connectors


- Refer to next page for the details on how to connect connectors.

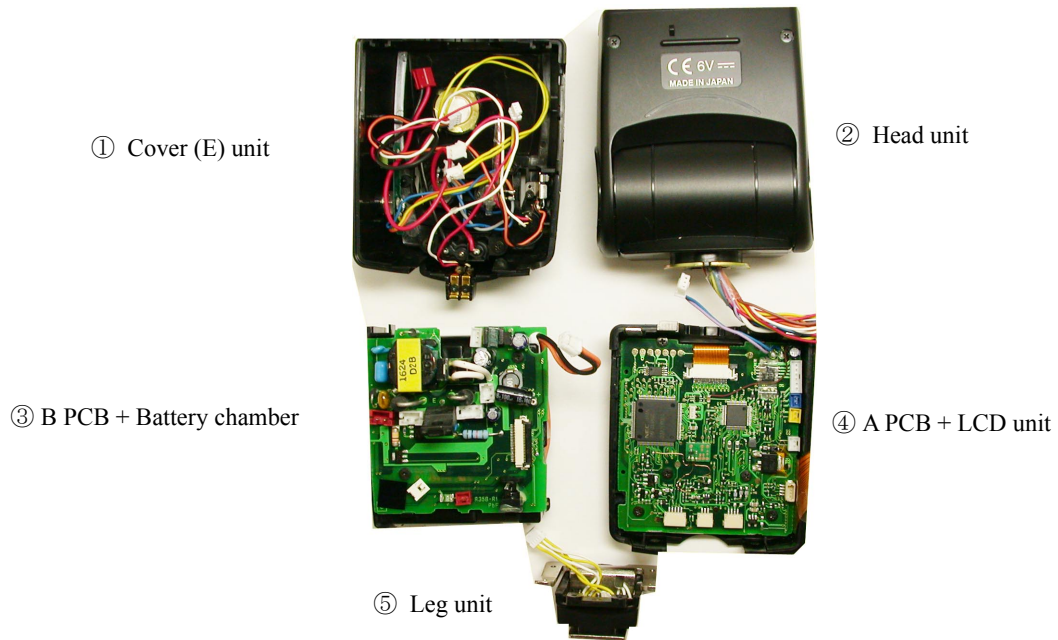


- Connect the connectors on the A PCB.
- Assemble the leg unit into the ④ (A PCB + LCD unit).
- Assemble the ③ (B PCB + Battery chamber) into the ④ (A PCB + LCD unit).
- Assemble the connectors on the B PCB.

* **Note:** Do NOT forget to attach the below click post and spring!

Connectors on the A PCB

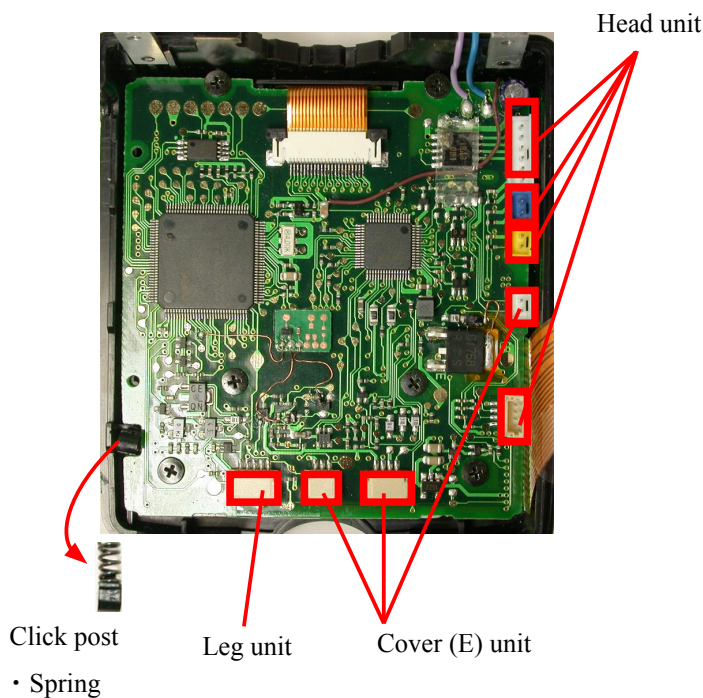

Connectors on the A PCB

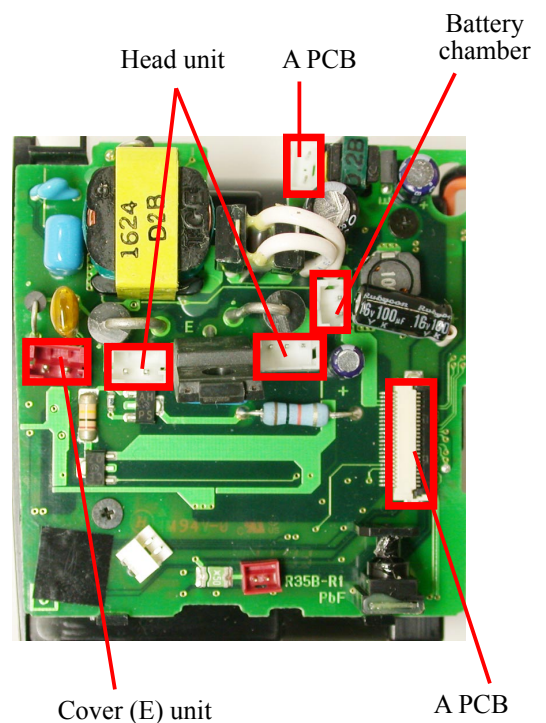

実体配線図 WIRING

