

# ROCSTA WORKSHOP MANUAL

## FOREWORD

This workshop manual has been prepared to provide information covering normal service, repair and maintenance for ASIA ROCSTA.

Information in this manual is divided into Groups, each Group covers a general vehicle system like transmission, steering, etc.

Each Group also contains Summary, Specification, Troubleshooting, Removal and Installation, Adjustment, Diagnosis and Testing.

For satisfaction of Asia customer, proper service and maintenance by technician is essential.

So it is important that service personnel fully understand the contents of this manual and should keep in a handy place for quick and easy reference.

The information, photographs, drawings and specifications contained in this manual are best available at the time of printing. So, it is recommended that this manual should be kept up-to-date by receiving of new information.

Asia Motors reserves the right to change the specifications and contents of this manual without obligation and advance notice.

We sure this workshop manual will help you with maintaining and keeping the best condition of this vehicle.

December, 1994  
ASIA MOTORS Co., Inc.

## CONTENTS

GENERAL INFORMATION	0
ENGINE	1A·B
LUBRICATION SYSTEM	2A·B
COOLING SYSTEM	3A·B
FUEL, IN. AND EXH. SYSTEM	4A·B
ENGINE ELECTRICAL SYSTEM	5
CLUTCH	6
TRANSMISSION	7
PROPELLER SHAFT	8
FRONT & REAR AXLE	9
STEERING	10
BRAKES	11
WHEELS AND TIRES	12
SUSPENSION	13
BODY	14
BODY ELECTRICAL SYSTEM	15
TECHNICAL DATA	22
SPECIAL TOOLS	23

## GENERAL INFORMATION

<input checked="" type="checkbox"/> FUNDAMENTAL PROCEDURES .....	0-2
<input checked="" type="checkbox"/> JACK AND SAFETY STAND(RIGID RACK) POSITIONS .....	0-6
<input checked="" type="checkbox"/> VEHICLE LIFT POSITIONS .....	0-7
<input checked="" type="checkbox"/> TOWING .....	0-7
<input checked="" type="checkbox"/> TOWING HOOK .....	0-7
<input checked="" type="checkbox"/> TOW ROPE POSITIONS .....	0-7
<input checked="" type="checkbox"/> CHASSIS NUMBER LOCATION .....	0-8
<input checked="" type="checkbox"/> UNITS .....	0-8
<input checked="" type="checkbox"/> ABBREVIATIONS .....	0-8

## ENGINE

<input checked="" type="checkbox"/> OUTLINE .....	1A-2
<input checked="" type="checkbox"/> SPECIFICATIONS .....	1A-4
<input checked="" type="checkbox"/> TROUBLESHOOTING GUIDE .....	1A-4
<input checked="" type="checkbox"/> INSPECTION AND ADJUSTMENT .....	1A-6
<input checked="" type="checkbox"/> DISASSEMBLY OF ENGINE .....	1A-8
<input checked="" type="checkbox"/> INSPECTION AND REPAIR .....	1A-16
<input checked="" type="checkbox"/> ASSEMBLY OF ENGINE .....	1A-21

## ENGINE (GASOLINE)

<input checked="" type="checkbox"/> STRUCTURAL VIEW .....	1B-2
<input checked="" type="checkbox"/> SPECIFICATIONS .....	1B-4
<input checked="" type="checkbox"/> TROUBLESHOOTING GUIDE .....	1B-4
<input checked="" type="checkbox"/> DISASSEMBLY OF ENGINE .....	1B-6
<input checked="" type="checkbox"/> INSPECTION AND REPAIR .....	1B-14
<input checked="" type="checkbox"/> ASSEMBLY OF ENGINE .....	1B-25

## LUBRICATION SYSTEM

<input checked="" type="checkbox"/> OUTLINE .....	2A-2
<input checked="" type="checkbox"/> SPECIFICATIONS .....	2A-3
<input checked="" type="checkbox"/> TROUBLESHOOTING GUIDE .....	2A-4
<input checked="" type="checkbox"/> INSPECTION .....	2A-5
<input checked="" type="checkbox"/> OIL BYPASS FILTER .....	2A-5
<input checked="" type="checkbox"/> OIL PAN .....	2A-7
<input checked="" type="checkbox"/> OIL PUMP .....	2A-9
<input checked="" type="checkbox"/> OIL COOLER .....	2A-11
<input checked="" type="checkbox"/> OIL JET .....	2A-13

## LUBRICATION SYSTEM

<input checked="" type="checkbox"/> FLOW CHART .....	2B-2
<input checked="" type="checkbox"/> SPECIFICATIONS .....	2B-3
<input checked="" type="checkbox"/> TROUBLESHOOTING GUIDE .....	2B-3
<input checked="" type="checkbox"/> OIL FILTER .....	2B-3
<input checked="" type="checkbox"/> OIL PAN .....	2B-4
<input checked="" type="checkbox"/> OIL PUMP .....	2B-5
<input checked="" type="checkbox"/> OIL PRESSURE .....	2B-7

## COOLING SYSTEM

<input checked="" type="checkbox"/> OUTLINE .....	3A-2
<input checked="" type="checkbox"/> SPECIFICATIONS .....	3A-3
<input checked="" type="checkbox"/> TROUBLESHOOTING GUIDE .....	3A-4
<input checked="" type="checkbox"/> COOLANT .....	3A-4
<input checked="" type="checkbox"/> THERMOSTAT .....	3A-5
<input checked="" type="checkbox"/> RADIATOR .....	3A-6
<input checked="" type="checkbox"/> RADIATOR CAP .....	3A-7
<input checked="" type="checkbox"/> WATER PUMP .....	3A-7

## COOLING SYSTEM

<input checked="" type="checkbox"/> OUTLINE .....	3B-2
<input checked="" type="checkbox"/> SPECIFICATIONS .....	3B-3
<input checked="" type="checkbox"/> TROUBLESHOOTING GUIDE .....	3B-3
<input checked="" type="checkbox"/> COOLANT .....	3E
<input checked="" type="checkbox"/> THERMOSTAT .....	3B-4
<input checked="" type="checkbox"/> RADIATOR .....	3B-5
<input checked="" type="checkbox"/> RADIATOR CAP .....	3B-5
<input checked="" type="checkbox"/> WATER THERMO-SWITCH .....	3B-6
<input checked="" type="checkbox"/> WATER PUMP .....	3B-7

## FUEL, INTAKE· EXHAUST SYSTEM

☒ OUTLINE .....	4A-2
☒ SPECIFICATIONS .....	4A-3
☒ TROUBLESHOOTING GUIDE .....	4A-4
☒ FUEL LINE .....	4A-5
☒ FUEL FILTER .....	4A-5
☒ INJECTION PUMP .....	4A-7
☒ FUEL CUT VALVE .....	4A-13
☒ INJECTION NOZZLE .....	4A-13
☒ CSD CABLE AND LINKAGE .....	4A-15
☒ ENGINE SPEED .....	4A-16
☒ AIR-BLEEDING .....	4A-17

## FUEL, INTAKE· EXHAUST SYSTEM

☒ OUTLINE .....	4B-2
☒ SPECIFICATIONS .....	4B-5
☒ TROUBLESHOOTING GUIDE .....	4B-6
☒ ACCELERATOR LINKAGE .....	4B-7
☒ FUEL PUMP .....	4B-8
☒ FUEL TANK .....	4B-9
☒ FUEL FILTER .....	4B-9
☒ CARBURETOR .....	4B-10
☒ EGR(Emission Gas Regulation) CONTROL SYSTEM .....	4B-22
☒ EGR MODULATOR VALVE .....	4B-23
☒ EGR SOLENOID .....	4B-23
☒ EVAPORATIVE EMISSION CONTROL SYSTEM .....	4B-24
☒ IDLE-UP SYSTEM .....	4B-26
☒ IDLE-UP ELECTRIC LOAD OR POWER STEERING .....	4B-27
☒ POSITIVE CRANKCASE VENTILATION(PCV) SYSTEM .....	4B-29
☒ AIR INLET TEMPERATURE CONTROL SYSTEM .....	4B-30
☒ HOT IDLE COMPENSATION SYSTEM .....	4B-31

## ENGINE ELECTRICAL SYSTEM

☒ OUTLINE .....	5-2
☒ SPECIFICATIONS .....	5-3
☒ TROUBLESHOOTING GUIDE .....	5-3
☒ BATTERY .....	5-4
☒ ALTERNATOR .....	5-5
☒ STARTER-A(Diesel engine : 2.0KW type) .....	5-13
☒ STARTER-B(Gasoline engine : 0.95KW type) .....	5-21
☒ QUICK START SYSTEM(QSS) .....	5-28
☒ GLOW PLUG .....	5-29
☒ VACUUM PUMP .....	5-29
☒ DRIVE BELT .....	5-30
☒ SPARK PLUG .....	5-31
☒ HIGH-TENSION LEAD .....	5-31
☒ IGNITION COIL .....	5-32
☒ DISTRIBUTOR .....	5-32

## CLUTCH

☒ OUTLINE .....	6-2
☒ SPECIFICATIONS .....	6-3
☒ TROUBLESHOOTING GUIDE .....	6-3
☒ ON-VEHICLE MAINTENANCE .....	6-4
☒ INSPECTION AND ADJUSTMENT .....	6-4
☒ CLUTCH PEDAL .....	6-5
☒ MASTER CYLINDER .....	6-7
☒ RELEASE CYLINDER .....	6-10
☒ CLUTCH AND FLYWHEEL .....	6-13

## TRANSMISSION

☒ OUTLINE .....	7-2
☒ SPECIFICATIONS .....	7-3
☒ TROUBLESHOOTING GUIDE .....	7-3
☒ INSPECTION .....	7-4
☒ REMOVAL OF TRANSMISSION ASSEMBLY .....	7-5
☒ INSTALLATION OF TRANSMISSION ASSEMBLY .....	7-6
☒ CLUTCH HOUSING ASSEMBLY .....	7-7
☒ CONTROL CASE ASSEMBLY .....	7-8
☒ EXTENSION HOUSING ASSEMBLY .....	7-9
☒ TRANSMISSION CASE ASSEMBLY .....	7-10
☒ MAIN DRIVE SHAFT ASSEMBLY .....	7-12
☒ ASSEMBLY OF TRANSMISSION ASSEMBLY .....	7-14
☒ TRANSFER ASSEMBLY .....	7-18
☒ FRONT & REAR COVER (ONLY INDIRECT TYPE TRANSFER) .....	7-19
☒ REAR CASE ASSEMBLY .....	7-20
☒ FRONT CASE, MAIN SHAFT AND IDLE GEAR ASSEMBLY .....	7-21
☒ ASSEMBLY OF TRANSFER ASSEMBLY .....	7-22

## PROPELLER SHAFT

☒ OUTLINE .....	8-2
☒ SPECIFICATIONS .....	8-2
☒ TROUBLESHOOTING GUIDE .....	8-3
☒ ON-VEHICLE INSPECTION .....	8-3
☒ REMOVAL .....	8-4
☒ DISASSEMBLY .....	8-5
☒ ASSEMBLY .....	8-6
☒ INSPECTION .....	8-7
☒ INSTALLATION .....	8-7

## FRONT AND REAR AXLES

☒ OUTLINE .....	9-2
☒ SPECIFICATIONS .....	9-3
☒ TROUBLESHOOTING GUIDE .....	9-4
☒ FRONT AXLE .....	9-5
☒ REAR AXLE .....	9-12
☒ DIFFERENTIAL .....	9-17

## STEERING

☒ OUTLINE .....	10-2
☒ SPECIFICATIONS .....	10-3
☒ TROUBLESHOOTING GUIDE .....	10-3
☒ INSPECTION AND ADJUSTMENT .....	10-5
☒ WHEEL ALIGNMENT .....	10-6
☒ STEERING WHEEL AND COLUMN .....	10-8
☒ GEAR BOX .....	10-10
☒ MANUAL STEERING GEAR BOX .....	10-12
☒ POWER STEERING GEAR BOX .....	10-15
☒ POWER STEERING OIL PUMP .....	10-19

## BRAKE

☒ OUTLINE .....	11-2
☒ SPECIFICATIONS .....	11-2
☒ TROUBLESHOOTING GUIDE .....	11-2
☒ ON-VEHICLE MAINTENANCE .....	11-4
☒ INSPECTION AND ADJUSTMENT .....	11-4
☒ BRAKE PEDAL .....	11-6
☒ MASTER CYLINDER .....	11-8
☒ POWER BRAKE UNIT .....	11-11
☒ VACUUM PUMP .....	11-19
☒ FRONT DISC BRAKE .....	11-21
☒ REAR DRUM BRAKE .....	11-23
☒ WHEEL CYLINDER .....	11-25
☒ BACK PLATE .....	11-26
☒ BRAKE LINES .....	11-27

☒ <b>FUNDAMENTAL PROCEDURES</b> .....	<b>0-2</b>
☒ PROTECTION OF THE VEHICLE .....	0-2
☒ A WORD ABOUT SAFETY .....	0-2
☒ PREPARATION OF TOOLS AND MEASURING EQUIPMENT .....	0-2
☒ SPECIAL TOOLS .....	0-2
☒ REMOVAL OF PARTS .....	0-3
☒ DISASSEMBLY .....	0-3
☒ INSPECTION DURING DISASSEMBLY .....	0-3
☒ ARRANGEMENT OF DISASSEMBLED PARTS .....	0-3
☒ CLEANING DISASSEMBLED PARTS .....	0-4
☒ ASSEMBLY .....	0-4
☒ ADJUSTMENTS .....	0-4
☒ ELECTRICAL SYSTEM .....	0-5
☒ RUBBER PARTS AND TUBING .....	0-5
☒ <b>JACK AND SAFETY STAND (RIGID RACK) POSITIONS</b> .....	<b>0-5</b>
☒ FRONT END .....	0-5
☒ REAR END .....	0-6
☒ <b>VEHICLE LIFT POSITIONS</b> .....	<b>0-6</b>
☒ FRONT END .....	0-6
☒ REAR END .....	0-6
☒ <b>TOWING</b> .....	<b>0-7</b>
☒ WITH MANUAL TRANSMISSION .....	0-7
☒ <b>TOWING HOOK</b> .....	<b>0-7</b>
☒ <b>TOW ROPE POSITIONS</b> .....	<b>0-7</b>
☒ FRONT END .....	0-7
☒ REAR END .....	0-7
☒ <b>CHASSIS NUMBER LOCATION</b> .....	<b>0-7</b>
☒ <b>UNITS</b> .....	<b>0-8</b>
☒ <b>ABBREVIATIONS</b> .....	<b>0-8</b>