



DealerNation@aol.com



Service Manual

**GARDEN TRACTORS,
SUPER GARDEN TRACTORS,
MOWER DECKS AND ATTACHMENTS**

Model Numbers

**1340, 1535, 1541, 1860, 1862, 1782, 1882, 2082, 2182,
190-328, 190-336, 190-349, 190-357, 190-358, 190-359,
190-374, 383, 433/383, 388/389 and 759-3493**

Thank you for purchasing an American-built product

CUB CADET CORPORATION • P.O. BOX 360930 • CLEVELAND, OHIO 44136

RECORD OF REVISIONS

Change No.	Date	Description of Revision
1	October 1991	Added 1991 changes

TRACTOR SERVICE MANUAL CROSS REFERENCE CHART

TRACTOR MODELS LISTED IN MANUAL	TRACTOR MODELS SIMILAR TO THE MODELS IN MANUAL				
1340	replaced by	1440			
1535	replaced by	none			
1541	replaced by	1440	1641	1861	1863
1860	replaced by	1440			
1862	replaced by	1864			
1782	replaced by	none			
1882	replaced by	none			
2082	replaced by	2084	2284		
2182	replaced by	2086			

TABLE OF CONTENTS

Section/paragraph	Page
1 GENERAL INFORMATION AND SAFETY PRECAUTIONS	1-1
1-1. Safety Precautions	1-1
1-2. General	1-1
1-3. Reference Data	1-1
1-4. Facilities	1-1
1-5. Support Items	1-1
1-6. Special Service Information	1-2
2 DEALER PREPARATION	2-1
2-1. General	2-1
2-2. Battery Activation	2-1
2-3. Steering Wheel Installation	2-2
2-4. Service Checklist	2-2
3 PREVENTIVE MAINTENANCE	3-1
3-1. General	3-1
4 TROUBLESHOOTING	4-1
4-1. General	4-1
4-2. Electrical Troubleshooting	4-2
4-3. Power Steering Troubleshooting	4-2
4-4. Disassembly and Inspection	4-8
4-5. Assembly	4-22
5 CORRECTIVE MAINTENANCE	5-1
5-1. General	5-1
5-1A. Configuration changes	5-1
5-2. Major Components	5-1
5-3. Section Use	5-3
5-4. Hood, Grille and Side Panels (Models 1340, 1535, 1541, 1860, 1862, 1882 and 2082)	5-5
5-5. Hood, Grille and Side Panels (Models 1782 and 2182)	5-6
5-6. Radiator Removal (Models 1782 and 2182)	5-9
5-6A. Radiator Removal (Model 2182 Tractor Serial Number 816,536 and above)	5-10
5-7. Battery and Electrical Components (Model 1340)	5-10B
5-8. Battery and Electrical Components (Models 1535, 1541, 1860, 1862, 1882 and 2082)	5-12
5-9. Battery and Electrical Components (Model 1782)	5-14
5-10. Battery and Electrical Components (Model 2182)	5-16
5-11. Battery Tray and Heat Baffle (Model 1340)	5-19
5-12. Battery Tray and Air Baffles (Models 1535, 1541, 1860, 1862, 1882 and 2082)	5-20
5-12A. Battery Tray and Heat Baffle (Model 1882 [Tractor Serial Number 811,672 and above] and Model 2082 [Tractor Serial Number 811,672 and above])	5-21
5-12B. Battery Tray and Heat Baffle (Model 1541 [Tractor Serial Number 811,672 and above])	5-21B
5-13. Electrical System (Models 1340, 1541, 1860, 1862, 1882 and 2082)	5-21C
5-14. Electrical System (Model 1535)	5-23

Section/paragraph	Page
5-15. Electrical System (Models 1782 and 2182)	5-25
5-16. PTO Clutch (Model 1340)	5-28
5-17. PTO Clutch (Models 1535, 1541, 1860, 1862, 1882 and 2082)	5-29
5-18. PTO Clutch and Clutch Breakdown (Models 1782 and 2182)	5-30
5-19. Front Wheel (All Models)	5-31
5-20. Rear Wheel (All Models)	5-32
5-21. Front Axle and Connections (Models 1340, 1535, 1541 and 1860)	5-32
5-22. Front Axle and Connections – Power Steering Cylinder and Hydraulic Lines (Model 1862)	5-35
5-23. Front Axle and Connections – Power Steering Cylinder and Hydraulic Lines	5-39
(Models 1782, 1882, 2082 and 2182)	
5-24. Seat and Track Assembly (Models 1340, 1541, 1782, 1860, 1862, 1882, 2082 and 2182) ..	5-42
5-25. Seat and Support (Model 1535)	5-44
5-26. Fenders and Foot Rest (Models 1340, 1535, 1541, 1860 and 1862)	5-46
5-27. Fenders and Foot Rest (Models 1782, 1882, 2082 and 2182)	5-48
5-28. Pedestal, Instrument Panel and Engine Controls (Models 1340, 1535, 1541, 1860,	5-50
1862, 1882 and 2082)	
5-29. Pedestal, Instrument Panel and Engine Controls (Models 1782 and 2182)	5-51
5-30. Upper Steering (All Models)	5-52
5-31. Lower Steering (Models 1340, 1535, 1541 and 1860)	5-55
5-32. Steering Mounting, Power Steering Cylinder and Hydraulic Lines	5-57
(Models 1782, 1882, 2082 and 2182)	
5-33. Power Steering Box Assembly (Models 1782, 1862, 1882, 2082 and 2182)	5-60
5-34. Steering Mounting (Model 1862)	5-68
5-35. Power Steering Hydraulics (Models 1782, 1862, 1882, 2082 and 2182)	5-69
5-36. Hydraulic Lift Controls (Model 1541)	5-71
5-36A. Hydraulic Lift Controls (Model 1541 [Tractor Serial Number 816,509 and above])	5-75
5-37. Hydraulic Lift Controls (Models 1782, 1862, 1882, 2082 and 2182)	5-75D
5-38. Implement Lift Handle (Models 1340, 1535 and 1860)	5-79
5-39. Implement Lift and Hydraulic Cylinder (Models 1541 and 1862)	5-80
5-40. Implement Lift and Hydraulic Cylinder (Models 1782, 1882, 2082 and 2182)	5-83
5-41. Brakes and Connections (Models 1340, 1541, 1860 and 1862)	5-86
5-42. Brakes and Connections (Model 1535)	5-88
5-43. Brakes and Connections (Models 1782, 1882, 2082 and 2182)	5-90
5-44. Brake Caliper Assembly (All Models)	5-93
5-45. Fuel Tank (Models 1340, 1535, 1541, 1860, 1862, 1882, 2082 and 2182)	5-94
5-46. Fuel Tank (Model 1782)	5-96
5-46A. Fuel Pump (Models 1535, 1541, 1862, 1882 and 2082 [Tractor Serial Number	5-98
811,501 and above])	
5-47. Transmission Controls (Models 1340, 1541, 1782, 1860, 1862, 1882, 2082 and 2182)	5-98A
5-48. Drive Line (Models 1340, 1541 [Tractor Serial Numbers 800,000 through 800,349	5-100
and 800,534 and above], 1860 [Tractor Serial Numbers 800,000 through 800,461 and 800,596 and above] and 1862)	
5-49. Drive Line (Models 1541 [Tractor Serial Numbers 800,350 through 800,533]	5-103
and 1860 [Tractor Serial Numbers 800,462 through 800,595])	
5-50. Drive Line (Models 1782, 1882, 2082 and 2182)	5-105
5-51. Rear Axle Carrier (All Models)	5-107
5-52. Transmission – Differential (All Models except Model 1541 [Tractor Serial	5-110
Number 816,509 and above])	
5-52A. Transmission – Differential (Model 1541 [Tractor Serial Number 816,509 and above])	5-111A
5-52B. Charge Pump and Implement Relief Valve Pressure Check (Models 1340, 1541 [Tractor ..	5-111C
Serial Number 816,508 and below], 1782, 1860, 1862, 1882, 2082 and 2182)	
5-53. Hydrostatic Transmission (Models 1340 and 1860)	5-112

Section/paragraph	Page
5-54. Hydrostatic Transmission (Models 1541 [Tractor Serial Numbers 816,508 through 800,000] and 1862)	5-117
5-54A. Hydrostatic Transmission (Model 1541 [Tractor Serial Number 816,509 and above])	5-122
5-55. Hydrostatic Transmission (Models 1782, 1882, 2082 and 2182)	5-122E
5-56. Transmission – Rear Transaxle And Adapter Housings (Models 1340, 1541, 1860 and 1862)	5-127
5-57. Transmission – Rear Transaxle And Adapter Housings (Models 1782, 1882, 2082 and 2182)	5-130
5-58. Clutch and Controls (Model 1535)	5-134
5-59. Creeper Drive (Model 1535)	5-137
5-60. Transmission – Gear Shift (Model 1535)	5-139
5-61. Transmission – Reduction Housing (Model 1535)	5-141
5-62. Transmission – Rear Housing and Gear Housing (Model 1535)	5-143
5-63. Muffler and Air Duct (Model 1340)	5-148
5-64. Engine Mounting, Muffler and Air Duct (Models 1535, 1541, 1860, 1862, 1882 and 2082)	5-148
5-65. Engine Removal (Models 1340, 1535, 1541, 1860, 1862, 1882 and 2082)	5-150
5-66. Engine Removal (Models 1782 and 2182)	5-151
5-66A. Oil Filter (Models 1535, 1541, 1862, 1882 and 2082)	5-151A
5-67. Engine Mounting (Model 1340)	5-152
5-68. Frame (All Models)	5-153
5-69. 38 Inch Mower Deck Assembly (Model 190-328)	5-156
5-70. 46 Inch Mower Deck Assembly (Model 190-336)	5-161
5-71. 42 Inch Rear PTO Mower (Model 190-349)	5-166
5-72. 38 Inch Mower Deck Assembly (Model 190-357)	5-169
5-73. 44 Inch Mower Deck Assembly (Model 190-358)	5-175
5-74. 50 Inch Mower Deck Assembly (Model 190-359)	5-179
5-75. 60 Inch Mower Deck Assembly (Model 190-374)	5-184
6 ADJUSTMENTS	6-1
6-1. General	6-1
6-2. PTO Air Gap (All Models)	6-1
6-3. Throttle Adjustment (Models 1340, 1535, 1541, 1860, 1862, 1882, 2082 and 2182)	6-1
6-4. Lower Steering Adjustment (Models 1340, 1535, 1541 and 1860)	6-2
6-5. Brake Adjustment (All Models)	6-3
6-6. Cross Shaft Friction Adjustment (Models 1340, 1541, 1860, 1862, 1882, 2082 and 2182)	6-5
6-7. Cam Pivot Bracket Adjustment (Models 1340, 1541, 1860, 1862, 1882, 2082 and 2182)	6-5
6-8. Gear Drive Alignment (Model 1535)	6-5
6-9. Charge Pump Relief Valve Adjustment (Models 1340, 1541 [Tractor Serial Numbers 816,508 and below], 1782, 1860, 1862, 1882, 2082 and 2182)	6-6
6-10. Implement Lift Relief Valve Adjustment (Models 1340, 1541 [Tractor Serial Numbers 816,508 and below], 1782, 1860, 1862, 1882, 2082 and 2182)	6-6
7 ATTACHMENTS	7-1
7-1. General	7-1
7-2. Installation of Rear PTO Kit Model Number 433 and 3-Point Hitch Kit Model Number 383	7-1
7-3. Installation of 3-Point Hitch Kit (Model 383)	7-15
7-4. Installation of 3-Point Hitch Kit (Models 388 and 389)	7-17
7-5. Installation of Front Hydraulic Outlet Kit (Part Number 759-3493)	7-28

Section/paragraph	Page
7-5. Installation of Front Hydraulic Outlet Kit (Part Number 759-3493)	7-28
Appendix A Related Service Manuals	A-1
Appendix B Special Tools and Equipment	B-1
Appendix C Bulk Service Items	C-1
Appendix D Mandatory Replacement Parts	D-1
Appendix E Contingency Replacement Parts	E-1
Appendix F Electrical Components – Service Methods and Equipment	F-1
Appendix G Electrical Schematics and Testing	G-1
Appendix H Torque Data	H-1
Appendix I Mower Deck Belt Information	I-1