



[DealerNation@aol.com](mailto:DealerNation@aol.com)

# CONTENTS

	Page
<b>SAFE WORK RULES</b> .....	VI
<b>STANDARD TORQUE DATA FOR NUTS AND BOLTS – FOOT POUNDS</b> .....	VIII
<b>STANDARD TORQUE DATA FOR NUTS AND BOLTS – NEWTON METERS</b> .....	IX
<b>METRIC CONVERSION TABLE</b> .....	X
<b>SPECIAL SERVICE TOOLS REQUIRED</b> .....	XII
<b>ENGINE MAINTENANCE INTERVALS</b>	
Every Use .....	1
Every 25 Hours of Operation .....	1
Every 50 Hours of Operation .....	2
Engine Storage .....	3
<b>ENGINE APPLICATION CHART</b> .....	4
<b>ENGINE SPECIFICATIONS</b> .....	5
<b>TORQUE SPECIFICATIONS</b> .....	8
<b>COMPRESSION CHECK</b> .....	9
<b>ENGINE</b>	
Horizontal Crankshaft Engines .....	9
Disassembly .....	9
Vertical Crankshaft .....	12
Disassembly .....	12
Inspection and Repair .....	16
Crankcase .....	16
Piston, Rings and Rod .....	18
Crankshaft .....	21
Valves .....	21
Camshaft and Gear .....	22
Crankcase Breather Assembly .....	22
Assembly .....	23
<b>FUEL SYSTEM</b>	
General Information .....	30
Carburetor Application .....	30
Specifications .....	32
Pulsa—Jet I—II—III and Vacu—Jet	
Removal .....	33
Disassembly .....	33
Inspection and Repair .....	35
Assembly .....	37

Installation .....	40
Adjustment .....	41
<b>Flo—Jet I</b>	
Removal .....	41
Disassembly .....	42
Inspection and Repair .....	42
Assembly .....	43
Installation .....	44
Adjustment .....	44
<b>Flo—Jet II</b>	
Removal .....	45
Disassembly .....	45
Inspection and Repair .....	45
Assembly .....	47
Installation .....	48
Adjustment .....	48
<b>GOVERNOR</b>	
General Information .....	49
Air Vane Governor Adjustment .....	49
Air Vane Governor Spring Installation .....	49
Mechanical Governor Adjustment	
Governor Shaft Adjustment .....	50
Governed Speed Adjustment .....	50
<b>ELECTRICAL SYSTEM</b>	
Spark Plug .....	51
Ignition Breaker Points	
Removal .....	51
Inspection .....	52
Installation and Adjustment .....	52
Armature Assembly	
Replacement .....	53
Air Gap Adjustment .....	54
Alternator	
General Description .....	55
Dual Circuit Alternators .....	55
Single Circuit Alternators .....	56
Dual Circuit Alternators .....	56
Testing the Charging Circuit .....	56
Testing the Accessory Circuit .....	58
Single Circuit Alternators .....	59
Testing the Charging Circuit .....	59
Diode Replacement .....	60
Electrical Starters — 170,000 — 190,000 — 191,000 and 253,000 Model Series Engines	
12 Volt DC Starters	
Performance Check .....	61
110 Volt A.C. Rectified Starters	
Performance Check .....	61

Starter Motor Drive	
Performance Check . . . . .	62
Disassembly . . . . .	63
Inspection . . . . .	63
Assembly . . . . .	66
110 Volt A.C. Rectifier	
Performance Check and Replacement . . . . .	67
<b>Electric Starter, 92,000 Model Series Engines</b>	
General Information . . . . .	68
Starter Motor Drive	
Performance Check . . . . .	68
Starter Motor Clutch	
Performance Check . . . . .	69
Starter Motor	
Performance Check . . . . .	70
Disassembly . . . . .	70
Inspection . . . . .	71
Assembly . . . . .	72
<b>Nickel Cadmium Battery</b>	
General Information . . . . .	74
Battery	
Performance Check . . . . .	74
Battery Charger	
Performance Check . . . . .	75
<b>RECOIL STARTER</b>	
Rewind Mechanism	
Removal and Disassembly . . . . .	75
Inspection and Repair . . . . .	76
Assembly and Installation . . . . .	76
Clutch	
Removal and Disassembly . . . . .	78
Inspection and Repair . . . . .	78
Assembly and Installation . . . . .	78
<b>VERTICAL PULL STARTER</b>	
Rewind Mechanism	
Removal and Disassembly . . . . .	79
Assembly . . . . .	81
Installation and Adjustment . . . . .	83