

TABLE OF CONTENTS

ITEMS OF SPECIAL IMPORTANCE FOR THE OWNER	4	Starting	10	Lubrication Chart	16 and 17
Registered Service Card	4	How to Shift and Control Speed	11	Motors Dropped Overboard (Not Running)	18
Registration and Insurance	4	Stopping	11	Motors Dropped Overboard (Running)	19
You are the Skipper	4	Reverse Operation	11	Motors Dropped Overboard (In Salt Water)	19
Spurious Parts	4	EASY OPERATION - SIMPLE ADJUSTMENTS	12	Prolonged Submersion (Fresh or Salt Water)	19
Where to Find Model and Serial Number	4	Remote Controls	12	Carbon Removal	19
SPECIFICATIONS	5	Tilt Tension Adjustment	12	Carburetor Low Speed Adjustment	19
HERE'S HOW TO INSTALL YOUR MOTOR	6	Emergency Starting	12	Cooling	20
TRANSOM AND MOTOR CUTOUT DIMENSIONS	6	Steering Tension Adjustment	12	Cleaning Fuel Filter	20
Proper Transom Height is Important	6	Carburetor Adjustment	12	Before Storing Your Motor	21
Securing Motor to Boat	7	TROUBLE CHECK LIST	13	After Storing - Before Using	21
Reverse Lock	7	TAKING CARE OF YOUR MOTOR	14	HOW TO GET PEAK PERFORMANCE	22
Motor Angle Adjustment	7	Freezing Temperatures	14	Propeller Selection	22
Proper Angle Adjustment	8	Spark Plug Recommendation and Replacement	14	Transom Height	22
Boat Trim	8	Removing Motor Cover	14	Angle Adjustment	22
HOW TO GET STARTED	9	Removing Propeller and Drive Pin Replacement	15	Carburetor Adjustment	22
What Gasoline and Oil to Use	9	Removing Motor From Boat	15	Gasoline	22
Break-In Procedure and Fuel Mixture - First 5 Hours	9	Care of Motor When Operated in Salt Water	15	Remote Control	22
Fuel Mixture - After First 5 Hours	9	External Finish	15	Clean Boat Hull	22
Fuel Connection	10	Gearcase Lubrication	16	ACCESSORIES	23 thru 26
				WARRANTY	Rear Covers