Fiat 124 Sport Spider - 1800


This Manual provides the information necessary for satisfactory operation and maintenance of your car.

We wish you pleasant motoring and trust the information provided will help to ensure the long life and safety of your car.

operation maintenance specifications

Appendix:

Catalytic Converter Version

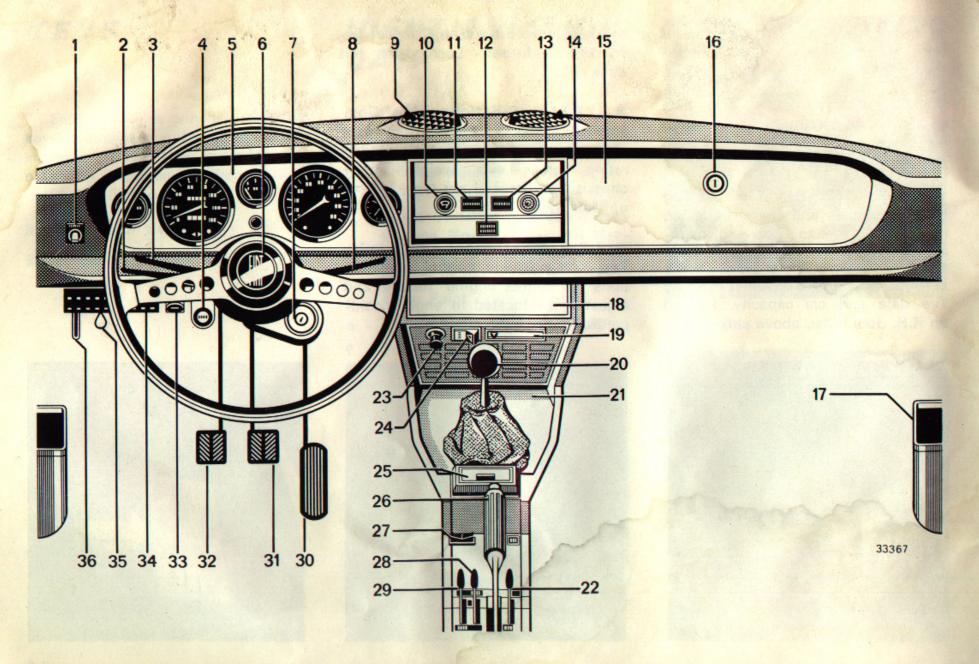

SUSPENSION AND STEERING

Front Suspension Steering **Articulation Caps**

Every 12 500 miles or whenever underbody inspections are carried out, check the condition of ball joint rubber caps.



If they are damaged, replace. The new caps should be packed with grassofiat MR 3 prior

to their installation.

At the same time inspect ball joints for excessive play. If evidence of looseness exists, replace the ball joint.

Proper joint maintenance is essential for car safety.

Front and Rear Suspensions

Every 12 500 miles



Check rubber mounts for proper efficiency and fasteners for tightness.

Front Wheel Bearings

Every 25 000 miles



Adjust bearings and lubricate with grassofiat MR 3.

TIRES

Every 300 miles or weekly

Check pressure with a gage (see page 52) not forgetting the spare wheel.

Make sure pressure is exactly the same in each pair of tires. In hot climates, do not reduce pressure as this would only increase tire temperature.

