QUICK REFERENCE GUIDE

To use, bend the manual back and match the desired section below against the black spot showing at the edge of these pages.



Specifications		A
Adjustment	Engine	В
	Chassis	C
Disassembly	Introduction	D
	Engine (Installed)	B
	Engine (Removed)	E
	Chassis	G
Maintenance & Theory	Engine	H
	Chassis	J
	Electrical	K
Troubleshooting	E A A A A A A A A A A A A A A A A A A A	
Appendix		M
Supplement		N
Index		P

Model Identification

KE175-D1



