







 



# TABLE OF CONTENTS



<b>GENERAL INFORMATION</b>	
	<b>GEN INFO 1</b>
<b>SPECIFICATIONS</b>	
	<b>SPEC 2</b>
<b>PERIODIC CHECKS AND ADJUSTMENTS</b>	
	<b>CHK ADJ 3</b>
<b>ENGINE</b>	
	<b>ENG 4</b>
<b>COOLING SYSTEM</b>	
	<b>COOL 5</b>
<b>CARBURETION</b>	
	<b>CARB 6</b>
<b>DRIVE TRAIN</b>	
	<b>DRIV 7</b>
<b>CHASSIS</b>	
	<b>CHAS 8</b>
<b>ELECTRICAL</b>	
	<b>ELEC 9</b>
<b>TROUBLESHOOTING</b>	<b>?</b>
	<b>TRBL SHTG 10</b>

## FRONT CARRIER, FRONT BUMPER AND FRONT FENDER

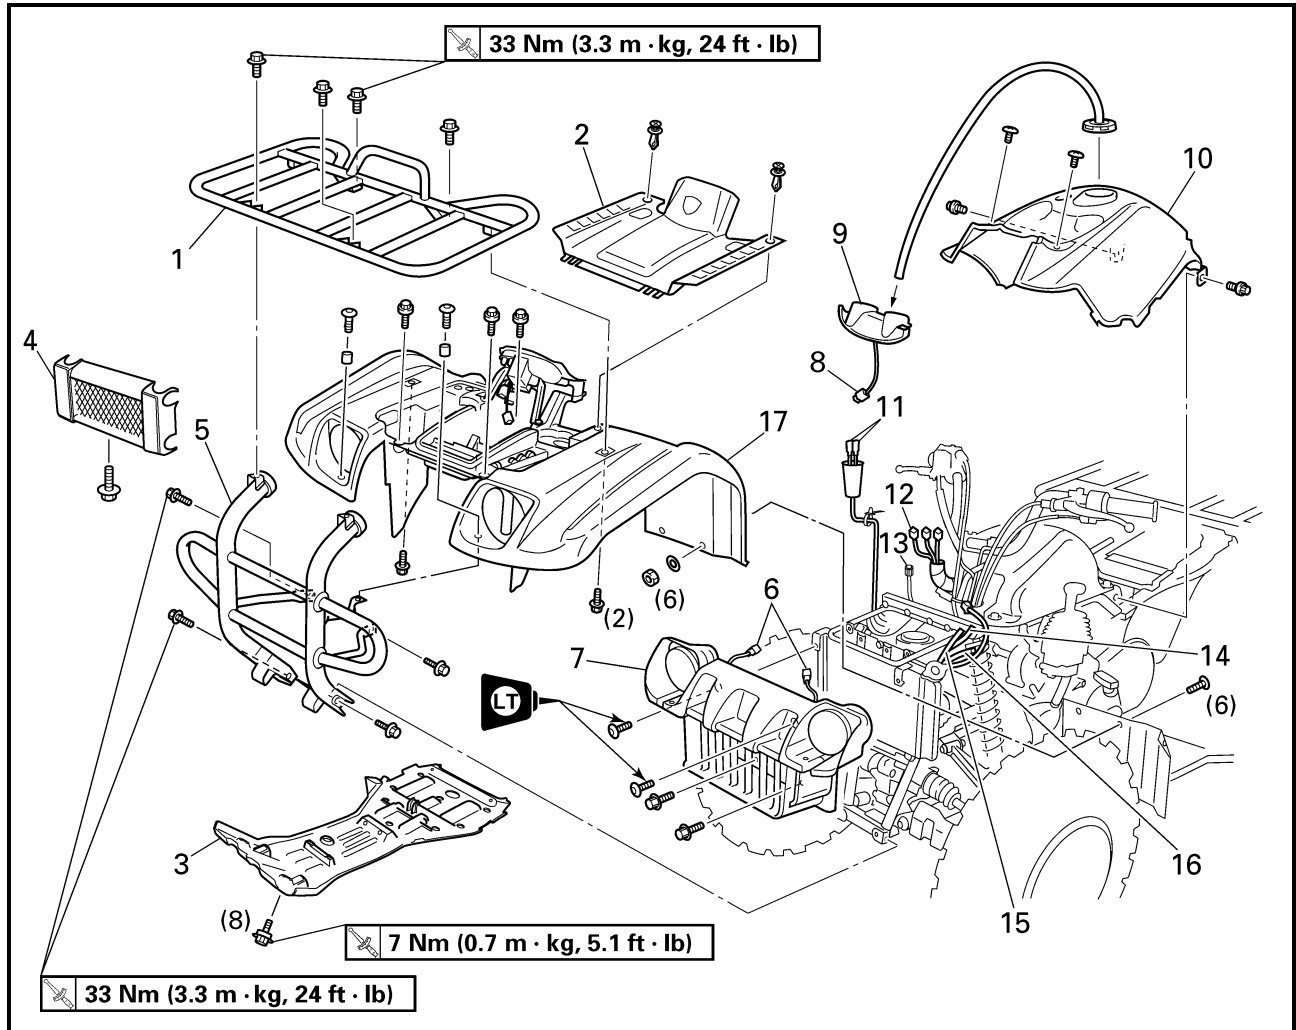

Order	Job name/Part name	Q'ty	Remarks
	<b>Removing the front carrier, front bumper and front fender</b>		Remove the parts in the order below.
	Seat and fuel tank side panels		Refer to "SEAT AND SIDE PANELS".
1	Front carrier	1	
2	Front fender panel	1	
3	Engine skid plate	1	
4	Front bumper cover	1	
5	Front bumper	1	
6	Headlight coupler	2	Disconnect.
7	Front grill	1	
8	Main switch coupler	1	Disconnect.
9	Handlebar cover	1	
10	Fuel tank cover	1	

# ADJUSTING THE VALVE CLEARANCE

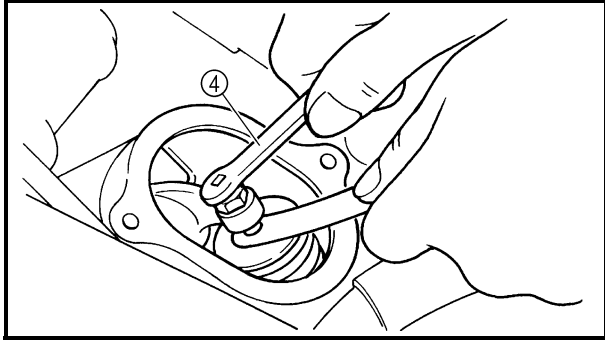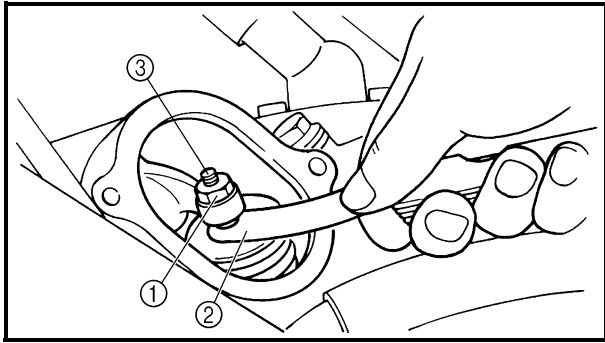

**8.Adjust:**

- Valve clearance

\*\*\*\*\*

**Adjustment steps:**

- Loosen the locknut ①.
- Insert a feeler gauge ② between the adjuster end and the valve end.
- Turn the adjuster ③ clockwise or counterclockwise with the valve adjusting tool ④ until the proper clearance is obtained.



**Tappet adjusting tool:**  
**P/N. YM-08035, 90890-01311**

- Hold the adjuster to prevent it from moving, and then tighten the locknut.



**Locknut:**  
**20 Nm (2.0 m • kg, 14 ft • lb)**

- Measure the valve clearance.
- If the clearance is incorrect, repeat the above steps until the proper clearance is obtained.


\*\*\*\*\*

**9.Install:**

- All removed parts

**NOTE:**

Install all removed parts in the reverse order of their disassembly. Note the following points.

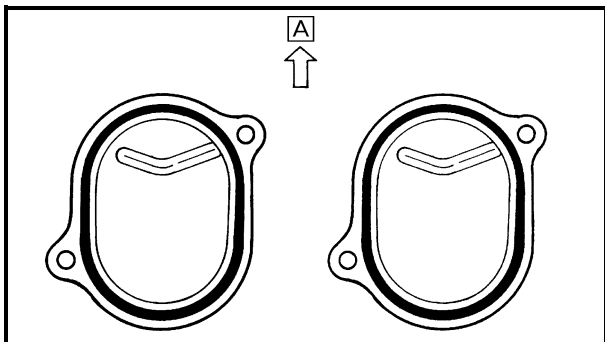

**10.Install:**

- Recoil starter



**10 Nm (1.0 m • kg, 7.2 ft • lb)**

- Spark plug

**18 Nm (1.8 m • kg, 13 ft • lb)**

- Tappet covers

**10 Nm (1.0 m • kg, 7.2 ft • lb)**

**NOTE:**

Install the tappet covers with the ridge facing up **A**.