

## FOREWORD

This manual contains an introductory description on the SUZUKI LT-F400/400F and procedures for its inspection, service, and overhaul of its main components.

Other information considered as generally known is not included.

Read the GENERAL INFORMATION section to familiarize yourself with the vehicle and its maintenance. Use this section as well as other sections as a guide for proper inspection and service.

This manual will help you know the vehicle better so that you can assure your customers of fast and reliable service.

\* This manual has been prepared on the basis of the latest specifications at the time of publication. If modifications have been made since then, differences may exist between the content of this manual and the actual vehicle.

\* Illustrations in this manual are used to show the basic principles of operation and work procedures. They may not represent the actual vehicle exactly in detail.

\* This manual is written for persons who have enough knowledge, skills and tools, including special tools, for servicing SUZUKI vehicles. If you do not have the proper knowledge and tools, ask your authorized SUZUKI motorcycle dealer to help you.

### **⚠ WARNING**

Inexperienced mechanics or mechanics without the proper tools and equipment may not be able to properly perform the services described in this manual. Improper repair may result in injury to the mechanic and may render the vehicle unsafe for the rider.

## GROUP INDEX

|   |          |
|---|----------|
| <b>GENERAL INFORMATION</b>                | <b>1</b> |
| <b>PERIODIC MAINTENANCE</b>               | <b>2</b> |
| <b>ENGINE</b>                             | <b>3</b> |
| <b>DRIVE TRAIN</b>                        | <b>4</b> |
| <b>FUEL SYSTEM</b>                        | <b>5</b> |
| <b>OIL COOLING AND LUBRICATION SYSTEM</b> | <b>6</b> |
| <b>CHASSIS</b>                            | <b>7</b> |
| <b>ELECTRICAL SYSTEM</b>                  | <b>8</b> |
| <b>SERVICING INFORMATION</b>              | <b>9</b> |