

WORKSHOP MANUAL

**US VERSION
RIGHT HAND MODEL
EXP UBS**

ISUZU

PubNo. RV99_02-01.E

WORKSHOP MANUAL

1998/1999

UBS

2000

UBS

2002

UBS

THIS MALUAL INCLUDES THE FOLLOWING SECTIONS:

SECTION No.	CONTRNTS
0A	General Information
0B	Maintenance and Lubrication

[PAGE BACK](#)

[PAGE NEXT](#)

THIS MALUAL INCLUDES THE FOLLOWING SECTIONS:

SECTION No.	CONTRNTS
00	SERVICE INFORMATION
1A	HEATING AND VENTILATION
1B	AIR CONDITIONING
1D	COMPRESSOR OVERHAUL

[PAGE BACK](#)

[PAGE NEXT](#)

THIS MALUAL INCLUDES THE FOLLOWING SECTIONS:

SECTION No.	CONTRNTS
00	SERVICE INFORMATION
2A	FRONT END ALIGNMENT

THIS MALUAL INCLUDES THE FOLLOWING SECTIONS:

SECTION No.	CONTRNTS
3C	FRONT SUSPENSION
3D	REAR SUSPENSION; COIL SPRING
3E	WHEELS AND TIRES

THIS MALUAL INCLUDES THE FOLLOWING SECTIONS:

SECTION No.	CONTRNTS
4A1	DIFFERENTIAL (FRONT)
4A2A	DIFFERENTIAL (Rear 220mm)
4A2B	DIFFERENTIAL (REAR 244mm)
4B1	DRIVELINE CONTROL SYSTEM (SHIFT ON THE FLY)
4B2	DRIVELINE CONTROL SYSTEM (TOD)
4C	DRIVE SHAFT SYSTEM
4D1	TRANSFER CASE (STANDARD TYPE)
4D2	TRANSFER CASE (TOD)

THIS MALUAL INCLUDES THE FOLLOWING SECTIONS:

SECTION No.	CONTRNTS
5A	BRAKE CONTROL SYSTEM
5B	ANTI-LOCK BRAKE SYSTEM
5C	POWER ASSISTED BRAKE SYSTEM
5D	PARKING BRAKES

THIS MALUAL INCLUDES THE FOLLOWING SECTIONS:

6VD1 / 6VE1

SECTION No.	CONTRNTS
6A	ENGINE MECHANICAL
6B	ENGINE COOLING
6C	ENGINE FUEL
6D1	ENGINE ELECTRICAL
6D2	IGNITION SYSTEM
6D3	STARTING AND CHARGING SYSTEM
6E	ENGINE DRIVEABILITY AND EMISSIONS
6F	ENGINE EXHAUST
6G	ENGINE LUBRICATION
6H	ENGINE SPEED CONTROL SYSTEM
6J	INDUCTION

4JG2

SECTION No.	CONTRNTS
00	SERVICE INFORMATION
6A	ENGINE MECHANICAL
6A2	4JG2-NA / 4JG2-TURBO ENGINE
6B	ENGINE COOLING
6C	FUEL SYSTEM
6D	ENGINE ELECTRICAL
6E	-
6F	EXHAUST
6G	-

4JX1

SECTION No.	CONTRNTS
6A	ENGINE MECHANICAL
6B	ENGINE COOLING
6C	ENGINE FUEL
6D	ENGINE ELECTRICAL
6E	ENGINE DRIVEABILITY AND EMISSIONS
6F	ENGINE EXHAUST
6G	ENGINE LUBRICATION
6H	ENGINE SPEED CONTROL
6J	INDUCTION