

1975

MAZDA RX-3

WORKSHOP MANUAL

Year	1950	1951	1952
Population	1,000,000	1,050,000	1,100,000
Area	100,000 sq. mi.	100,000 sq. mi.	100,000 sq. mi.
Population Density	10 per sq. mi.	10.5 per sq. mi.	11 per sq. mi.
Area per Person	100 sq. ft.	95 sq. ft.	90 sq. ft.
Population per Acre	227.2	237.3	247.4
Area per Acre	43.56 sq. ft.	43.56 sq. ft.	43.56 sq. ft.
Population per Acre	5.19	5.42	5.66
Area per Person	18.7	18.3	17.8
Population per Acre	5.34	5.46	5.58
Area per Person	18.35	17.95	17.55
Population per Acre	5.45	5.57	5.69
Area per Person	18.18	17.78	17.38
Population per Acre	5.56	5.68	5.80
Area per Person	17.81	17.41	17.01
Population per Acre	5.67	5.79	5.91
Area per Person	17.44	17.04	16.64
Population per Acre	5.78	5.90	6.02
Area per Person	17.07	16.67	16.27
Population per Acre	5.89	6.01	6.13
Area per Person	16.70	16.30	15.90
Population per Acre	6.00	6.12	6.24
Area per Person	16.33	15.93	15.53
Population per Acre	6.11	6.23	6.35
Area per Person	15.96	15.56	15.16
Population per Acre	6.22	6.34	6.46
Area per Person	15.59	15.19	14.79
Population per Acre	6.33	6.45	6.57
Area per Person	15.22	14.82	14.42
Population per Acre	6.44	6.56	6.68
Area per Person	14.85	14.45	14.05
Population per Acre	6.55	6.67	6.79
Area per Person	14.48	14.08	13.68
Population per Acre	6.66	6.78	6.90
Area per Person	14.11	13.71	13.31
Population per Acre	6.77	6.89	7.01
Area per Person	13.74	13.34	12.94
Population per Acre	6.88	7.00	7.12
Area per Person	13.37	12.97	12.57
Population per Acre	6.99	7.11	7.23
Area per Person	13.00	12.60	12.20
Population per Acre	7.10	7.22	7.34
Area per Person	12.63	12.23	11.83
Population per Acre	7.21	7.33	7.45
Area per Person	12.26	11.86	11.46
Population per Acre	7.32	7.44	7.56
Area per Person	11.89	11.49	11.09
Population per Acre	7.43	7.55	7.67
Area per Person	11.52	11.12	10.72
Population per Acre	7.54	7.66	7.78
Area per Person	11.15	10.75	10.35
Population per Acre	7.65	7.77	7.89
Area per Person	10.78	10.38	9.98
Population per Acre	7.76	7.88	8.00
Area per Person	10.41	10.01	9.61
Population per Acre	7.87	7.99	8.11
Area per Person	10.04	9.64	9.24
Population per Acre	7.98	8.10	8.22
Area per Person	9.67	9.27	8.87
Population per Acre	8.09	8.21	8.33
Area per Person	9.30	8.90	8.50
Population per Acre	8.20	8.32	8.44
Area per Person	8.93	8.53	8.13
Population per Acre	8.31	8.43	8.55
Area per Person	8.56	8.16	7.76
Population per Acre	8.42	8.54	8.66
Area per Person	8.19	7.79	7.39
Population per Acre	8.53	8.65	8.77
Area per Person	7.82	7.42	7.02
Population per Acre	8.64	8.76	8.88
Area per Person	7.45	7.05	6.65
Population per Acre	8.75	8.87	8.99
Area per Person	7.08	6.68	6.28
Population per Acre	8.86	8.98	9.10
Area per Person	6.71	6.31	5.91
Population per Acre	8.97	9.09	9.21
Area per Person	6.34	5.94	5.54
Population per Acre	9.08	9.20	9.32
Area per Person	5.97	5.57	5.17
Population per Acre	9.19	9.31	9.43
Area per Person	5.60	5.20	4.80
Population per Acre	9.30	9.42	9.54
Area per Person	5.23	4.83	4.43
Population per Acre	9.41	9.53	9.65
Area per Person	4.86	4.46	4.06
Population per Acre	9.52	9.64	9.76
Area per Person	4.49	4.09	3.69
Population per Acre	9.63	9.75	9.87
Area per Person	4.12	3.72	3.32
Population per Acre	9.74	9.86	9.98
Area per Person	3.75	3.35	2.95
Population per Acre	9.85	9.97	10.09
Area per Person	3.38	2.98	2.58
Population per Acre	9.96	10.08	10.20
Area per Person	3.01	2.61	2.21
Population per Acre	10.07	10.19	10.31
Area per Person	2.64	2.24	1.84
Population per Acre	10.18	10.30	10.42
Area per Person	2.27	1.87	1.47
Population per Acre	10.29	10.41	10.53
Area per Person	1.90	1.50	1.10
Population per Acre	10.40	10.52	10.64
Area per Person	1.53	1.13	0.73
Population per Acre	10.51	10.63	10.75
Area per Person	1.16	0.76	0.36
Population per Acre	10.62	10.74	10.86
Area per Person	0.79	0.39	0.00
Population per Acre	10.73	10.85	10.97
Area per Person	0.42	0.02	0.00
Population per Acre	10.84	10.96	11.08
Area per Person	0.05	0.00	0.00
Population per Acre	10.95	11.07	11.19
Area per Person	0.00	0.00	0.00

1975 MAZDA RX-3 WORKSHOP MANUAL

FOREWORD

This workshop manual was prepared as reference material for the service personnel of authorized Mazda dealers to enable them to correctly carry out the task of delivering services and maintenance on Mazda vehicles.

In order to ensure that the customers are satisfied with Mazda products, proper servicing and maintenance must be provided. For this purpose, the service personnel must fully understand the contents of this workshop manual and at the same time, are recommended to keep the manual in a place where reference can readily be made.

The information, photographs, drawings and specifications entered in this manual were the best available at the time of printing this manual. All alterations to this manual occurring as the result of modifications will be notified by the issuance of Service Informations or supplementary volumes. It is, therefore, requested that the manual be kept up to date by carefully maintaining a follow-up of these materials.

Toyo Kogyo reserves the right to alter the specifications and contents of this manual without any obligation and advance notice.

All rights reserved. No part of this book may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying, recording, or by any informational storage and retrieval system, without permission in writing.

TOYO KOGYO CO., LTD.
HIROSHIMA, JAPAN

SECTION INDEX	
Name	Section
Engine	1
Emission Control System	1A
Lubricating System	2
Cooling System	3
Fuel System	4
Electrical System (Engine)	5
Clutch	6
Transmission	7
Automatic Transmission	7A
Propeller Shaft	8
Rear Axle	9
Steering	10
Brakes	11
Wheels and Tires	12
Suspension	13
Suspension (Rotary Wagon)	13A
Body	14
Body (Rotary Wagon)	14A
Electrical System (Body)	15
Technical Data	T

© 1974 TOYO KOGYO CO., LTD.
PRINTED IN JAPAN DEC., '74
MAZDA ROTARY ENGINE;
LICENSE NSU-WANKEL
1006410

[Faint, mostly illegible text]

[Faint, mostly illegible text]

[Faint, mostly illegible text]

[Faint, mostly illegible text]

[Faint, mostly illegible text]

[Faint, illegible text]


SECRET
1947
1947/10/27
1947

SECRET
1947
1947/10/27
1947

SECRET
1947
1947/10/27
1947

ENGINE

1-A. ENGINE DISASSEMBLY.....	1 : 4
1-B. INSPECTION AND REPAIR.....	1 : 8
1-B-1. Inspecting Front, Intermediate and Rear Housing.....	1 : 8
1-B-2. Inspecting Front Stationary Gear and Main Bearing.....	1 : 9
1-B-3. Inspecting Rear Stationary Gear and Main Bearing.....	1 : 10
1-B-4. Inspecting Rotor Housing.....	1 : 10
1-B-5. Inspecting Rotor.....	1 : 10
1-B-6. Inspecting Rotor Bearing.....	1 : 11
1-B-7. Inspecting Rotor Oil Seal and Spring.....	1 : 11
1-B-8. Inspecting Apex Seal, Side Piece and Spring.....	1 : 12
1-B-9. Inspecting Side Seal and Spring.....	1 : 13
1-B-10. Inspecting Corner Seal and Spring.....	1 : 13
1-B-11. Inspecting Eccentric Shaft.....	1 : 14
1-B-12. Inspecting Needle Bearing.....	1 : 15
1-B-13. Inspecting Eccentric Shaft Front and Rear Oil Seals.....	1 : 15
1-C. ENGINE ASSEMBLY.....	1 : 16
1-C-1. Installing Oil Seal.....	1 : 16
1-C-2. Installing Each Seal.....	1 : 16
1-C-3. Installing Front Rotor.....	1 : 17
1-C-4. Installing Eccentric Shaft.....	1 : 17
1-C-5. Installing Front Rotor Housing.....	1 : 17
1-C-6. Installing Intermediate Housing.....	1 : 18
1-C-7. Installing Rear Rotor and Rear Rotor Housing.....	1 : 19
1-C-8. Installing Rear Housing.....	1 : 19
1-C-9. Tightening Tension Bolts.....	1 : 19
1-C-10. Installing Flywheel or Counter Weight.....	1 : 19
1-C-11. Adjusting Eccentric Shaft End Play.....	1 : 20
1-C-12. Installing Front Cover and Eccentric Shaft Pulley.....	1 : 21
1-C-13. Installing Oil Strainer and Oil Pan.....	1 : 22
1-C-14. Installing Water Pump.....	1 : 22
1-C-15. Installing Distributor.....	1 : 23
1-C-16. Installing Exhaust Manifold.....	1 : 23
1-C-17. Installing Intake Manifold.....	1 : 23
1-C-18. Installing Alternator and Air Pump.....	1 : 23
SPECIAL TOOLS.....	1 : 24

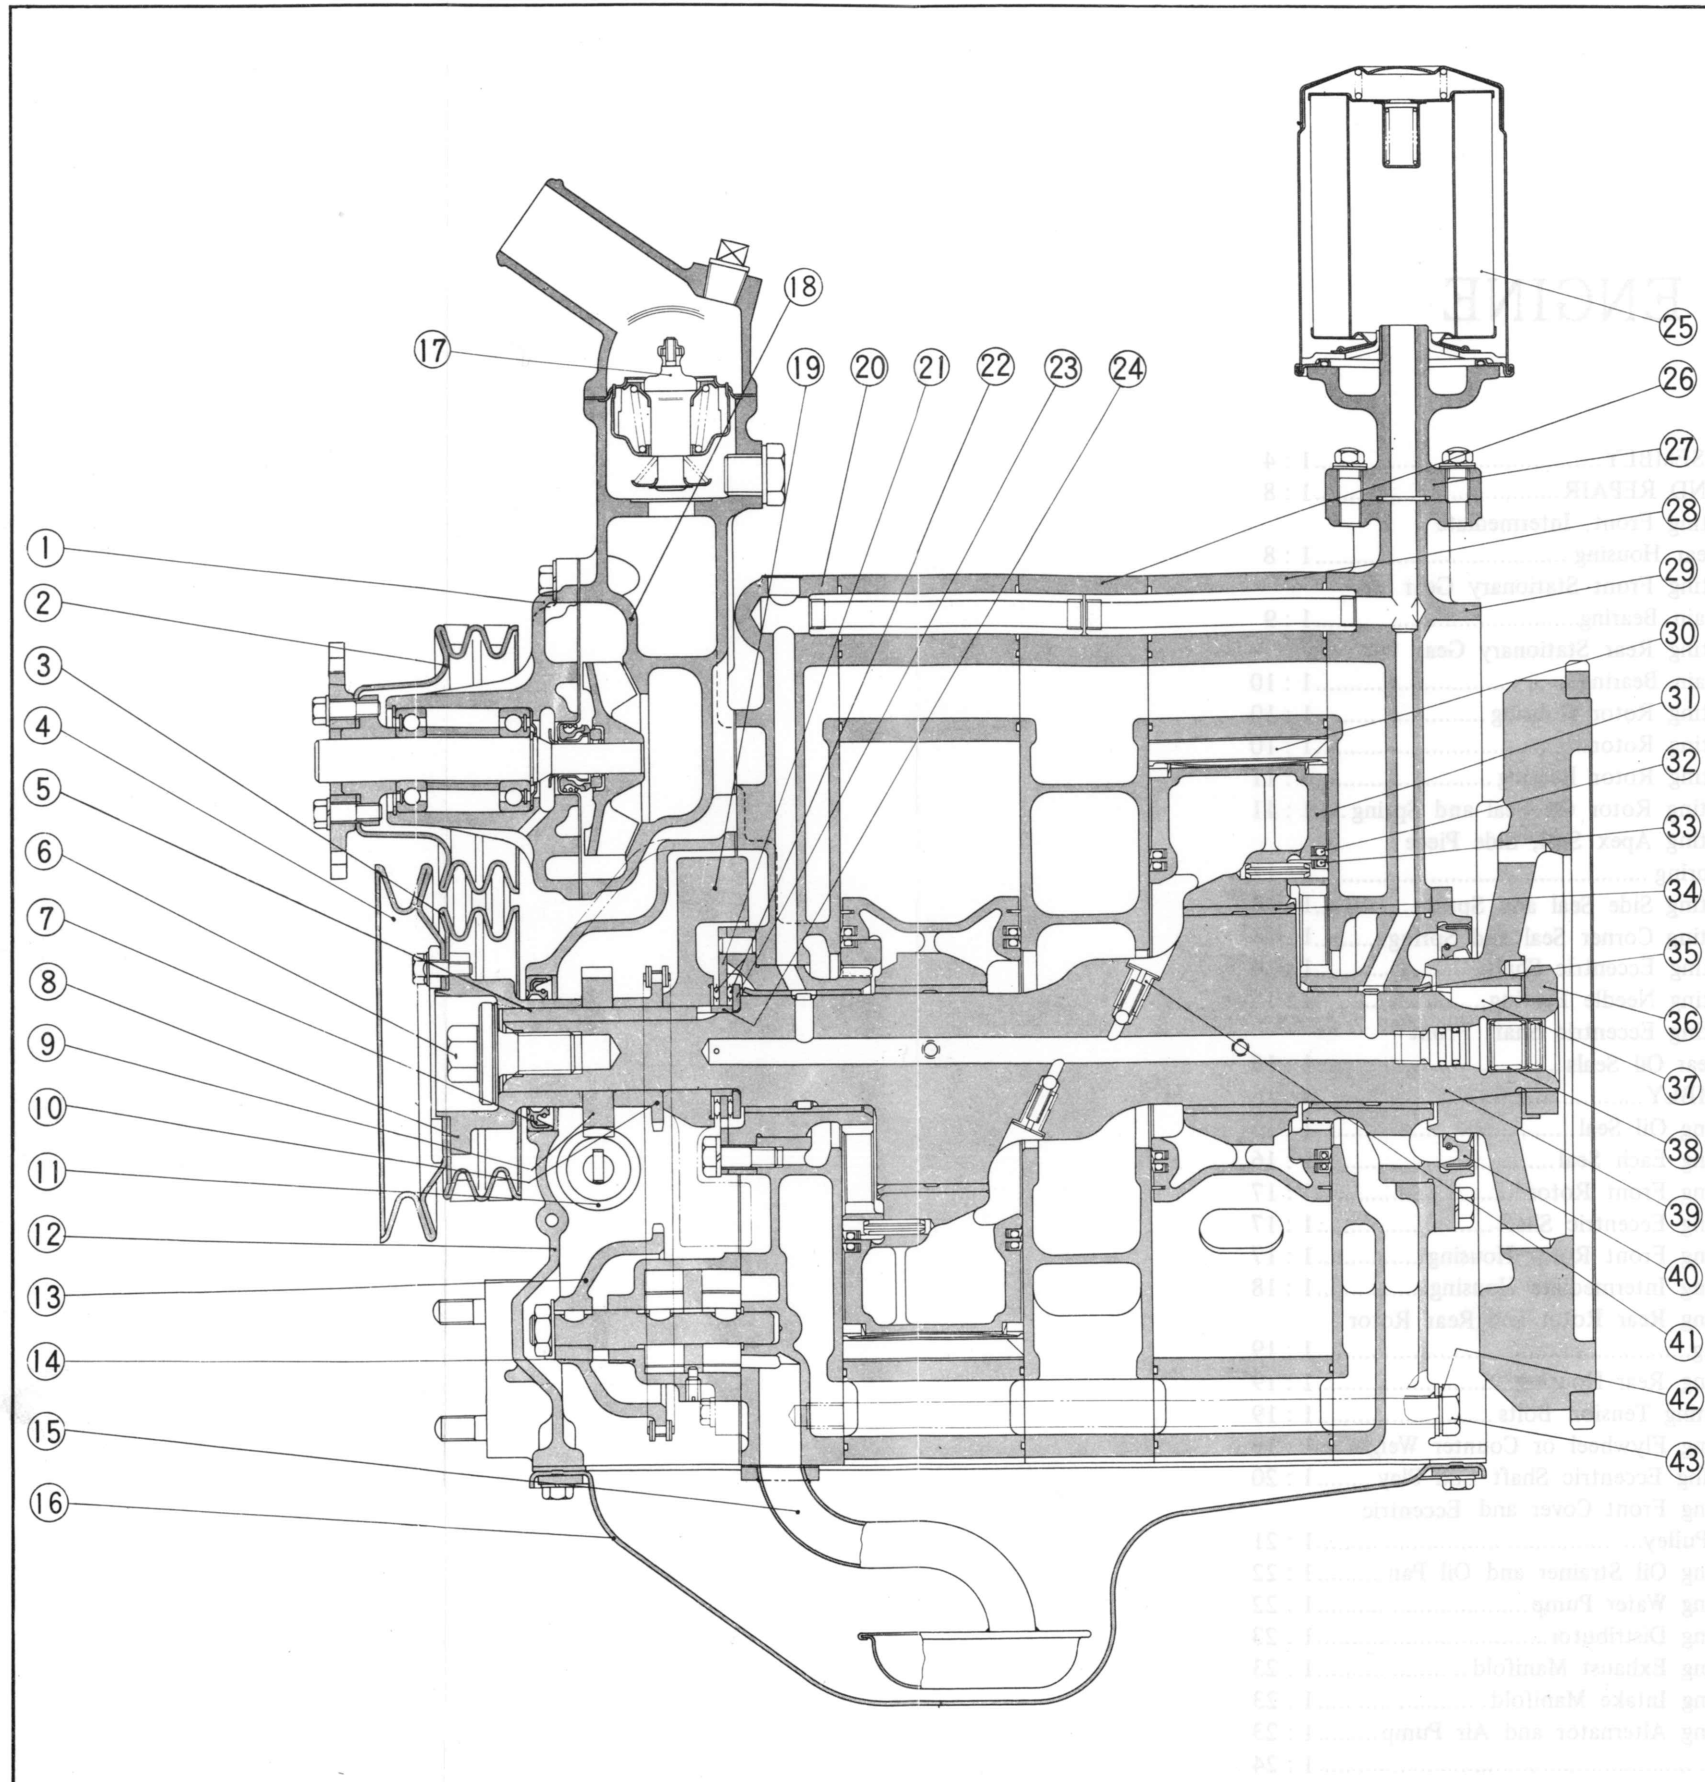

1. Water pump body
2. Water pump pulley
3. Eccentric shaft pulley
4. Eccentric shaft pulley (for compressor)
5. Key
6. Eccentric shaft pulley bolt
7. Eccentric shaft front oil seal
8. Eccentric shaft pulley boss
9. Distributor drive gear
10. Oil pump drive sprocket
11. Driven gear (for metering oil pump)
12. Front cover
13. Oil pump driven sprocket
14. Oil pump body
15. Oil strainer
16. Oil pan
17. Thermostat
18. Water pump casing
19. Balance weight
20. Front housing
21. Bearing housing
22. Needle bearing
23. Thrust plate
24. Spacer
25. Oil filter
26. Intermediate housing
27. Oil filter cover
28. Rear rotor housing
29. Rear housing
30. Apex seal
31. Rear rotor
32. Oil seal (outer)
33. Oil seal (inner)
34. Rear rotor bearing
35. Rear main bearing
36. Flywheel lock nut
37. Key
38. Needle bearing
39. Eccentric shaft
40. Eccentric shaft rear oil seal
41. Oil jet
42. Sealing washer
43. Tension bolt

Fig. 1-1 Engine cross section (1)

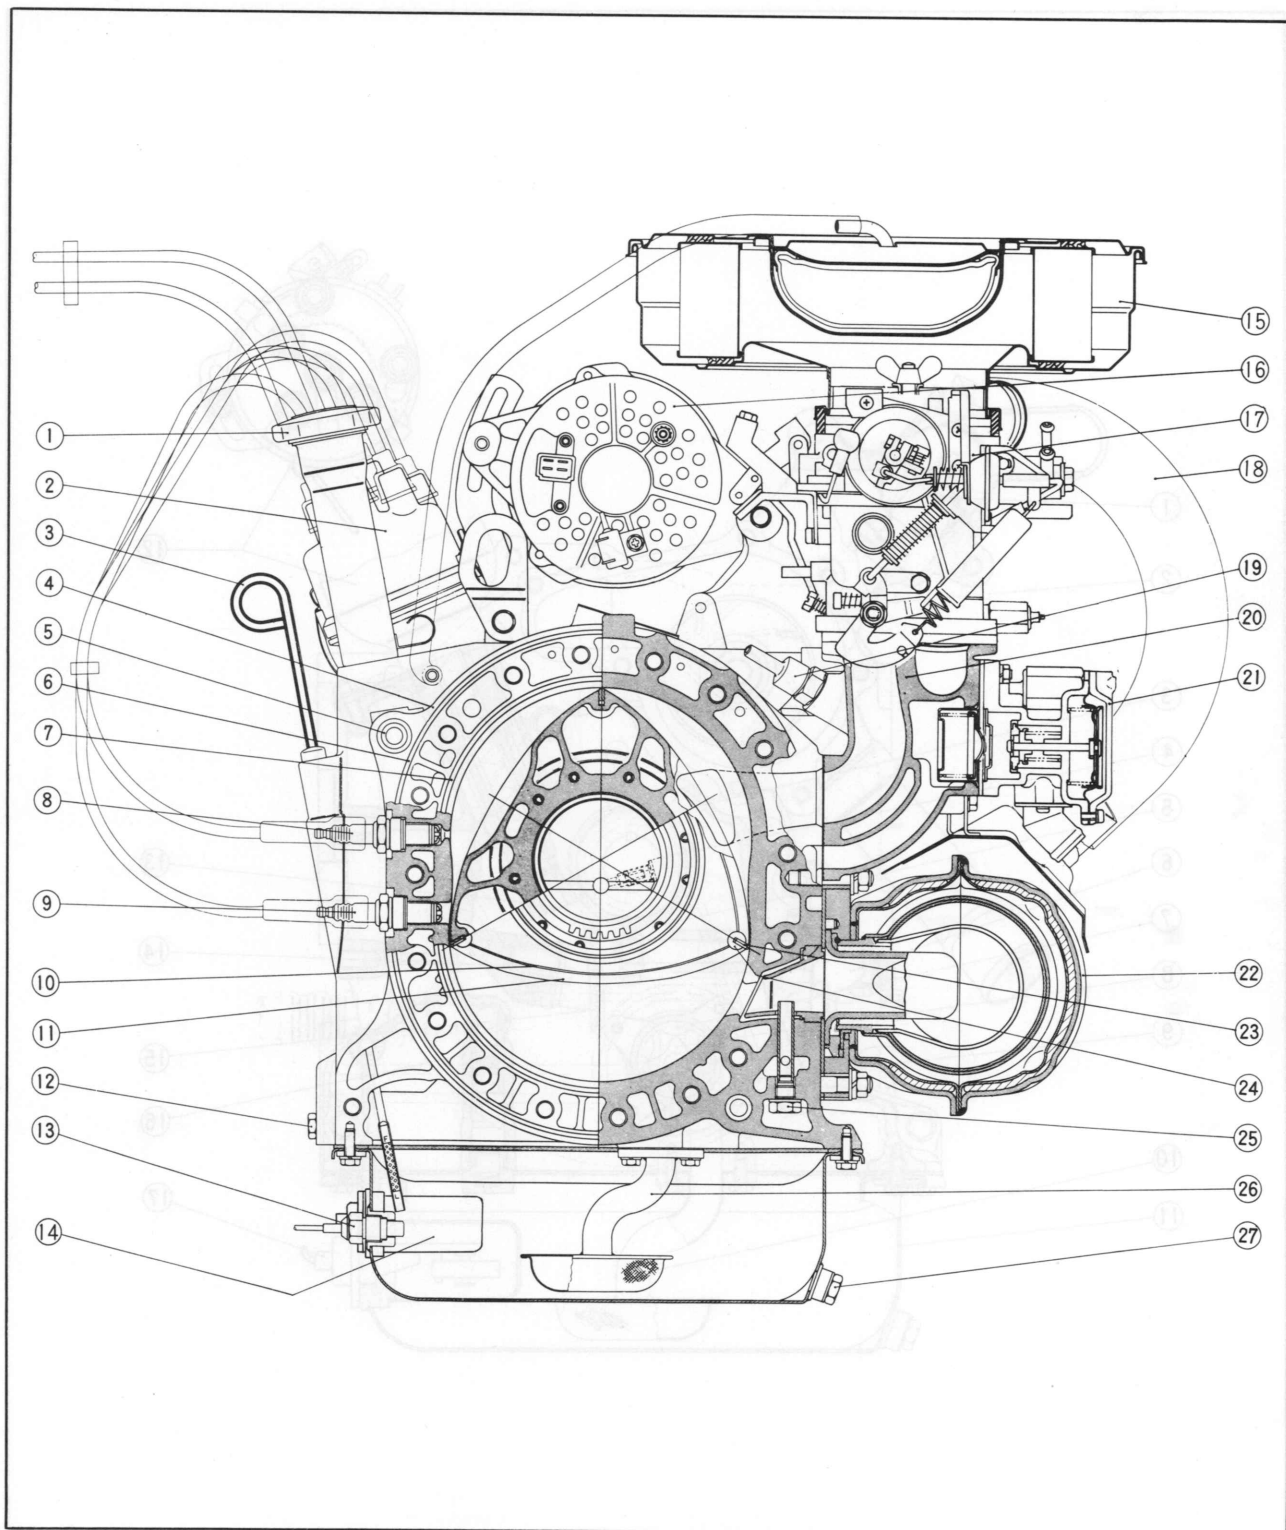


Fig. 1-2 Engine cross section (2)

- | | | |
|---------------------------|------------------------|----------------------------|
| 1. Oil filler cap | 10. Side seal | 19. PCV valve |
| 2. Distributor | 11. Rotor | 20. Intake manifold |
| 3. Dipstick gauge | 12. Coolant drain plug | 21. Air control valve |
| 4. Rotor housing | 13. Oil thermo unit | 22. Thermal reactor |
| 5. Tubular dowel | 14. Oil level sensor | 23. Apex seal (side piece) |
| 6. Sealing rubber (outer) | 15. Air cleaner | 24. Corner seal |
| 7. Sealing rubber (inner) | 16. Alternator | 25. Air injection nozzle |
| 8. Trailing spark plug | 17. Carburetor | 26. Oil strainer |
| 9. Leading spark plug | 18. Hot air hose | 27. Oil drain plug |

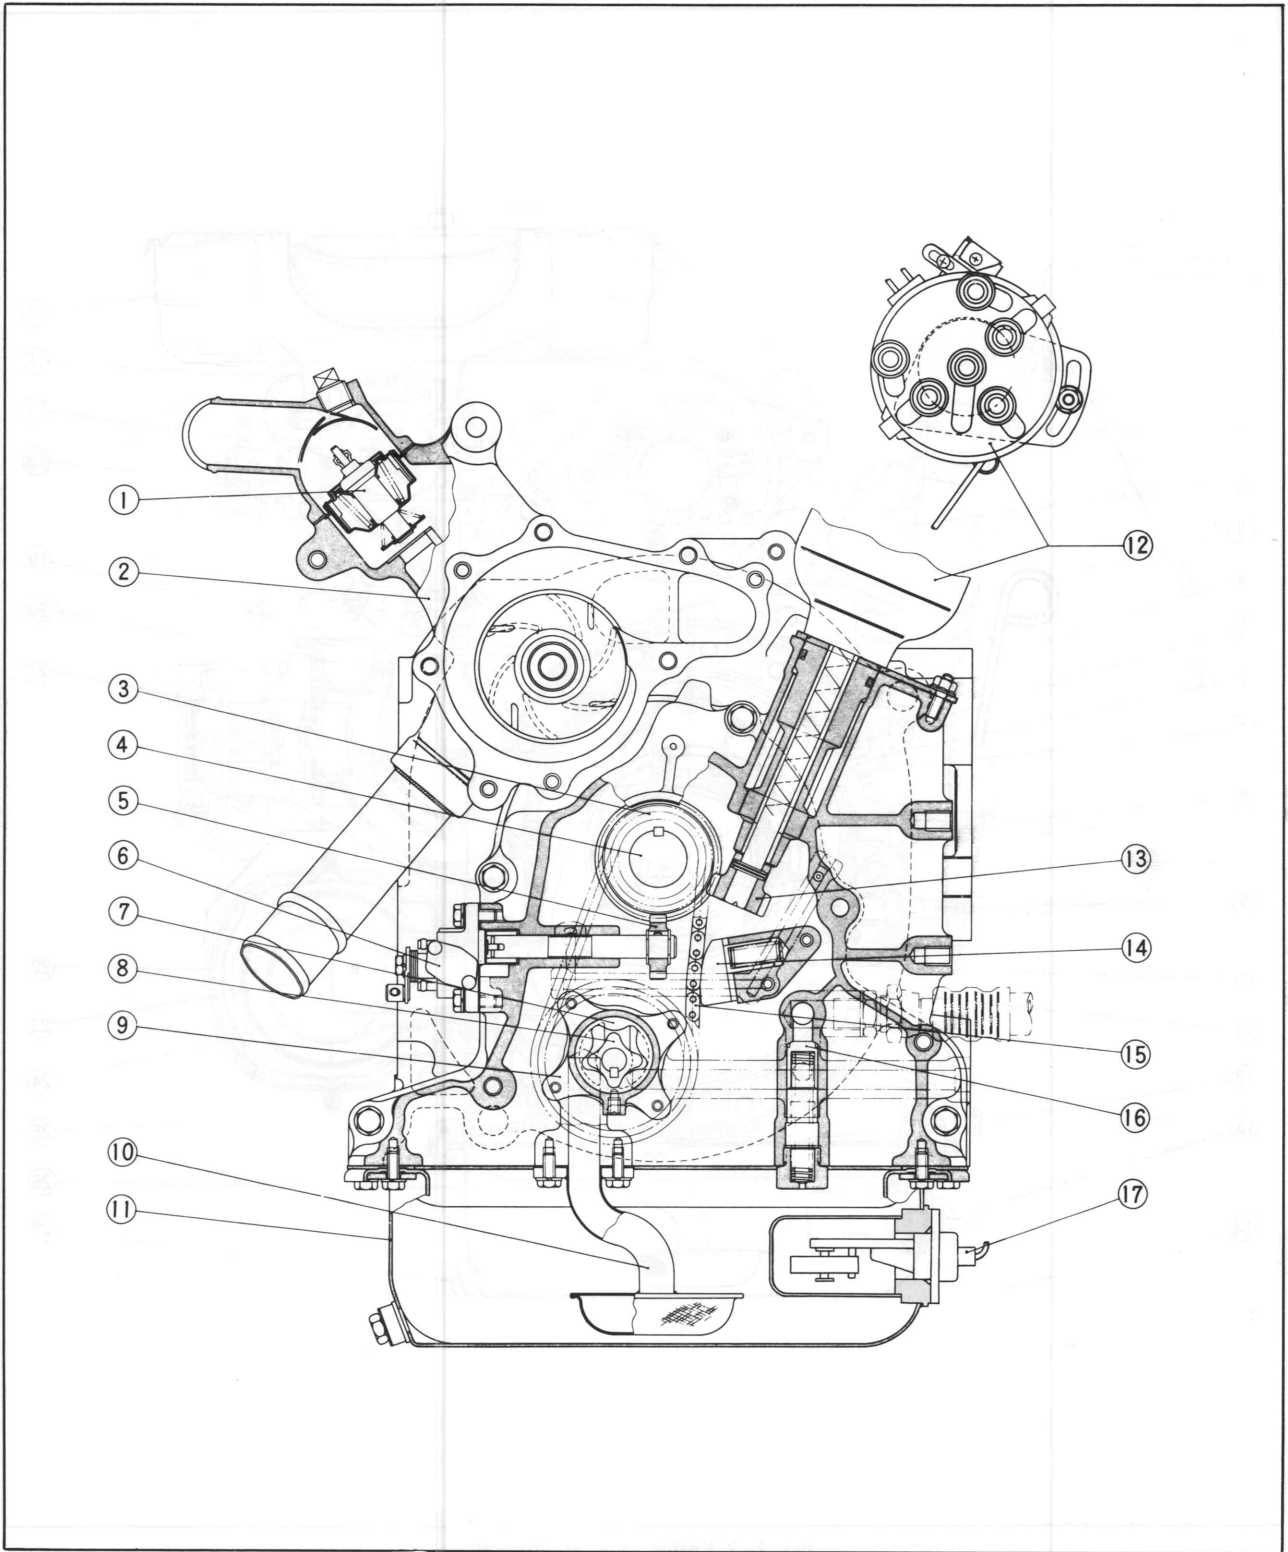


Fig. 1-3 Engine cross section (3)

- 1. Thermostat
- 2. Water pump casing
- 3. Distributor drive gear
- 4. Eccentric shaft
- 5. Metering pump drive gear
- 6. Metering pump

- 7. Oil pump outer gear
- 8. Oil pump inner gear
- 9. Oil pump body
- 10. Oil strainer
- 11. Oil pan
- 12. Distributor

- 13. Distributor driven gear
- 14. Oil pump chain adjuster
- 15. Oil pump chain
- 16. Pressure control valve
- 17. Oil level sensor

1-A. ENGINE DISASSEMBLY

Engine disassembly should be done in the following order after removing the engine from the vehicle.

Note:

Henceforth, on this occasion when the '74 year-type of rotary engine is being introduced, we have adopted the method of supporting the front housing by using the **engine hanger** (49 1114 005) for the purpose of facilitating the working procedure. The **engine hanger** can be used for any type of engine now in service.

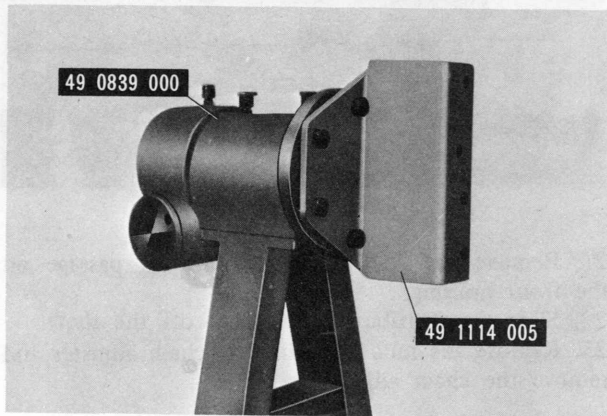


Fig. 1-4 Engine work stand

1. Remove the oil hose support bracket from the front housing.
2. Mount the engine on the **engine work stand** (49 0839 000) with the **engine hanger** (49 1114 005).
3. Remove the engine mounting bracket from the front cover.
4. Disconnect the vacuum hoses, air hoses and wires, then remove the valves.
5. Remove the air pump attaching bolts and bar, and remove the air pump and V-belt.
- Remove the alternator attaching bolts, and remove the alternator and V-belt.
6. Disconnect the metering oil pump connecting rod and oil tubes from the carburetor.
7. Remove the intake manifold attaching nuts, and remove the carburetor and intake manifold assembly.

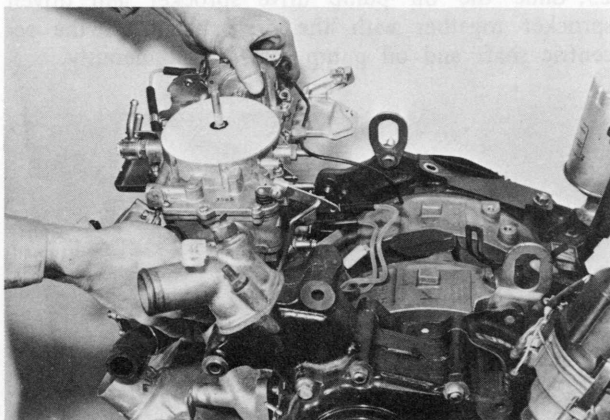


Fig. 1-5 Removing intake manifold ass'y

- Then remove the gasket and two rubber rings.
8. Remove the thermal reactor attaching nuts and

- remove it with gaskets.
9. Remove the distributor securing nut and pull it out from the front cover.

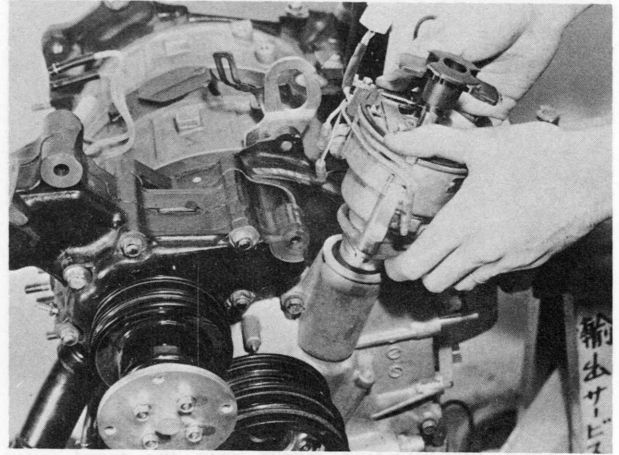


Fig. 1-6 Removing distributor

10. Remove the eccentric shaft pulley (for compressor) from the pulley boss.
11. Remove the water pump attaching bolts, and remove the pump and gasket.

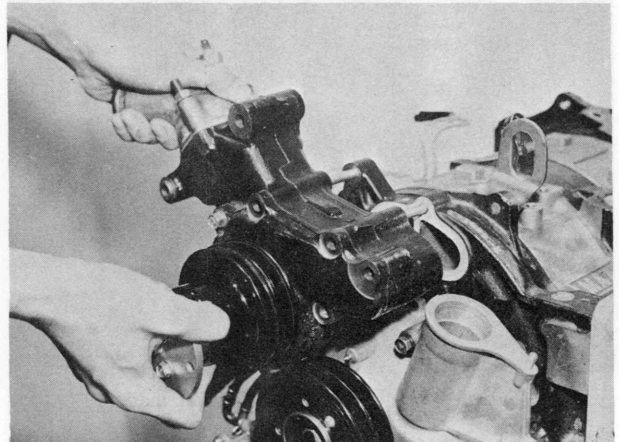


Fig. 1-7 Removing water pump

12. Invert the engine on the work stand.
13. Remove the bolts attaching the oil pan, and remove the oil pan and gasket.

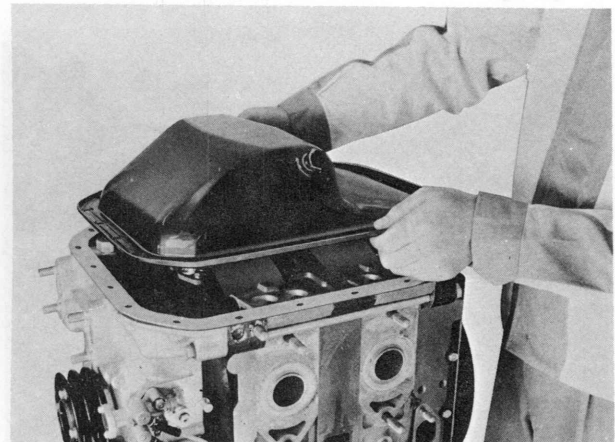


Fig. 1-8 Removing oil pan

14. Remove the bolts attaching the oil strainer, and remove the oil strainer and gasket.

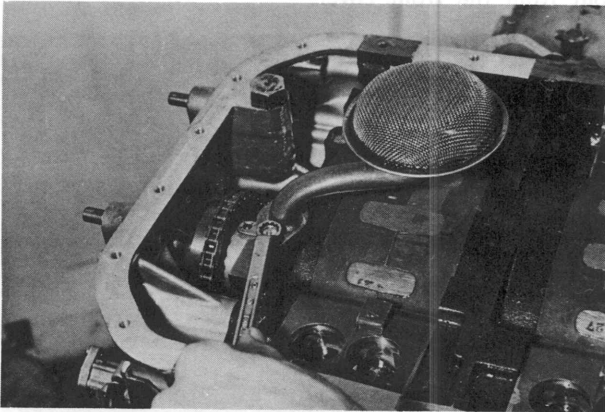


Fig. 1-9 Removing oil strainer

15. Apply identification marks onto the front rotor housing and rear rotor housing, which are common parts, so that they will be as they were when re-assembling the engine.

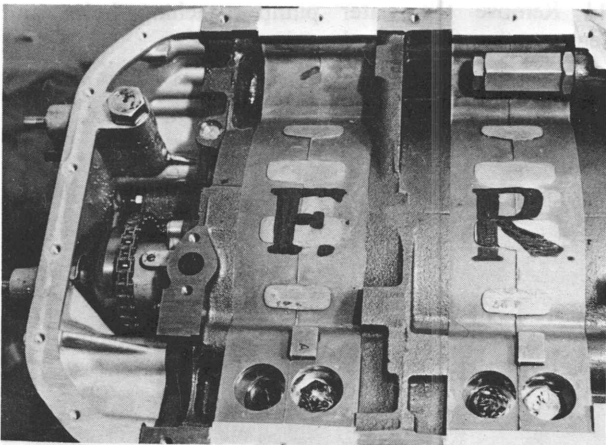


Fig. 1-10 Putting identification marks

16. Turn the engine on the work stand so that the top of the engine is up.

17. Attach the ring gear brake (49 1881 060) to the flywheel or drive plate.

18. Remove the eccentric shaft pulley bolt and remove the pulley.

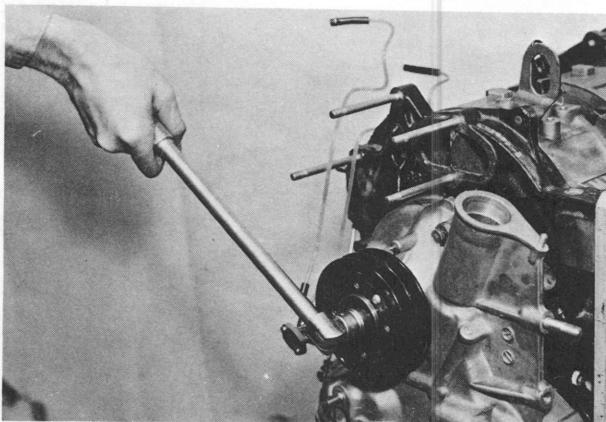


Fig. 1-11 Removing eccentric shaft pulley

19. Turn the engine on the work stand so that the front end of the engine is up.

20. Remove the front cover attaching bolts, and remove the front cover and gasket.

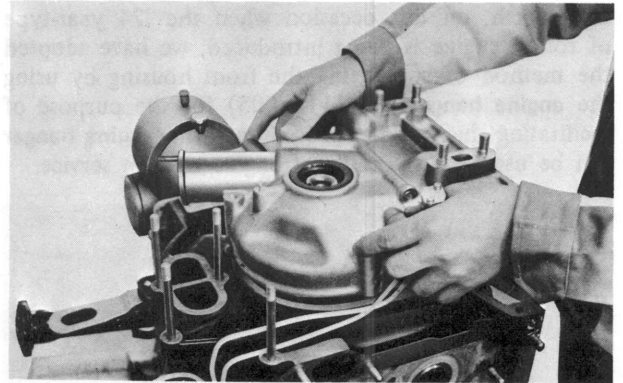


Fig. 1-12 Removing front cover

21. Remove the "O" ring from the oil passage on the front housing.

22. Slide the distributor drive gear off the shaft.

23. Remove the nuts attaching the chain adjuster and remove the chain adjuster.

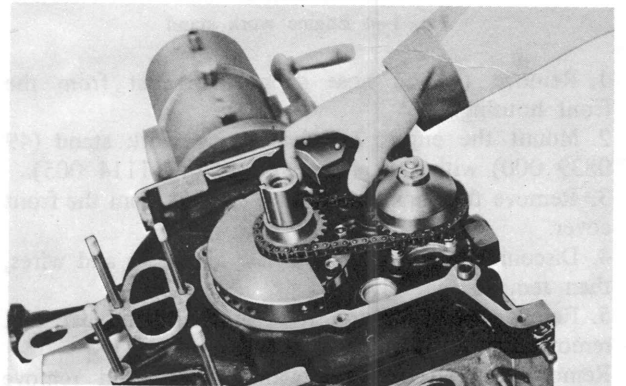


Fig. 1-13 Removing chain adjuster

24. Straighten the tab of the lock washer and remove the nut and lock washer from the oil pump driven sprocket.

25. Slide the oil pump drive sprocket and driven sprocket together with the drive chain off the eccentric shaft and oil pump shaft simultaneously.

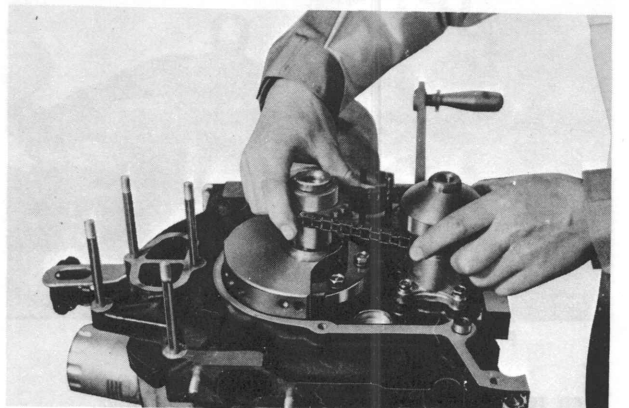


Fig. 1-14 Removing chain and sprockets