

Muffler

EXHAUST

4. Muffler


A: REMOVAL

1) Separate the muffler from rear exhaust pipe.


CAUTION:

Be careful, exhaust pipe is hot.

- LH side

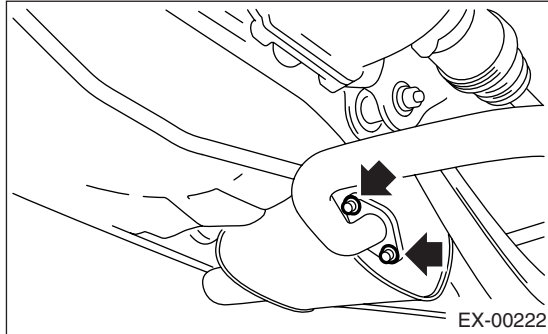


- RH side

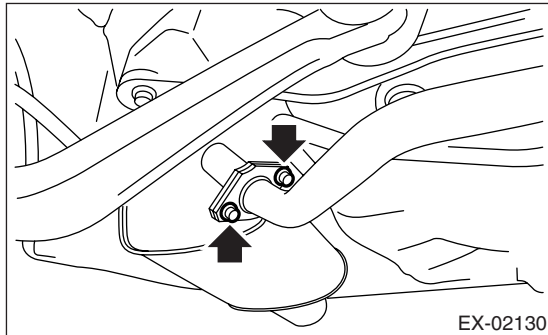


2) Apply a coat of spray type lubricant to the mating area of cushion rubber.

- LH side

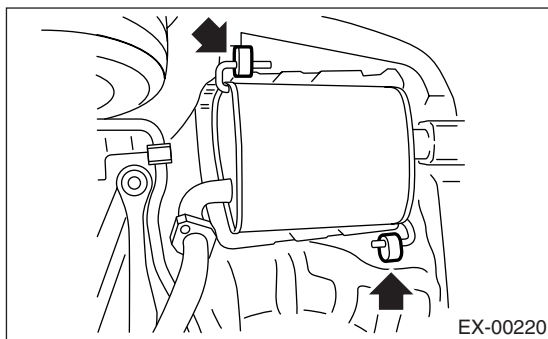

- RH side

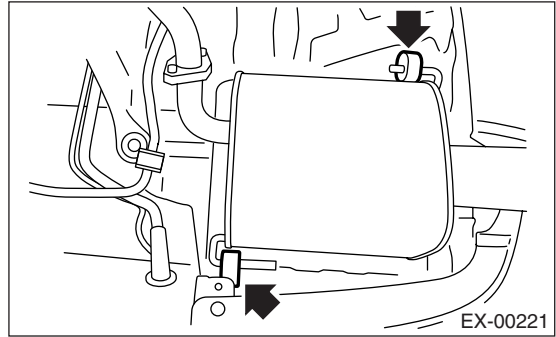

3) Remove the front and rear cushion rubber, and then remove the muffler.

B: INSTALLATION

Install in the reverse order of removal.


NOTE:

Use a new gasket and self-locking nut.


Tightening torque:

48 N·m (2.5 kgf·m, 35.4 ft·lb)

- LH side

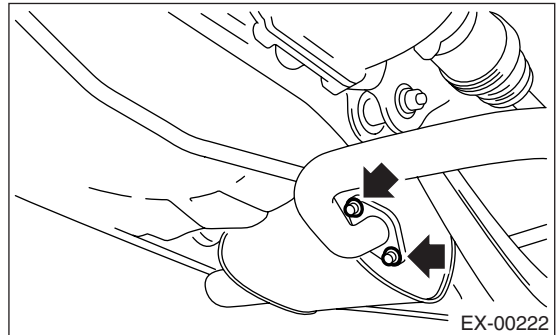

- RH side

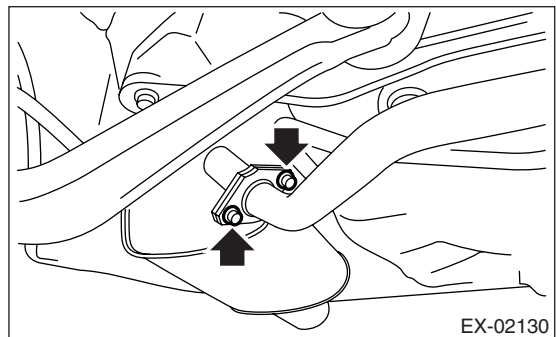

C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.
- 3) Check the cushion rubber for wear or crack.