
























Fuses and relays

PASSENGER COMPARTMENT FUSE BOX (260)

Location

This fuse box is located in the passenger compartment on the driver's side. To access the fuses, remove the glove compartment by tilting it completely.










Table of fuses

	 20A	 15A	 10A
	 10A	 20A	INJECT 20A
	 20A	STOP 15A	 15A
	 15A	 10A	 25A
		 15A	 15A
 30A		 15A	 15A
		 10A	 10A
UCH 25A	 10A	 10A	 10A
 10A	 15A		 2A

SE2153

Fuses and relays

Allocation of fuses (according to the equipment level)


Symbol	Amps	Description
	20A	Engine connection unit
	15A	Rear screen wiper - Reversing lights - Windscreen/rear window washer pump
	10A	Pretensioners - Air bag - Engine immobiliser
	10A	Radio
	20A	Heated rear window
INJECT	20A	Injection
	20A	Heating/air conditioning fan unit
BRAKE	15A	Brake lights
	15A	Windscreen wiper
	10A	Rear fog lights
	10A	Anti-lock braking system
	25A	Cigarette lighter - Sunroof
	15A	Left-hand main beam headlight
	15A	Right-hand main beam headlight
	30A	Electric window winders
	15A	Left-hand dipped headlight
	15A	Right-hand dipped headlight
	10A	Left side lights
	10A	Right-hand side lights
	25A	Unité centrale habitacle
	10A	Horn - Engine immobiliser
	10A	Interior lighting/Short circuit - Diagnostic socket
	10A	Electrical power-assisted steering
	--	Not in use
	15A	Electric door locking - Electric rear-view mirrors
	2A	Sequential gearbox

Fuses and relays

PASSENGER COMPARTMENT RELAY UNIT

Location

This unit is located in the passenger compartment under the dashboard on the driver's side. To access the relays, remove the glove compartment by tilting it completely.

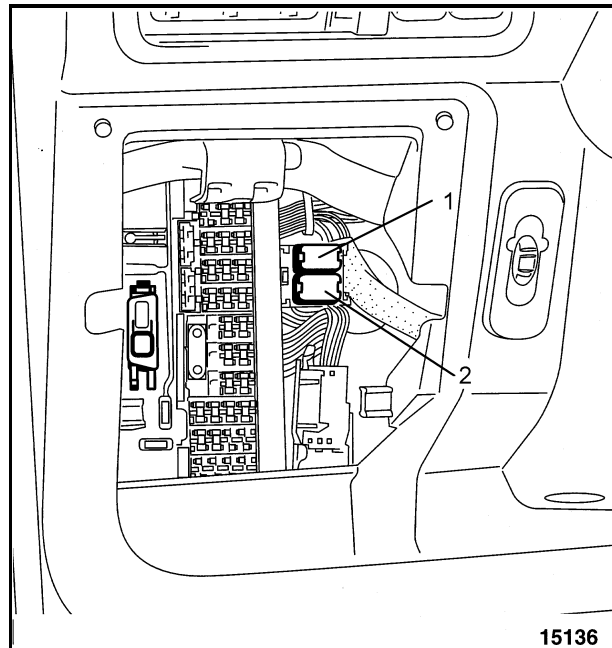

Allocation (according to equipment level)


Track	Description
1	Not in use
2	Front fog lights relay (231)

Fuses and relays

PASSENGER COMPARTMENT RELAY UNIT

Location

This board is located under the dashboard beside the pedals..

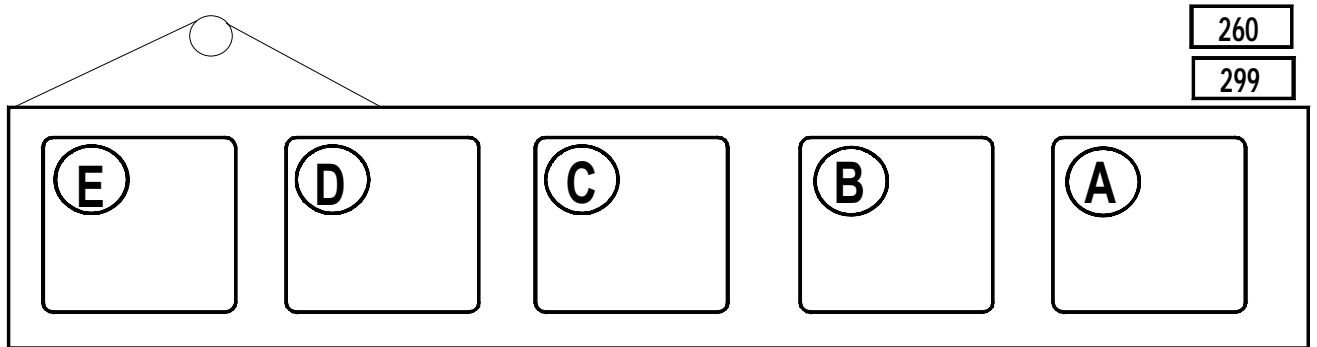

14273

Allocation (according to the equipment level)


Track	Description
A	Buzzer Sequential transmission (763)
B	Not in use
C	Relay sequential gearbox starting (232)
D	Not in use
E	Not in use

Fuses and relays

UCH (645)

Location

This fuse box is located in the passenger compartment on the driver's side.

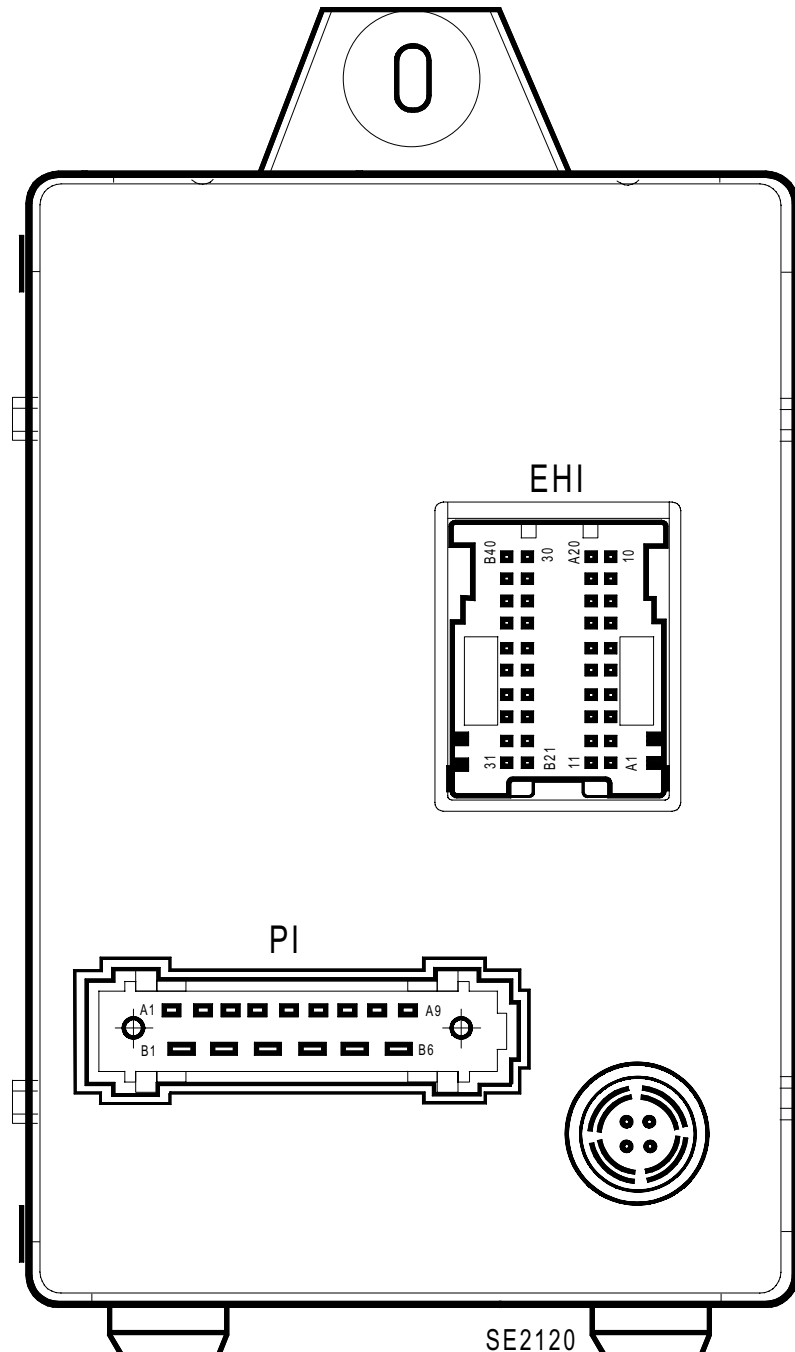

Fuses and relays

Allocation (according to equipment level)

EHI (20-track A connector)

Track	Description
1	Not in use
2	Not in use
3	Not in use
4	Not in use
5	Hazard warning lights indicator light
6	Vehicle speed input
7	Windscreen washer input
8	Central door locking opening control input
9	Radio frequency aerial earth
10	Radio frequency aerial data signal
11	Not in use
12	Not in use
13	Not in use
14	Not in use
15	Lights input
16	Connection with transponder ring
17	Not in use
18	Not in use
19	Not in use
20	Not in use

EHI (20-track B connector)

Track	Description
21	Not in use
22	+ after ignition feed
23	Impact signal
24	Windscreen wiper timer input
25	Dipped and main beam headlight signal
26	Left-hand indicator input
27	Rear fog lights
28	Right-hand indicator input
29	Rear screen washer input
30	Rear underbody flange input
31	Not in use
32	Software lock warning light output
33	Hazard warning lights input
34	Diagnostic connection K
35	Not in use
36	Engine software lock connection
37	Front fog lights
38	Engine speed input
39	Heated rear screen input
40	Front underbody flange input

Fuses and relays


PI (15-track connector)

Track	Description
A1	Earth
A2	Courtesy light output
A3	+ before ignition
A4	Windscreen wiper control - UCH connection
A5	+ After ignition feed windscreen wiper supply
A6	UCH connection - windscreen wiper park position
A7	Rear fog light output
A8	Right-hand indicator output
A9	Left-hand indicator output
B1	Door opening output
B2	Door closing output
B3	Central door locking function supply
B4	Driver's door opening output
B5	Courtesy light timer output
B6	Courtesy light supply





Fuses and relays

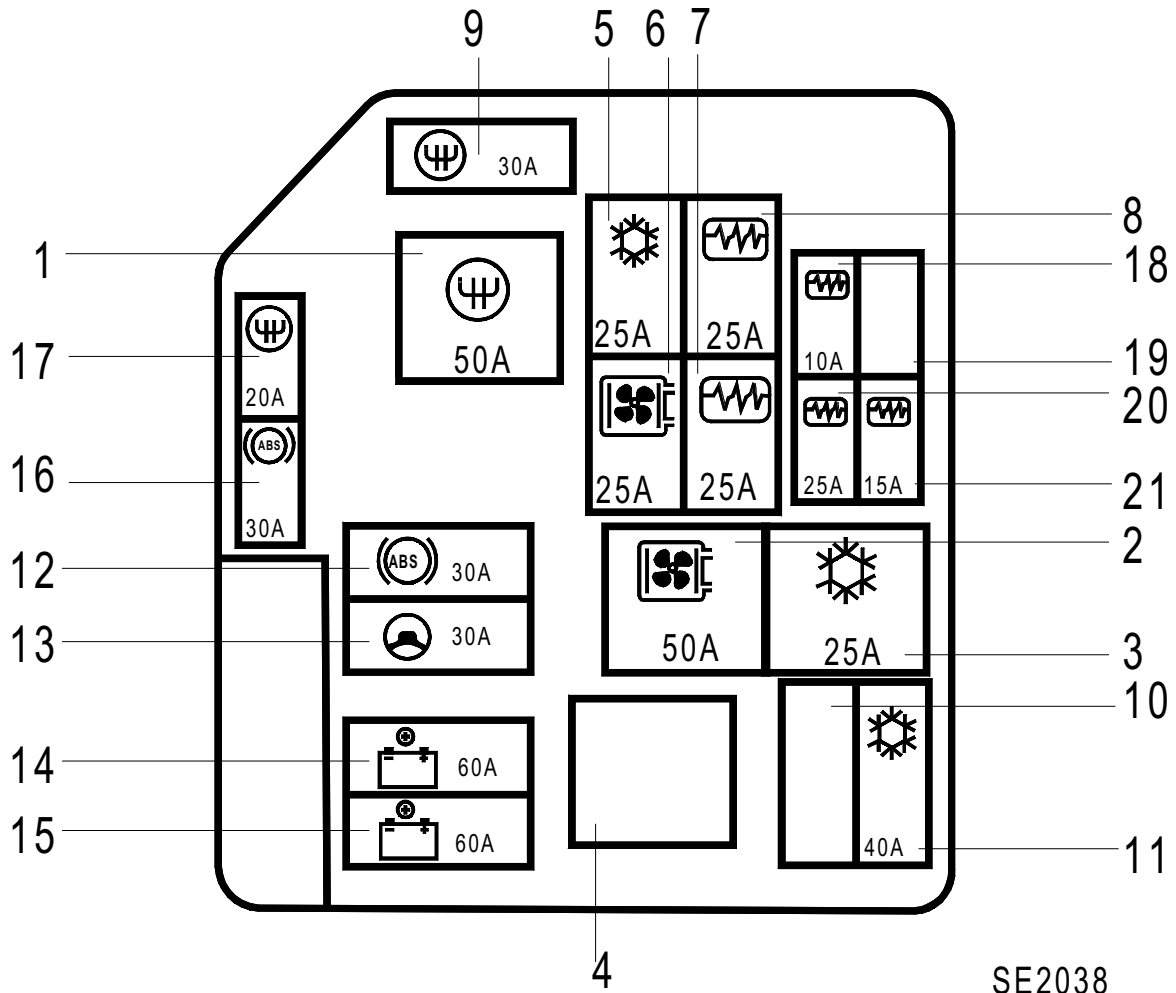ENGINE AND RELAY FUSE BOX (597)















Fuse and relay box (engine side)



Allocation (according to equipment level)

No.	Symbol	Amps	Description
1		50A	Relay: sequential gearbox
2		50A	Relay: fan assembly (with air conditioning)
3		25A	Relay: low speed fan (with air conditioning)
4		--	Not in use
5		25A	Relay: air conditioning compressor

Fuses and relays

No.	Symbol	Amps	Description
6		25A	Relay: fan assembly (except air conditioning)
7		25A	Relay: injection locking
8		25A	Relay: fuel pump
9		30A	Fuse: sequential gearbox
10		--	Not in use
11		40A	Fuse: air conditioning
12		30A	Fuse: Anti-lock braking system
13		30A	Fuse: electrical power-assisted steering
14		60A	Fuse: passenger compartment
15		60A	Fuse: passenger compartment
16		20A	Fuse: sequential gearbox
17		30A	Fuse: Anti-lock braking system
18		10A	Fuse: injection
19		--	Not in use
20		25A	Fuse: injection
21		15A	Fuse: injection