






 


CHAPTER TITLES

GENERAL INFORMATION	
	GEN INFO 1
SPECIFICATIONS	
	SPEC 2
PERIODIC INSPECTION AND ADJUSTMENT	
	INSP ADJ 3
ENGINE	
	ENG 4
COOLING	
	COOL 5
CARBURETION	
	CARB 6
CHASSIS	
	CHAS 7
ELECTRICAL	
	ELEC 8
TROUBLESHOOTING	?
	TRBL SHTG 9

CONTENTS

CHAPTER 1.

GENERAL INFORMATION

MOTORCYCLE IDENTIFICATION	1-1
VEHICLE IDENTIFICATION NUMBER	1-1
ENGINE SERIAL NUMBER	1-1
MODEL LABEL	1-1
 IMPORTANT INFORMATION	 1-2
PREPARATION FOR REMOVAL PROCEDURES	1-2
REPLACEMENT PARTS	1-2
GASKETS, OIL SEALS AND O-RINGS	1-2
LOCK WASHERS/PLATES AND COTTER PINS	1-3
BEARINGS AND OIL SEALS	1-3
CIRCLIPS	1-3
 SPECIAL TOOLS	 1-4
FOR TUNE-UP	1-4
FOR ENGINE SERVICE	1-5
FOR CHASSIS SERVICE	1-7
FOR ELECTRICAL COMPONENTS	1-7

CHAPTER 2.

SPECIFICATIONS

GENERAL SPECIFICATIONS	2-1
 MAINTENANCE SPECIFICATIONS	 2-4
ENGINE	2-4
CHASSIS	2-13
ELECTRICAL	2-17
 HOW TO USE THE CONVERSION TABLE	 2-19
 GENERAL TORQUE SPECIFICATIONS	 2-19
 LUBRICATION POINTS AND LUBRICANT TYPES	 2-20
ENGINE	2-20
CHASSIS	2-21
 COOLING SYSTEM DIAGRAMS	 2-22
 LUBRICATION DIAGRAMS	 2-25

CABLE ROUTING 2-29

EMISSION HOSE ROUTING (california only) 2-36

CHAPTER 3. PERIODIC INSPECTIONS AND ADJUSTMENTS

INTRODUCTION 3-1

PERIODIC MAINTENANCE/EMISSION CONTROL SYSTEM 3-1

GENERAL MAINTENANCE/LUBRICATION 3-2

COWLINGS 3-4

REMOVAL 3-6

INSTALLATION 3-7

SEATS 3-8

REMOVAL 3-8

INSTALLATION 3-8

FUEL TANK 3-9

REMOVAL 3-9

INSTALLATION 3-10

ENGINE 3-11

VALVE CLEARANCE ADJUSTMENT 3-11

CARBURETOR SYNCHRONIZATION 3-19

IDLING SPEED ADJUSTMENT 3-21

THROTTLE CABLE ADJUSTMENT 3-22

SPARK PLUG INSPECTION 3-24

IGNITION TIMING CHECK 3-25

COMPRESSION PRESSURE MEASUREMENT 3-27

ENGINE OIL LEVEL INSPECTION 3-29

ENGINE OIL REPLACEMENT 3-30

ENGINE OIL PRESSURE INSPECTION 3-32

CLUTCH ADJUSTMENT 3-33

CLUTCH FLUID LEVEL INSPECTION 3-34

AIR BLEEDING (HYDRAULIC CLUTCH SYSTEM) 3-35

AIR FILTER CLEANING 3-36

CARBURETOR JOINT INSPECTION 3-37

FUEL LINE INSPECTION 3-38

CRANKCASE BREATHER HOSE INSPECTION 3-38

EXUP CABLE ADJUSTMENT 3-39

EXHAUST SYSTEM INSPECTION 3-41

COOLANT LEVEL INSPECTION 3-42



GEN
INFO **1**



SPEC **2**



INSP
ADJ **3**



ENG **4**



COOL **5**



CARB **6**



CHAS **7**



ELEC **8**

?

TRBL
SHTG **9**

COOLANT REPLACEMENT	3-42
COOLING SYSTEM INSPECTION	3-46
CHASSIS	3-47
FRONT BRAKE ADJUSTMENT	3-47
REAR BRAKE ADJUSTMENT	3-47
BRAKE FLUID LEVEL INSPECTION	3-49
BRAKE PAD INSPECTION	3-50
BRAKE LIGHT SWITCH ADJUSTMENT	3-50
BRAKE HOSE INSPECTION	3-51
AIR BLEEDING (HYDRAULIC BRAKE SYSTEM)	3-51
SHIFT PEDAL ADJUSTMENT	3-52
DRIVE CHAIN SLACK ADJUSTMENT	3-53
DRIVE CHAIN LUBRICATION	3-55
STEERING HEAD INSPECTION	3-55
FRONT FORK INSPECTION	3-58
FRONT FORK ADJUSTMENT	3-58
REAR SHOCK ABSORBER ADJUSTMENT	3-60
TIRE INSPECTION	3-62
WHEEL INSPECTION	3-65
CABLE INSPECTION AND LUBRICATION	3-65
LEVER AND PEDAL LUBRICATION	3-66
SIDESTAND LUBRICATION	3-66
REAR SUSPENSION LUBRICATION	3-66
ELECTRICAL	3-67
BATTERY INSPECTION	3-67
FUSE INSPECTION	3-72
HEADLIGHT BEAM ADJUSTMENT	3-74
HEADLIGHT BULB REPLACEMENT	3-75

CHAPTER 4. ENGINE

ENGINE REMOVAL	4-1
FUEL TANK AND COWLINGS	4-1
ENGINE OIL AND COOLANT	4-1
BATTERY LEADS	4-2
AIR FILTER CASE	4-2
CARBURETORS	4-2
RADIATOR	4-2
HOSES AND LEADS	4-3
DRIVE SPROCKET	4-3
WATER JACKET JOINTS AND WATER PUMP	4-4
AC GENERATOR AND STARTER MOTOR	4-5
MUFFLER ASSEMBLY	4-6
ENGINE REMOVAL	4-7

ENGINE DISASSEMBLY	4-9
OIL FILTER AND OIL COOLER	4-9
CYLINDER HEAD COVER, CYLINDER HEAD AND CAMSHAFTS	4-10
CYLINDERS AND PISTONS	4-14
CLUTCH	4-15
OIL PAN AND OIL STRAINER	4-17
OIL PUMP AND SHIFT SHAFT	4-19
CRANKCASE DISASSEMBLY	4-20
SHIFT FORKS AND SHIFT CAM	4-21
TRANSMISSION	4-22
STARTER CLUTCH AND CRANKSHAFT	4-22
VALVES AND CAMSHAFT CASE	4-23
CONNECTING RODS	4-25
OIL PUMP	4-25
 INSPECTION AND REPAIR	4-26
CYLINDER HEAD	4-26
VALVES AND VALVE GUIDES	4-27
VALVE SEATS	4-28
VALVE SPRINGS	4-30
CAMSHAFT CASE	4-31
VALVE LIFTERS	4-31
CAMSHAFTS	4-31
TIMING CHAIN, HY-VO CHAIN, CAMSHAFT SPROCKETS AND CHAIN GUIDES	4-33
TIMING CHAIN TENSIONER	4-33
CYLINDERS AND PISTONS	4-33
PISTON RINGS	4-35
PISTON PINS	4-36
CRANKSHAFT AND CONNECTING RODS	4-36
OIL PUMP	4-41
PRIMARY DRIVE	4-42
STARTER DRIVES	4-42
AC GENERATOR SHAFT	4-43
CLUTCH	4-43
TRANSMISSION AND SHIFTER	4-45
SHIFT SHAFT AND STOPPER LEVER	4-47
OIL-JET NOZZLE	4-47
RELIEF VALVE, OIL PIPE AND STRAINER	4-48
OIL COOLER	4-49
CRANKCASE	4-49
BEARINGS AND OIL SEALS	4-49
CIRCLIPS AND WASHERS	4-49
 ENGINE ASSEMBLY AND ADJUSTMENT	4-50
OIL PUMP	4-50
CONNECTING RODS	4-52
CAMSHAFT CASE AND VALVES	4-54



**GEN
INFO** **1**



SPEC **2**



**INSP
ADJ** **3**



ENG **4**



COOL **5**



CARB **6**



CHAS **7**



ELEC **8**



**TRBL
SHTG** **9**

CRANKSHAFT AND STARTER CLUTCH	4-57
TRANSMISSION	4-60
SHIFT CAM AND SHIFT FORKS	4-60
CRANKCASE ASSEMBLY	4-61
SHIFT SHAFT AND OIL PUMP	4-64
OIL PAN AND OIL STRAINER	4-65
CLUTCH	4-67
PISTONS AND CYLINDERS	4-72
CYLINDER HEAD AND CAMSHAFTS	4-76
TIMING CHAIN TENSIONER	4-79
OIL COOLER AND OIL FILTER	4-81
ENGINE REMOUNTING	4-82

CHAPTER 5. COOLING

RADIATOR/OIL COOLER	5-1
RADIATOR	5-2
REMOVAL	5-2
INSPECTION	5-4
INSTALLATION	5-5
OIL COOLER	5-6
REMOVAL	5-6
INSPECTION	5-6
INSTALLATION	5-7
THERMOSTATIC VALVE/WATER PUMP	5-8
THERMOSTATIC VALVE	5-9
REMOVAL	5-9
INSPECTION	5-10
INSTALLATION	5-11
WATER PUMP	5-13
REMOVAL	5-13
INSPECTION	5-14
INSTALLATION	5-17

CHAPTER 6. CARBURETION

CARBURETORS	6-1
REMOVAL	6-3
DISASSEMBLY	6-5
INSPECTION	6-7
ASSEMBLY	6-9
INSTALLATION	6-11
FUEL LEVEL ADJUSTMENT	6-12
THROTTLE POSITION SENSOR (TPS) ADJUSTMENT AND INSPECTION	6-13

CHAPTER 7. CHASSIS

FRONT WHEEL	7-1
REMOVAL	7-2
INSPECTION	7-3
INSTALLATION	7-4
FRONT WHEEL STATIC BALANCE ADJUSTMENT	7-5
REAR WHEEL	7-7
REMOVAL	7-8
INSPECTION	7-9
INSTALLATION	7-9
REAR WHEEL STATIC BALANCE ADJUSTMENT	7-9
FRONT AND REAR BRAKES	7-10
FRONT BRAKE	7-10
REAR BRAKE	7-11
BRAKE PAD REPLACEMENT	7-12
BRAKE CALIPER DISASSEMBLY	7-16
MASTER CYLINDER DISASSEMBLY	7-18
INSPECTION AND REPAIR	7-20
BRAKE CALIPER ASSEMBLY	7-24
MASTER CYLINDER ASSEMBLY	7-28
HYDRAULIC CLUTCH	7-33
DISASSEMBLY	7-34
INSPECTION AND REPAIR	7-36
ASSEMBLY	7-37



**GEN
INFO** **1**



SPEC **2**



**INSP
ADJ** **3**



ENG **4**



COOL **5**



CARB **6**



CHAS **7**



ELEC **8**



**TRBL
SHTG** **9**

FRONT FORK	7-41
REMOVAL.....	7-42
DISASSEMBLY.....	7-43
INSPECTION.....	7-45
ASSEMBLY.....	7-46
INSTALLATION.....	7-51
 STEERING HEAD AND HANDLEBARS	7-53
REMOVAL.....	7-54
INSPECTION.....	7-57
INSTALLATION.....	7-58
 REAR SHOCK ABSORBER AND SWINGARM	7-61
HANDLING NOTES.....	7-62
NOTES ON DISPOSAL.....	7-62
REMOVAL.....	7-62
INSPECTION.....	7-67
INSTALLATION.....	7-68
 DRIVE CHAIN AND SPROCKETS	7-71
REMOVAL.....	7-72
INSPECTION.....	7-73
INSTALLATION.....	7-75

CHAPTER 8. ELECTRICAL

ELECTRICAL COMPONENTS	8-1
 CHECKING OF CONNECTIONS	8-3
 IGNITION SYSTEM	8-4
CIRCUIT DIAGRAM.....	8-4
TROUBLESHOOTING.....	8-5
 ELECTRIC STARTING SYSTEM	8-11
CIRCUIT DIAGRAM.....	8-11
STARTING CIRCUIT OPERATION.....	8-12
TROUBLESHOOTING.....	8-13
STARTER MOTOR.....	8-20
 CHARGING SYSTEM	8-25
CIRCUIT DIAGRAM.....	8-25
TROUBLESHOOTING.....	8-26

LIGHTING SYSTEM	8-30
CIRCUIT DIAGRAM	8-30
TROUBLESHOOTING	8-31
LIGHTING SYSTEM CHECK	8-33
SIGNAL SYSTEM	8-36
CIRCUIT DIAGRAM	8-36
TROUBLESHOOTING	8-38
SIGNAL SYSTEM CHECK	8-40
COOLING SYSTEM	8-49
CIRCUIT DIAGRAM	8-49
TROUBLESHOOTING	8-50
FUEL PUMP SYSTEM	8-54
CIRCUIT DIAGRAM	8-54
FUEL PUMP CIRCUIT OPERATION	8-55
TROUBLESHOOTING	8-56
FUEL PUMP TEST	8-61
EXUP SYSTEM	8-62
CIRCUIT DIAGRAM	8-62
TROUBLESHOOTING	8-63
SELF-DIAGNOSIS	8-68
TROUBLESHOOTING	8-69

CHAPTER 9. TROUBLESHOOTING

STARTING FAILURE/HARD STARTING	9-1
FUEL SYSTEM	9-1
ELECTRICAL SYSTEM	9-1
COMPRESSION SYSTEM	9-2
POOR IDLE SPEED PERFORMANCE	9-2
POOR IDLE SPEED PERFORMANCE	9-2
POOR MEDIUM-AND HIGH-SPEED PERFORMANCE	9-2
POOR MEDIUM-AND HIGH-SPEED PERFORMANCE	9-2
FAULTY GEAR SHIFTING	9-3
HARD SHIFTING	9-3
SHIFT PEDAL DOES NOT MOVE	9-3
JUMPS-OUT-OF GEAR	9-3



**GEN
INFO** **1**



SPEC **2**



**INSP
ADJ** **3**



ENG **4**



COOL **5**



CARB **6**



CHAS **7**




ELEC **8**



**TRBL
SHTG** **9**

CLUTCH SLIPPING/Dragging	9-3
CLUTCH SLIPPING	9-3
CLUTCH Dragging	9-3
 Overheating	 9-4
Overheating	9-4
 Faulty Brake	 9-4
Poor Braking Effect	9-4
 Front Fork Oil Leakage and Front Fork Malfunction.....	 9-4
Malfunction	9-4
Oil Leakage	9-4
 Unstable Handling	 9-5
Unstable Handling	9-5
 Faulty Lighting and Signal Systems	 9-5
Headlight Does Not Light	9-5
Bulb Burnt Out	9-5
Flasher Does Not Light	9-5
Flasher Blinks Slowly	9-5
Flasher Remains Lit	9-5
Flasher Blinks Quickly	9-5
Horn Does Not Sound	9-5

YZF1000R WIRING DIAGRAM

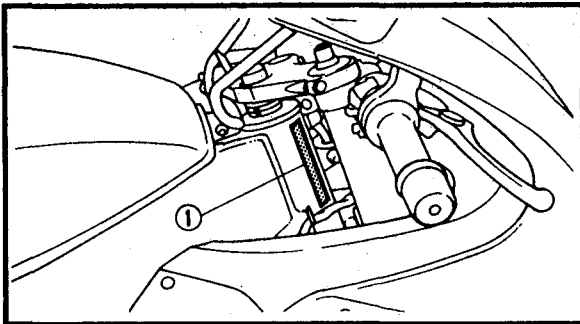


EB100000

GENERAL INFORMATION MOTORCYCLE IDENTIFICATION VEHICLE IDENTIFICATION NUMBER

The vehicle identification number ① is stamped into the right side of the steering head.

NOTE:

The vehicle identification number is used to identify the motorcycle and may be used to register the motorcycle with a licensing authority.

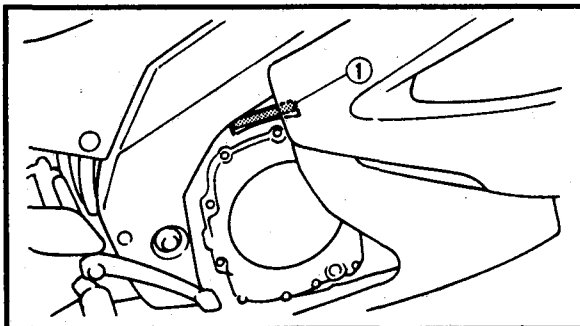


EB100030

ENGINE SERIAL NUMBER

The engine serial number ① is stamped into the crankcase.

NOTE:

The first three digits of the engine serial number indicate the model type; the remaining digits are the unit production number.

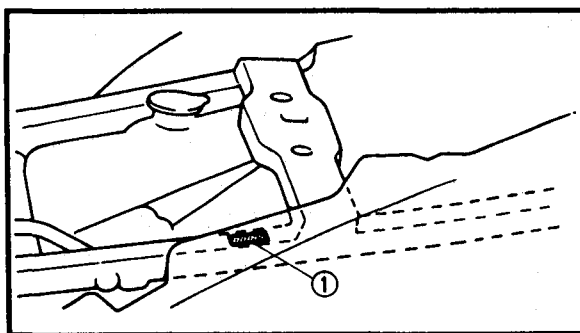

MODEL LABEL

The model label ① is affixed to the frame. This information will be needed to order spare parts.