

**1989  
BMW M3  
Electrical  
Troubleshooting  
Manual**

**CONTENTS**

---

Index . . . . .	2
How To Use This Manual . . . . .	3
Wire Size Conversion Chart . . . . .	3
Symbols . . . . .	4
Systematic Troubleshooting . . . . .	6
Connector Views . . . . .	8500-0
Power Distribution Box . . . . .	0670-0
Fuse Data . . . . .	0670-1
Component Location Chart . . . . .	9000-0
Component Location Views . . . . .	7000-0
Splice Location Views . . . . .	8000-0

---

## Index — Alphabetical Listing of Electrical Circuits

	PAGE		PAGE		PAGE
Active Check Control . . . . .	6216-0	— G201 . . . . .	0670-14	— Headlights . . . . .	6312-0
A/C Air Delivery Control . . . . .	6421-0	— G300 . . . . .	0670-15	— Instrument Cluster . . . . .	6300-1
A/C Blower Controls . . . . .	6413-0	Horns . . . . .	6100-0	— Interior . . . . .	6330-0
A/C Compressor Controls . . . . .	6452-0	Ignition Key Warning . . . . .	6131-0	— License . . . . .	6320-0
A/C Temperature Control . . . . .	6411-0	Indicators		— Map Reading Light . . . . .	6100-1
Antilock Brake . . . . .	3450-0	— ABS . . . . .	3450-0	— Rear Ashtray . . . . .	6300-1
Auto-Charging Flashlight . . . . .	6100-1	— Active Check Control Alarm . . . . .	6216-1	— Rear Side Marker . . . . .	6320-0
Auxiliary Fan . . . . .	6454-0	— "Brake Lights" Fault . . . . .	6216-1	— Stop . . . . .	6325-0
Auxiliary Fuse . . . . .	0670-2	— "Brake Lining" Wear . . . . .	3435-0	— Tail . . . . .	6314-0
Brake Warning System . . . . .	3435-0	— "Brake Warning" . . . . .	3435-0	— Trunk . . . . .	6320-0
Central Locking . . . . .	5126-0	— Charge . . . . .	6210-0	— Turn/Park . . . . .	6313-1
Charge System . . . . .	1230-0	— "Coolant" Level Fault . . . . .	6216-2	Light Switch Details . . . . .	6300-0
Cigar Lighter . . . . .	6100-1	— "Engine Oil" Fault . . . . .	6216-2	On-Board Computer . . . . .	6581-0
Component Location Chart . . . . .	9000-0	— Fasten Seatbelts . . . . .	6216-2	Power Distribution . . . . .	0670-0
Component Location Views . . . . .	7000-0	— Fog Lights . . . . .	6312-0	Power Distribution Box . . . . .	0670-0
Connector Views . . . . .	8500-0	— High Beam . . . . .	6210-0	Power Mirrors . . . . .	5116-0
Cruise Control . . . . .	6571-0	— Inspection . . . . .	6210-1	Power Windows . . . . .	5133-0
Fuel Gauge . . . . .	6210-2	— LH Turn . . . . .	6210-0	Radio . . . . .	6500-0
Fuse Data Chart . . . . .	0670-1	— "License Plate" Fault . . . . .	6216-1	Rear Defogger . . . . .	6100-2
Fuse Details		— "Low Beam" Fault . . . . .	6216-0	Seatbelt Warning . . . . .	6131-0
— Fuse 4 . . . . .	0670-6	— Low Fuel Warning . . . . .	6210-2	Service Interval Indicator . . . . .	6210-1
— Fuse 5 . . . . .	0670-6	— Oil Pressure Warning . . . . .	6210-4	Speedometer . . . . .	6210-0
— Fuse 6 . . . . .	0670-6	— Oil Service . . . . .	6210-1	Splice Location Views Index . . . . .	8000-0
— Fuse 8 . . . . .	0670-7	— "Park Brake" . . . . .	3435-0	Start . . . . .	1240-0
— Fuse 9 . . . . .	0670-11	— "Rear Lights" Fault . . . . .	6216-1	Sunroof . . . . .	5413-0
— Fuse 10 . . . . .	0670-8	— RH Turn . . . . .	6210-0	Tachometer . . . . .	6210-3
— Fuse 12 . . . . .	0670-7	— "Washer Fluid" Fault . . . . .	6216-2	Temperature Gauge . . . . .	6210-2
— Fuse 19 . . . . .	0670-7	Injection Electronics S14 Engine . . . . .	1364-0	Warnings	
— Fuse 20 . . . . .	0670-9	Instrument Cluster . . . . .	6210-0	— Ignition Key/Seatbelt . . . . .	6131-0
— Fuse 21 . . . . .	0670-10	Lights		Wiper/Washer . . . . .	6160-0
— Fuse 27 . . . . .	0670-11	— A/C Control Power . . . . .	6300-1		
Gauges . . . . .	6210-2	— Backup . . . . .	6322-0		
Ground Distribution		— Cigar Lighter . . . . .	6300-1		
— G103 . . . . .	0670-12	— Fog . . . . .	6312-0		
— G104 . . . . .	0670-13	— Front Ashtray . . . . .	6300-1		
— G106 . . . . .	0670-13	— Front Side Marker . . . . .	6314-0		
— G200 . . . . .	0670-13	— Front Turn/Park . . . . .	6314-0		
	0670-14	— Glove Box . . . . .	6100-1		
	0670-15	— Hazard Switch . . . . .	6313-0		

The purpose of this manual is to show electrical schematics in a manner that makes electrical troubleshooting easier. Electrical components which work together are shown together on one schematic. The Wiper-Washer schematic, for example, shows all of the electrical components in one diagram. At the top of the page is the fuse (positive) that powers the circuit. The flow of current is shown through all wires, connectors, switches, and motors to ground (negative) at the bottom of the page.

Within the schematic, all switches and sensors are shown "at rest," as though the Ignition Switch were off. For identification, component names are underlined and placed next to or above each component. Notes are included, describing how switches and other components work.


The power distribution schematic shows the current feed through all the connections from the Battery and Alternator to each fuse and the Ignition and Light Switches. If the Power Distribution schematic is combined with any other circuit schematic, a complete picture is made of how that circuit works. The Ground Distribution schematics show how several circuits are connected to common grounds.

All wiring between components is shown exactly as it exists in the vehicle; however, the wiring is not drawn to scale. To aid in understanding electrical operation, wiring inside complicated components has been simplified. The "Solid State" label designates electronic components.


WIRE SIZE CONVERSION CHART	
METRIC (CROSSSECTIONAL AREA IN MM <sup>2</sup> )	AWG (AMERICAN WIRE GAUGE)
.5	20
.75	18
1	16
1.5	14
2	14
2.5	12
4	10
6	8
8	8
16	4
20	4
25	2
32	2

WIRE INSULATION	
ABBREVIATIONS	COLOR
BK	BLACK
BR	BROWN
RD	RED
YL	YELLOW
GN	GREEN
BU	BLUE
VI	VIOLET
GY	GRAY
WT	WHITE
PK	PINK

 
# 4 SYMBOLS




ENTIRE COMPONENT SHOWN

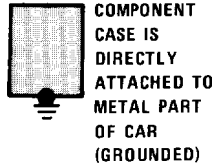

 
COMPONENT CASE IS DIRECTLY ATTACHED TO METAL PART OF CAR (GROUNDED)




PART OF A COMPONENT SHOWN

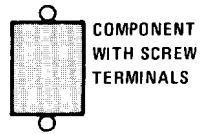

COMPONENT WITH SCREW TERMINALS

 


SOLID STATE (INCLUDES ONLY ELECTRONIC PARTS)

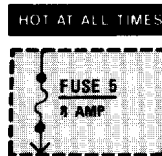







HOT AT ALL TIMES

 INDICATES THAT FUSE 5 IS ALWAYS SUPPLIED WITH POWER



HOT IN RUN OR START


INDICATES THAT FUSE 6 IS SUPPLIED WITH POWER WITH THE IGNITION SWITCH IN THE RUN OR START POSITIONS

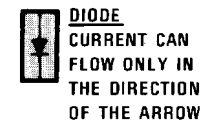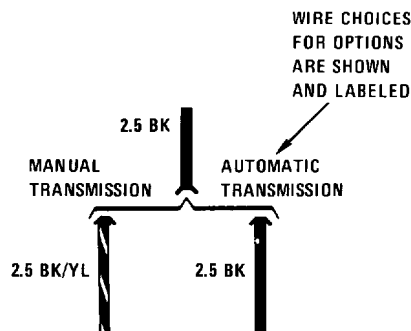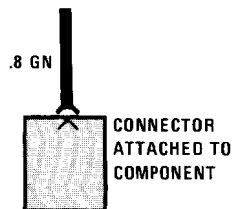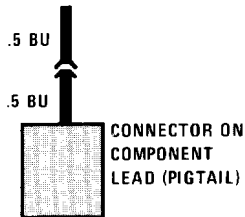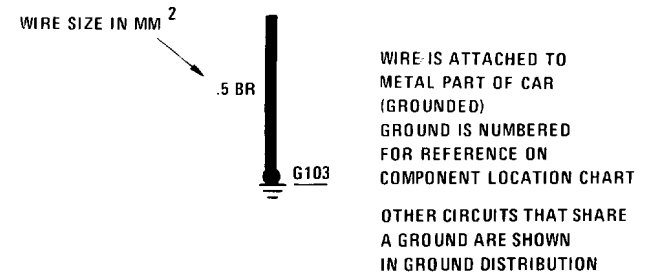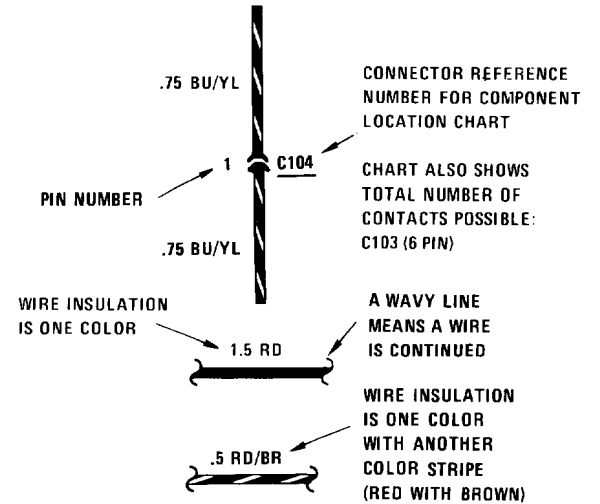


DIODE CURRENT CAN FLOW ONLY IN THE DIRECTION OF THE ARROW

 CIRCUIT REFERENCE - A WIRE WHICH CONNECTS TO ANOTHER CIRCUIT






**ONE POLE,  
TWO POSITION  
SWITCH**

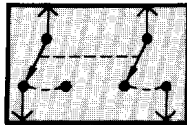


**SWITCHES THAT  
MOVE TOGETHER**

DASHED LINE SHOWS  
A MECHANICAL  
CONNECTION  
BETWEEN SWITCHES

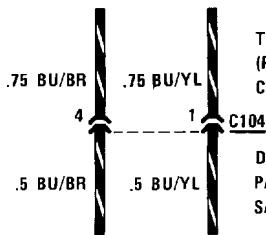


**TWO CONNECTIONS  
(PINS) IN THE SAME  
CONNECTOR**

 DASHED LINE SHOWS  
PARTS OF THE  
SAME CONNECTOR





**WHEN COIL IS  
ENERGIZED, SWITCH  
IS PULLED CLOSED**

 **RELAY SHOWN  
WITH NO  
CURRENT  
FLOWING  
THROUGH  
COIL**






**RESISTOR ACROSS COIL  
IS FOR NOISE  
SUPPRESSION**

**RELAY SHOWN  
WITH RESISTOR  
ACROSS COIL**

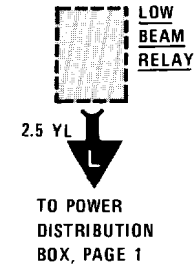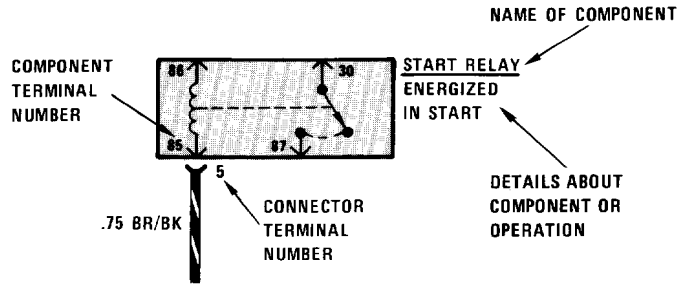

CURRENT PATH  
IS CONTINUED  
AS LABELED.  
THE ARROW SHOWS  
DIRECTION OF CURRENT  
FLOW AND IS REPEATED  
WHERE CURRENT  
PATH CONTINUES.

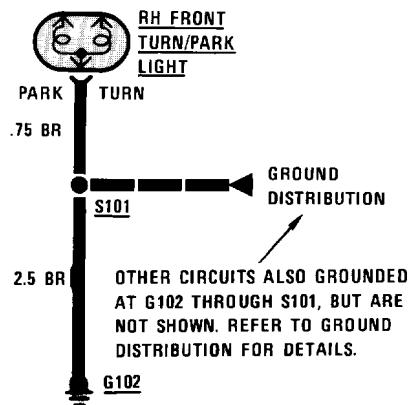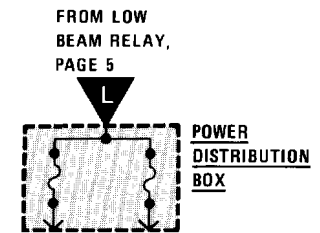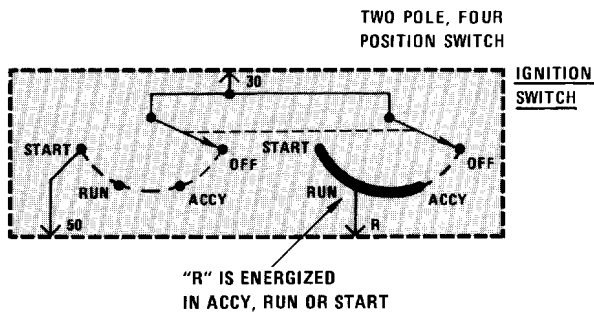

## 6 SYSTEMATIC TROUBLESHOOTING

### TROUBLESHOOTING PROCEDURE

#### 1. Verify the Problem

Operate the problem circuit to check the accuracy of the complaint. Note the symptoms of the inoperative circuit.

#### 2. Analyze the Problem

Refer to the schematic of the problem circuit in the ETM. Determine how the circuit is supposed to work by tracing the current path(s) from the power feed through the circuit components to ground. Then based on the symptoms you noted in step 1 and your understanding of circuit operation, identify one or more possible causes of the problem.

#### 3. Isolate the Problem

Make circuit tests to prove or disprove the preliminary diagnosis made in step 2. Keep in mind that a logical simple procedure is the key to efficient troubleshooting. Test for the most likely cause of failure first. Try to make tests at points which are easily accessible.

#### 4. Repair the Problem

Once the specific problem is identified, make the repair using the proper tools and safe procedures.

#### 5. Check the Problem

Operate the circuit to check for satisfactory circuit operation. Good repair practice calls for rechecking all circuits you have worked on.

### TROUBLESHOOTING TOOLS


Isolating the problem (Step 3 of TROUBLESHOOTING PROCEDURES) requires the use of a **voltmeter** and/or **ohmmeter**. A voltmeter measures voltage at selected points in a circuit. An ohmmeter measures a circuit's resistance to current flow. It has an internal battery that provides current to the circuit under test. Disconnect the car battery when using an ohmmeter because the battery voltage will cause the ohmmeter to give false readings. Also, do not use an ohmmeter on solid-state components. The voltage that the ohmmeter applies to the circuit could damage these components.

### TROUBLESHOOTING TESTS

#### Voltage Test

This test measures voltage in a circuit. By taking measurements at several points (terminals or connectors) along the circuit, you can isolate the problem.

To take a voltage measurement, connect the negative lead of the voltmeter to the battery's negative terminal or other known good ground. Then connect the positive lead of the voltmeter to the point you want to test. The voltmeter will measure the voltage present at that point in the circuit.

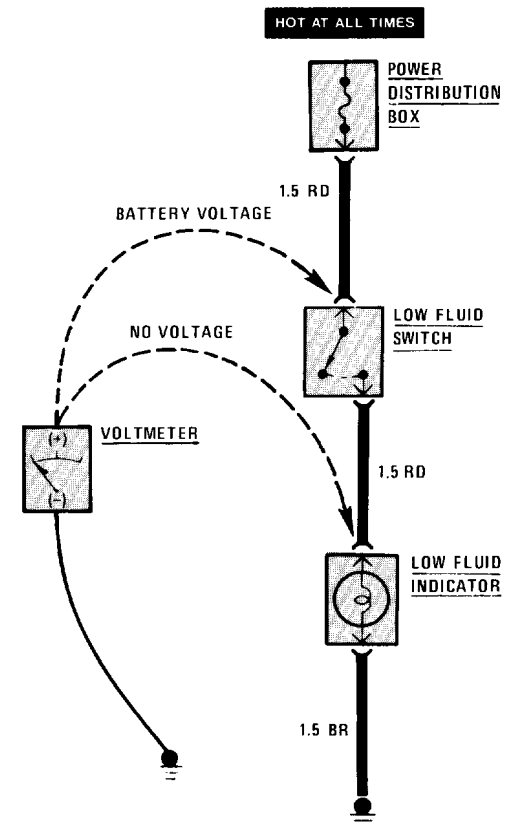


Voltage Test

Voltage Drop Test

Wires, connectors, and switches are designed to conduct current with a minimum loss of voltage. A voltage drop of more than one volt indicates a problem.


To test for voltage drop, connect the voltmeter leads to connectors at either end of the circuit's suspected problem area. The positive lead should be connected to the connector closest to the power source. The voltmeter will show the voltage drop between these two points.

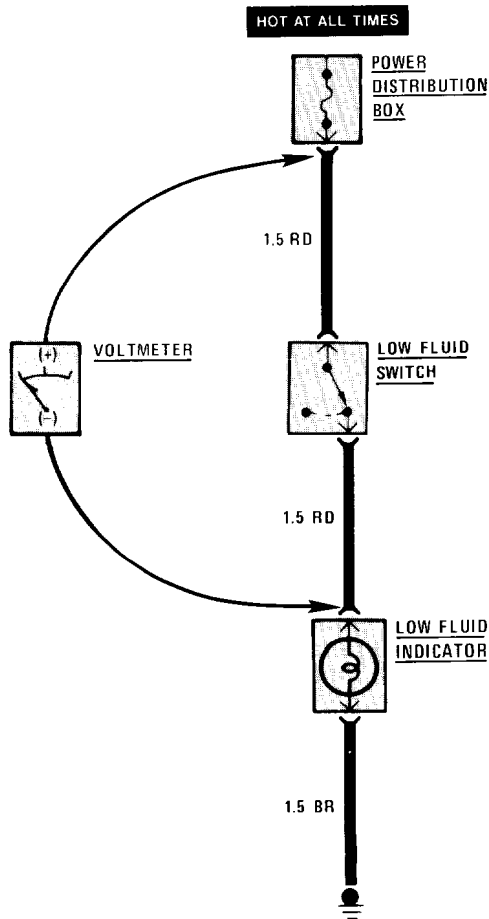

Voltage Drop Test

Continuity Test

To perform a continuity test, first disconnect the car battery. Then adjust the ohmmeter to read zero while holding the leads together. Connect the ohmmeter leads to connector or terminals at either end of the circuit's suspected problem area. The ohmmeter will show the resistance across that part of the circuit.

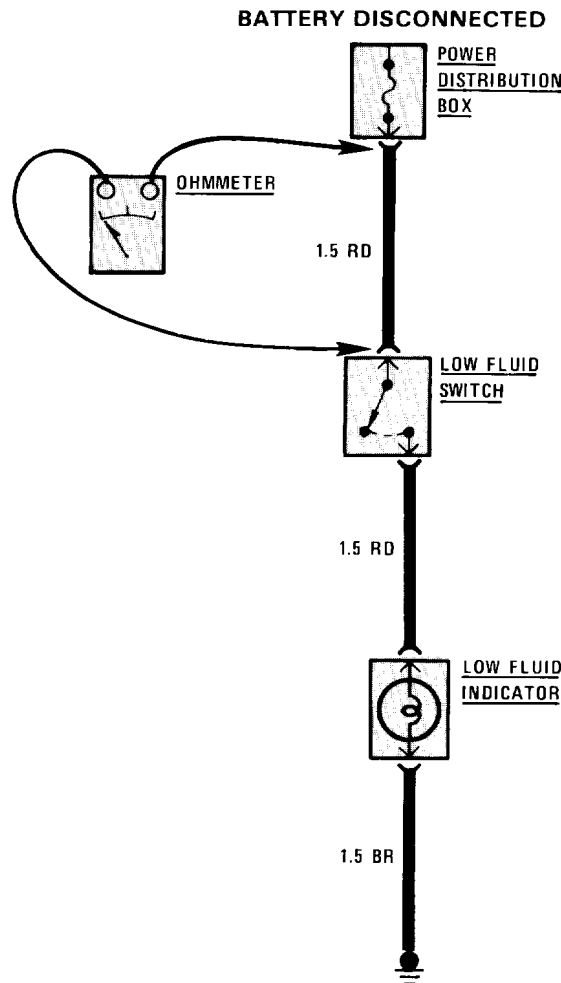


Continuity Test

Short Test Using Voltmeter

Remove the blown fuse and disconnect the load. Connect the voltmeter leads to the fuse terminals. The positive lead should be connected to the terminal closest to the power source.

Starting near the POWER DISTRIBUTION BOX, move the wire harness back and forth and watch the voltmeter reading. If the voltmeter registers a reading, there is a short to ground in the wiring. Somewhere in the area of the harness being moved, the wire insulation is worn away and the circuit is grounding.

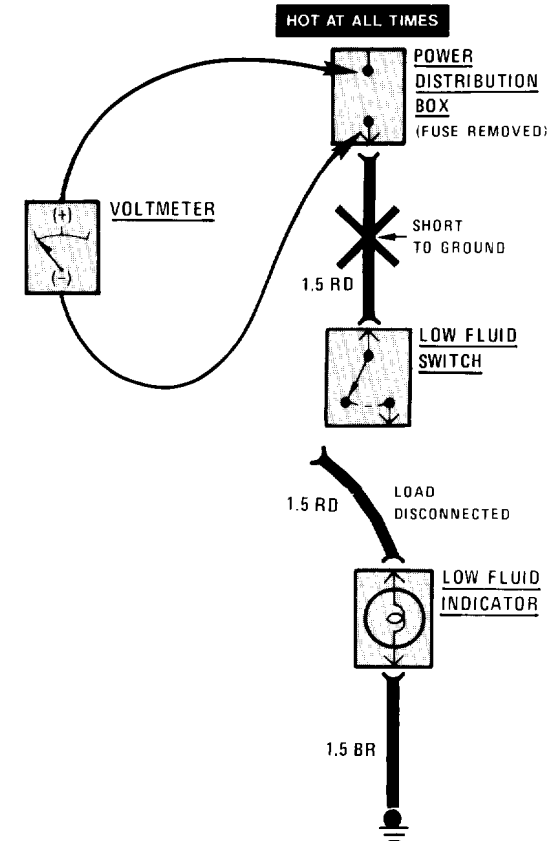


Short Test Using Voltmeter

## 8 SYSTEMATIC TROUBLESHOOTING

### Short Test Using Ohmmeter

Disconnect the battery. Adjust the ohmmeter to read zero while holding the leads together. Remove the blown fuse and disconnect the load. Connect one lead of the ohmmeter to the fuse terminal that is closest to the load. Connect the other lead to a known good ground.

Starting near the POWER DISTRIBUTION BOX, move the wire harness back and forth and watch the ohmmeter reading. Low or no resistance indicates a short to ground in the wiring. Infinitely high resistance indicates no short.

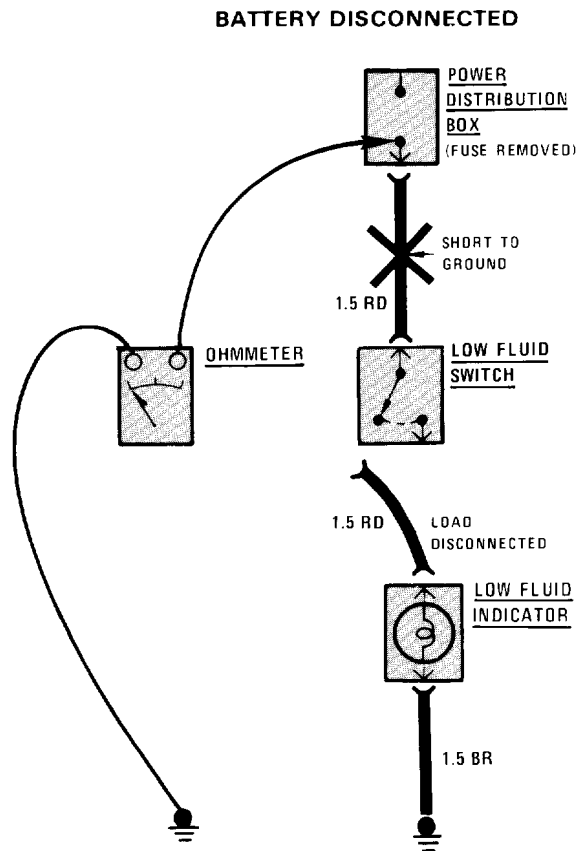

Short Test Using Ohmmeter



# 0670-0 POWER DISTRIBUTION

## POWER DISTRIBUTION BOX

