

# TABLE OF CONTENTS

<b>General Information</b> .....	<b>2</b>	Servicing Center Crankcase Components.....	47
General Specifications.....	2	Assembling Crankcase Half.....	49
Torque Specifications.....	3	Installing Engine/Transmission.....	52
Torque Conversions (ft-lb/N-m).....	3	Troubleshooting.....	54
Break-In Procedure.....	3	<b>Fuel/Lubrication/Cooling</b> .....	<b>57</b>
Gasoline - Oil - Lubricant.....	4	Carburetor.....	57
Genuine Parts.....	5	Throttle Cable Free-Play.....	61
Preparation For Storage.....	5	Engine RPM (Idle).....	61
Preparation After Storage.....	5	Gas Tank.....	61
<b>Periodic Maintenance/Tune-Up</b> .....	<b>6</b>	Gas Tank Valve.....	62
Periodic Maintenance Chart.....	6	Gas/Vent Hoses.....	62
Lubrication Points.....	7	Oil Flow Chart.....	62
Air Filter.....	7	Oil Pump.....	62
Valve/Tappet Clearance.....	8	Troubleshooting.....	63
Testing Engine Compression.....	9	<b>Electrical System</b> .....	<b>64</b>
Spark Plug.....	9	RPM Limiter.....	64
Muffler/Spark Arrester.....	10	Testing Electrical Components.....	64
Engine Oil - Filter.....	10	Electrical Connections.....	64
Transmission Lubricant.....	11	Switches.....	64
Drive Chain.....	11	Battery.....	64
Headlight/Taillight-Brakelight.....	12	Brakelight Switch.....	65
Shift Lever.....	12	Fuse Holder.....	66
Brake Systems.....	13	Ignition Coil.....	66
Burnishing Brake Pads (Rear).....	15	LCD Gauge Assembly.....	67
Checking/Replacing V-Belt.....	15	Ignition Switch.....	68
<b>Steering/Body/Controls</b> .....	<b>17</b>	Handlebar Control Switches.....	68
Body.....	17	Magneto Coils.....	69
Steering Post Cover/Instrument Pod.....	18	Starter Motor.....	69
Steering Post/Tie Rods.....	18	Starter Relay.....	70
Measuring/Adjusting Toe-In/Toe-Out.....	20	CDI Unit.....	70
Front Brake Lever.....	21	Regulator/Rectifier.....	70
Throttle Control.....	22	Start-in-Gear Relay.....	70
Troubleshooting.....	23	Headlights.....	71
<b>Engine/Transmission</b> .....	<b>24</b>	Taillight - Brakelight.....	71
Removing Engine/ Transmission.....	24	Ignition Timing.....	71
Top-Side Components.....	26	Troubleshooting.....	72
Removing Top-Side Components.....	27	<b>Drive System</b> .....	<b>74</b>
Servicing Top-Side Components.....	28	Rear Drive Axle.....	74
Installing Top-Side Components.....	32	Rear Brake Lever/Master Cylinder Assembly.....	76
Left-Side Components.....	34	Troubleshooting Drive System.....	77
Removing Left-Side Components.....	34	<b>Suspension</b> .....	<b>78</b>
Servicing Left-Side Components.....	35	Front Shock Absorbers.....	78
Installing Left-Side Components.....	39	Rear Shock Absorber.....	78
Right-Side Components.....	40	Swing Arm.....	79
Removing Right-Side Components.....	40	Front A-Arms.....	80
Servicing Right-Side Components.....	42	Wheels and Tires.....	82
Installing Right-Side Components.....	43	Troubleshooting.....	83
Disassembling Crankcase Half.....	46		