 


millenia

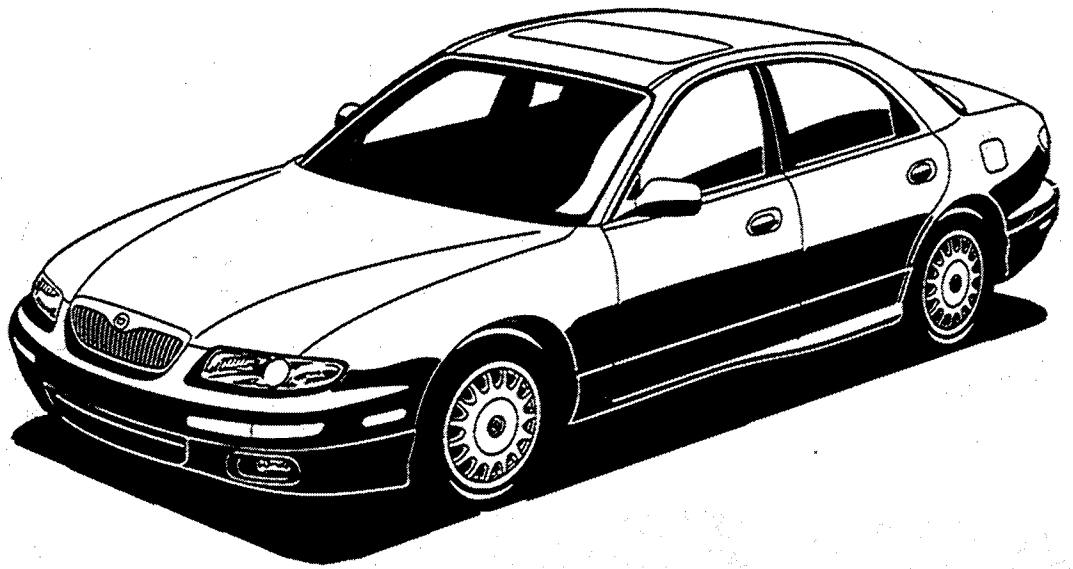

WARNING

Servicing a vehicle can be dangerous. If you have not received service-related training, the risks of injury and property damage increase. The recommended servicing procedures for the vehicle in this workshop manual were developed with Mazda-trained technicians in mind. This manual may be useful to non-Mazda trained technicians, but a technician with our service-related training and experience will be at less risk when performing servicing operations. However, all users of this manual are expected to know general safety procedures.

This manual contains "Warnings" and "Cautions" applicable to risks not normally encountered in a general technician's experience. They should be followed to reduce the risk of injury and the risk that improper service or repair may damage the vehicle or render it unsafe. It is also important to understand that the "Warnings" and "Cautions" are not exhaustive. It is impossible to warn of all the hazardous consequences that might result from failure to follow the procedures.

The procedures recommended and described in this manual are effective methods of performing service and repair. Some require tools specifically designed for a specific purpose. Nonrecommended procedures and tools should include consideration for safety of the technician and continued safe operation of the vehicle.

Parts should be replaced with genuine Mazda replacement parts, not parts of lesser quality. Use of a nonrecommended replacement part should include consideration for safety of the technician and continued safe operation of the vehicle.

1996 Mazda Millenia Workshop Manual

FOREWORD

A thorough familiarization with this manual is important for proper repair and maintenance. It should always be kept in a handy place for quick and easy reference.

The contents of this manual, including drawings and specifications, are the latest available at the time of printing. As modifications affecting repair or maintenance occur, relevant information supplementary to this volume will be made available at Mazda dealers. This manual should be kept up-to-date.

Mazda Motor Corporation reserves the right to alter the specifications and contents of this manual without obligation or advance notice.

All rights reserved. No part of this book may be reproduced or used in any form or by any means, electronic or mechanical—including photocopying and recording and the use of any kind of information storage and retrieval system—without permission in writing.

WARRANTY

The manufacturer's warranty on Mazda vehicles and engines can be voided if improper service or repairs are performed by persons other than those at an Authorized Mazda Dealer.

**Mazda Motor Corporation
HIROSHIMA, JAPAN**

APPLICATION:

This manual is applicable to vehicles beginning with the Vehicle Identification Numbers (VIN), and related materials shown on the following page.

CONTENTS

Title		Section
General Information		GI
Engine	KL	B1
	KJ	B2
Lubrication System		D
Cooling System		E
Fuel and Emission Control Systems	KL	F1
	KJ	F2
Engine Electrical System		G
Automatic Transaxle	GF4A-EL	K1
	LJ4A-EL	K2
Front and Rear Axles		M
Steering System		N
Braking System and Traction Control System		P
Wheels and Tires		Q
Suspension		R
Body		S
Body Electrical System		T
Heater and Air Conditioning Systems		U

© 1995 Mazda Motor Corporation
PRINTED IN U.S.A. AUG. '95
Form No. 1491-10-95H
Part No. 9999-95-058B-96

VEHICLE IDENTIFICATION NUMBERS (VIN)

JM1 TA221*T1 200001—

JM1 TA222*T1 200001—

RELATED MATERIALS

MILLENNIA Service Highlights	9999-95-095F-95
1996 Protégé, MX-3, MX-5, 626/MX-6, 929, MPV, Millenia Service Highlights	9999-95-MODL-96
MILLENNIA Wiring Diagram	9999-95-036G-96
Engine Workshop Manual KL	9999-95-EWKL-95
Engine Workshop Manual KJ	9999-95-EWKJ-95
ATX Workshop Manual GF4A-EL	9999-95-GF4A-95
ATX Workshop Manual LJ4A-EL	9999-95-LJ4A-95

GENERAL INFORMATION

SAFETY INFORMATION	GI- 2	ELECTRICAL TROUBLESHOOTING	
LUBRICANTS	GI- 2	TOOLS	GI-14
JACKING POSITIONS	GI- 2	TEST LIGHT	GI-14
SAFETY STAND POSITIONS	GI- 2	JUMPER WIRE	GI-14
VEHICLE LIFT POSITIONS	GI- 3	VOLTMETER	GI-14
DYNAMOMETER	GI- 3	OHMMETER	GI-14
COMPRESSED AIR	GI- 3	ELECTRICAL PARTS	GI-15
HOW TO USE THIS MANUAL	GI- 4	BATTERY CABLE	GI-15
ADVISORY MESSAGES	GI- 4	CONNECTORS	GI-15
PREPARATION	GI- 4	TERMINALS	GI-16
REPAIR PROCEDURE	GI- 4	SENSORS, SWITCHES, AND	
SYMBOLS	GI- 5	RELAYS	GI-16
IDENTIFICATION NUMBER		WIRING HARNESS	GI-17
LOCATIONS	GI- 6	FUSE	GI-17
ABBREVIATIONS	GI- 7	INSTALLATION OF RADIO SYSTEM	GI-18
UNITS	GI- 8	AUDIO ANTITHEFT SYSTEM	GI-18
SAE STANDARDS	GI- 9	TOWING	GI-19
FUNDAMENTAL PROCEDURES	GI-11	PRE-DELIVERY INSPECTION	GI-20
PROTECTION OF THE VEHICLE ..	GI-11	PRE-DELIVERY INSPECTION	
PREPARATION OF TOOLS AND		TABLE	GI-20
MEASURING EQUIPMENT	GI-11	SCHEDULED MAINTENANCE	GI-21
SPECIAL TOOLS	GI-11	SCHEDULED MAINTENANCE TABLE	
REMOVAL OF PARTS	GI-11	(EXCEPT CANADA)	GI-21
DISASSEMBLY	GI-11	SCHEDULED MAINTENANCE TABLE	
REASSEMBLY	GI-12	(CANADA)	GI-24
ADJUSTMENTS	GI-13		
RUBBER PARTS AND TUBING	GI-13		
HOSE CLAMPS	GI-13		
TORQUE FORMULAS	GI-13		
WISE	GI-13		

SAFETY INFORMATION

LUBRICANTS

Avoid prolonged and repeated contact with petroleum-based oils. Used oil may irritate the skin, and can cause skin cancer and other skin disorders.

Wash thoroughly after working with oil. We recommend water-soluble hand cleaners. Do not use kerosene, gasoline, or any other solvent to remove oil from your skin.

If repeated or prolonged contact with oil is necessary, wear protective clothing. Soiled clothing, particularly those soiled with used oils and greases containing lead, should be cleaned at regular intervals.

JACKING POSITIONS

 
Warning

- **Improperly jacking a vehicle is dangerous. The vehicle can slip off the jack and cause serious injury. Use only the correct front and rear jacking positions and block the wheels.**

Use safety stands to support the vehicle after it has been lifted.

Front


At the center of the crossmember

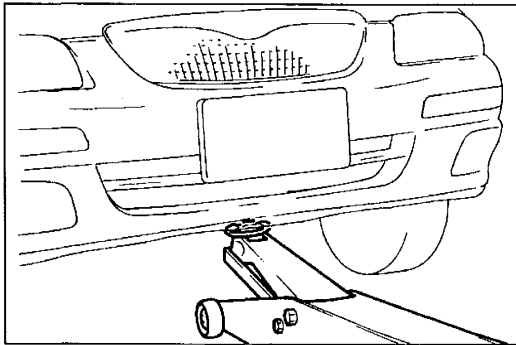

46UGIX-004

Rear

 At the center of the crossmember

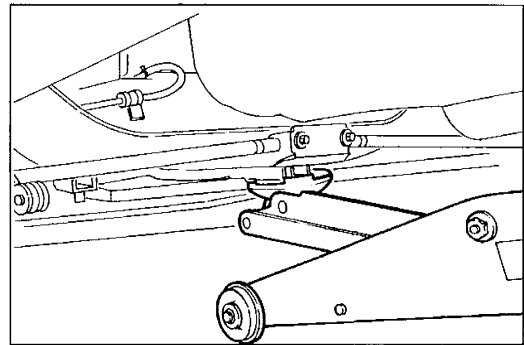


46UGIX-005

SAFETY STAND POSITIONS

Front

 
Both sides of the vehicle

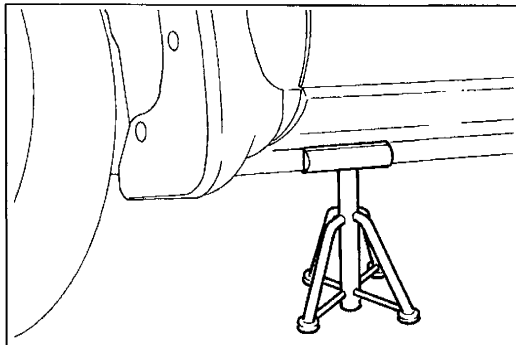

46UGIX-006

Rear

 Both sides of the vehicle

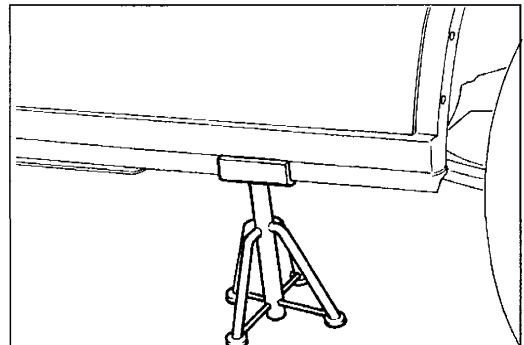


46UGIX-007

VEHICLE LIFT POSITIONS


GI

 Front

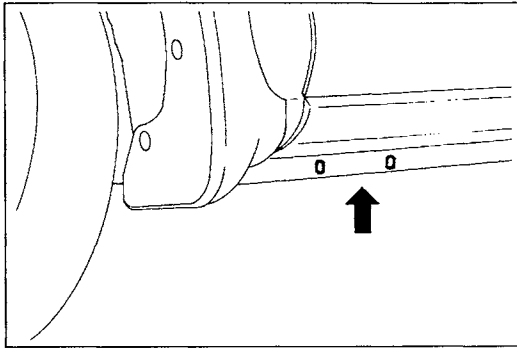

46UGIX-008

 Rear

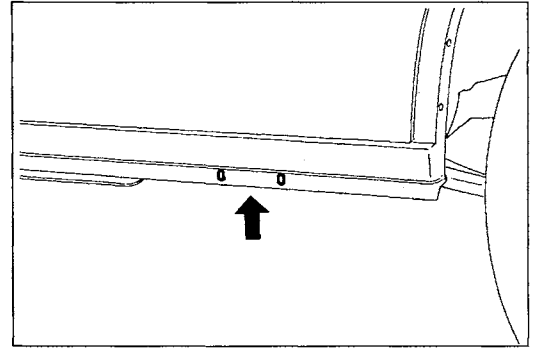

46UGIX-009

DYNAMOMETER

When test-running a vehicle on a dynamometer;

- Place a fan, preferably a vehicle-speed proportional type, in front of the vehicle.
- Connect an exhaust gas ventilation unit.
- Cool the exhaust pipes with a fan.
- Keep the area around the vehicle uncluttered.
- Watch the water temperature gauge.

COMPRESSED AIR

When using compressed air to clean or remove parts;

- Wear protective eye wear.
- Hold a rag over the opening to prevent parts from shooting out.
- Take precautions so that people around you are not struck by flying debris.

HOW TO USE THIS MANUAL

ADVISORY MESSAGES

You'll find several **Warnings**, **Cautions**, and **Notes** in this manual.

Warning

- A **Warning** indicates a situation in which serious injury or death could result if the warning is ignored.

Caution

- A **Caution** indicates a situation in which damage to the vehicle could result if the caution is ignored.

 
Note

- A **Note** provides added information that will help you to complete a particular procedure.

PREPARATION

This points out the needed **SSTs** for the service operation. It is best to gather all necessary **SSTs** before beginning work.


Example:

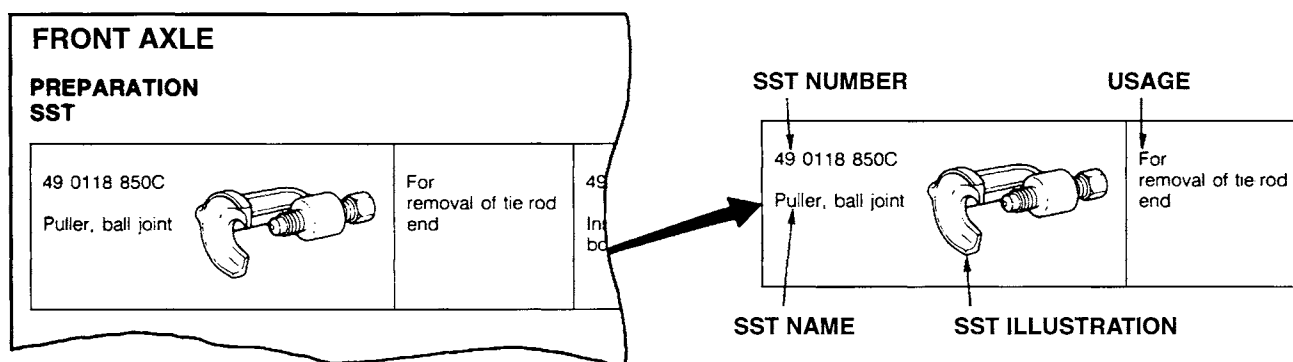

REPAIR PROCEDURE

1. Most repair operations begin with an overview illustration. It identifies the components, shows how the parts fit together, and describes visual part inspection. If a damaged or worn part is found, repair or replace it as necessary.
2. Expendable parts, tightening torques, and symbols for oil, grease, and sealant are shown in the overview illustration.
3. Pages related to service procedures are shown under the illustration. Refer to this information when servicing the related part.

 Example:

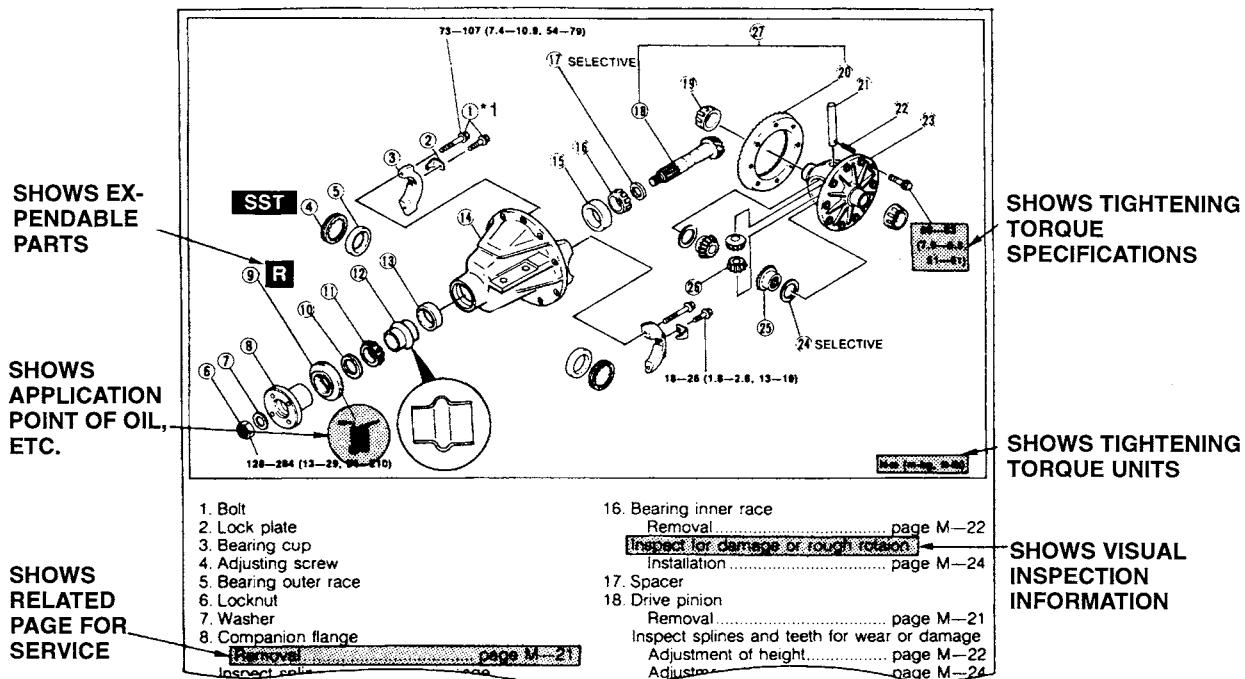

*1: The numbers (①, etc.) refer to part identification and servicing procedures.


SYMBOLS

There are seven symbols indicating oil, grease, and sealant. These symbols show the points of applying such materials during service.

Symbol	Meaning	Kind
	Apply oil	New engine oil or gear oil as appropriate
	Apply brake fluid	FMVSS116: DOT-3
	Apply automatic transaxle fluid	M-III or Dexron®II
	Apply grease	Appropriate grease
	Apply sealant	Appropriate sealant
	Apply petroleum jelly	Appropriate petroleum jelly
	Replace part	O-ring, gasket, etc.


IDENTIFICATION NUMBER LOCATIONS

 VEHICLE IDENTIFICATION NUMBER (VIN)

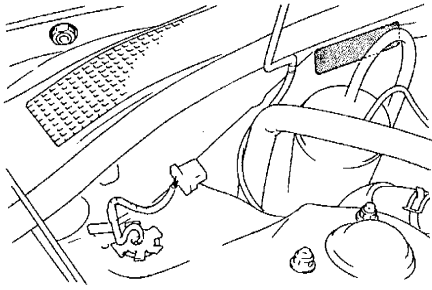


ENGINE MODEL AND NUMBER

 KL

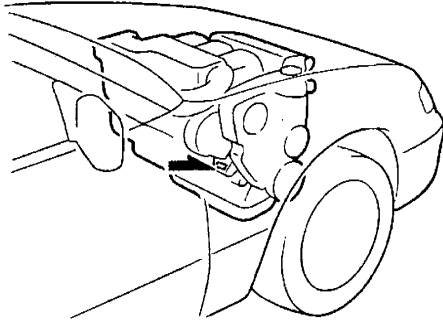

KJ

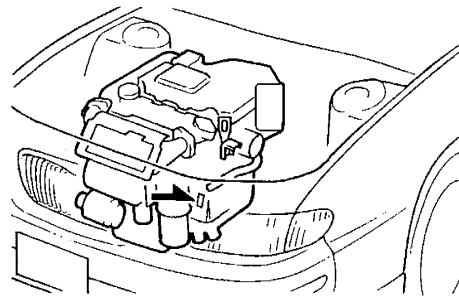 

46UGIX-017