Repair Manual



R 1100 S

BMW AG Motorcycle Division After Sales

Published by: © BMW AG Motorcycle Division After Sales UX-VS-2

All rights reserved. Not to be reprinted, translated or duplicated either wholly or in part without prior written permission. Errors and omissions excepted; subject to technical amendment.

 
Produced in Germany 06/99

Introduction

This repair manual will help you to perform all the main maintenance and repair work correctly and efficiently. It should be consulted regularly by workshop personnel as an addition to the practical and theoretical knowledge obtained in Training School courses. It is a contribution towards achieving even higher Service quality.

All information in both text and illustrations refers to motorcycles in standard condition or with genuine BMW accessories installed, and not to motorcycles which have been modified in any way to depart from the manufacturer's specification.

- The repair manual is structured in the logical sequence of the work to be performed: Removal, Disassembly, Repair, Assembly, Installation.
- The entire contents are divided into individual chapters, corresponding to the Construction Groups.



- Work to be performed during an Inspection is described in Group "00". The various inspection routines are numbered I, II, III and IV. This numbering is repeated in the work descriptions which follow, so that work can take place without interruption.
- Use of the BMW special tools needed for certain tasks is described in the work instructions.

If the need arises, repair instructions are also issued in the form of Service Information. This information is of course incorporated into the next issue of the repair manual. We also recommend you to consult the detailed illustrations on the Parts microfiches as an additional source of information.

BMW AG Motorcycle Division After Sales

Published by:

BMW AG, Sparte Motorrad Hufelandstr. 6 D - 80937 München

All rights reserved. Not to be reprinted, translated or duplicated either wholly or in part without prior written permission.

Errors and omissions excepted; subject to technical amendment. Produced in Germany

Contents

Group / Chapter

00 Maintenance and general instructions

11 Engine

12 Engine electrics

13 Fuel preparation and control

16 Fuel tank and lines

18 Exhaust system

21 Clutch

23 Gearbox

31 Front fork

32 Steering

33 Rear wheel drive



Group / Chapter

34 Brakes

36 Wheels and tyres

46 Frame

51 Equipment

52 Seat

61 General electrical equipment

62 Instruments

63 Lights















BMW AG Motorcycle Division Maintenance schedule R 1100 S

		5	, the second sec	δE	n
Customer	Licence plate No.	BMW Inspection at 1,000 km (600 miles)	Service 10,000 miles)	BMW Inspection every 20,000 km (12,000 miles)	BMW Annual Service
Order No.	Mechanic's signature	BMW at 1,0 (600 r	BMW every (6,000	BMW every (12,00	BMW Annu
Read out the fault memory with the BMW MoDiTeC unit					
Change the oil while at regular operating temperature and renew the oil filter element if motorcycle is used only for short journeys or at outside temperatures under 0°C, every 3 months, but at least every 3,000 km (1,800 miles) *)					
Change the oil in the gearbox while at regular operating temperature at least every 2 years					every 2 years
Change the oil in the rear wheel drive Clean the inductive sensor at the rear every 40,000 km (24,000 miles) or at least ever	wheel			40,000 (24,000)	every 2 years
Renew fuel filter *) normally every 40,000 km (24,000 miles), if fue	quality is poor every 20,000 km (12,000 miles)			40,000 (24,000)	
Check battery acid level, if necessary Clean/grease battery poles if necessar					
Renewing intake air cleaner element in very dusty or dirty operating conditions, ren every 10,000 km (6,000 miles) or even more off					
Renew Poly-V belt *) Renew Poly-V belt every 60,000 km (36,000 mi	es); do not adjust			60,000 (36,000)	
Check brake fluid level at front/rear an	d top up if necessary *)				
Check operation of brake system and repair/renew items if necessary $^{\star)}$	freedom from leaks;				
Examine brake pads and discs for we	ar, renew if necessary *)				
Renew the brake fluid annually					
Check clutch operating fluid level					
Change clutch fluid every 40,000 km (24,000 miles) or at least ever	y 2 years *)			40,000 (24,000)	every 2 years
Check tightness of rear wheel studs					
Check rear wheel bearing play by tilting	g wheel				
Check swinging arm bearings (zero pl	ay); adjust if necessary *)				
Grease the side (prop) stand pivot					
Check function of side (prop) stand co	ntact switch				
Check condition of spark plugs				_	
Renew spark plugs *)					
Take up slack at cylinder head nuts					
Check/adjust valve operating clearance					
Check throttle cable for free movemen Check free travel in throttle cable Check synchronisation and eliminate a	nt, abrasion and kinking; renew if necessary *)				
 Final inspection with road safety and f condition of tyres and wheels, tyre lights and signalling equipment telltale and warning lights clutch, gear shift handbrake and foot brake, steering instruments trial run if necessary *) Charged as an additional item 	pressures				

BMW AG Motorcycle Division Pre-delivery check R 1100 S



Customer	Licence plate No.	BMW Pre-delivery check		
Order No.	Mechanic's signature			
Checking the shipping crate for damage				
Motorcycle: - unpack - attach items supplied loose - inspect for damage - check that delivery is complete:	tools documentation keys correct optional extras			
Fill and charge the battery (mark with charging date)				
Check engine oil level when cold; add oil if necessary				
Check clutch operating fluid level and brake fluid levels at front and rear				
Check headlight beam angle and adjust if necessary				
Checking tightness of rear wheel studs (comply with correct tightening torque)				
Check tyre pressures				
Add fuel				
 Final inspection and functional check: clutch, gear shift handbrake, foot brake lighting and signalling equipment, telltale lights, instruments check operation of optional extras, ABS trial run if necessary 				
Confirm pre-delivery check in Service				
Final cleaning				
Motorcycle handed over on:				