

2009 BUELL® SERVICE MANUAL



BUELL® 1125 MODELS

OFFICIAL FACTORY MANUAL - 99491-09Y

IMPORTANT NOTICE

Buell motorcycles conform to all applicable U.S.A. Federal Motor Vehicle Safety Standards and U.S.A. Environmental Protection Agency regulations effective on the date of manufacture.

To maintain the safety, dependability, and emission and noise control performance, it is essential that the procedures, specifications and service instructions in this manual are followed.

Any substitution, alteration or adjustment of emission system and noise control components outside of factory specifications may be prohibited by law.

Buell Motorcycle Company




2009 Buell 1125 Models Service Manual

©2008 Buell Motorcycle Company
ALL RIGHTS RESERVED
99491-09Y

Printed in the U.S.A.

VISIT THE BUELL WEB SITE
<http://www.buell.com>

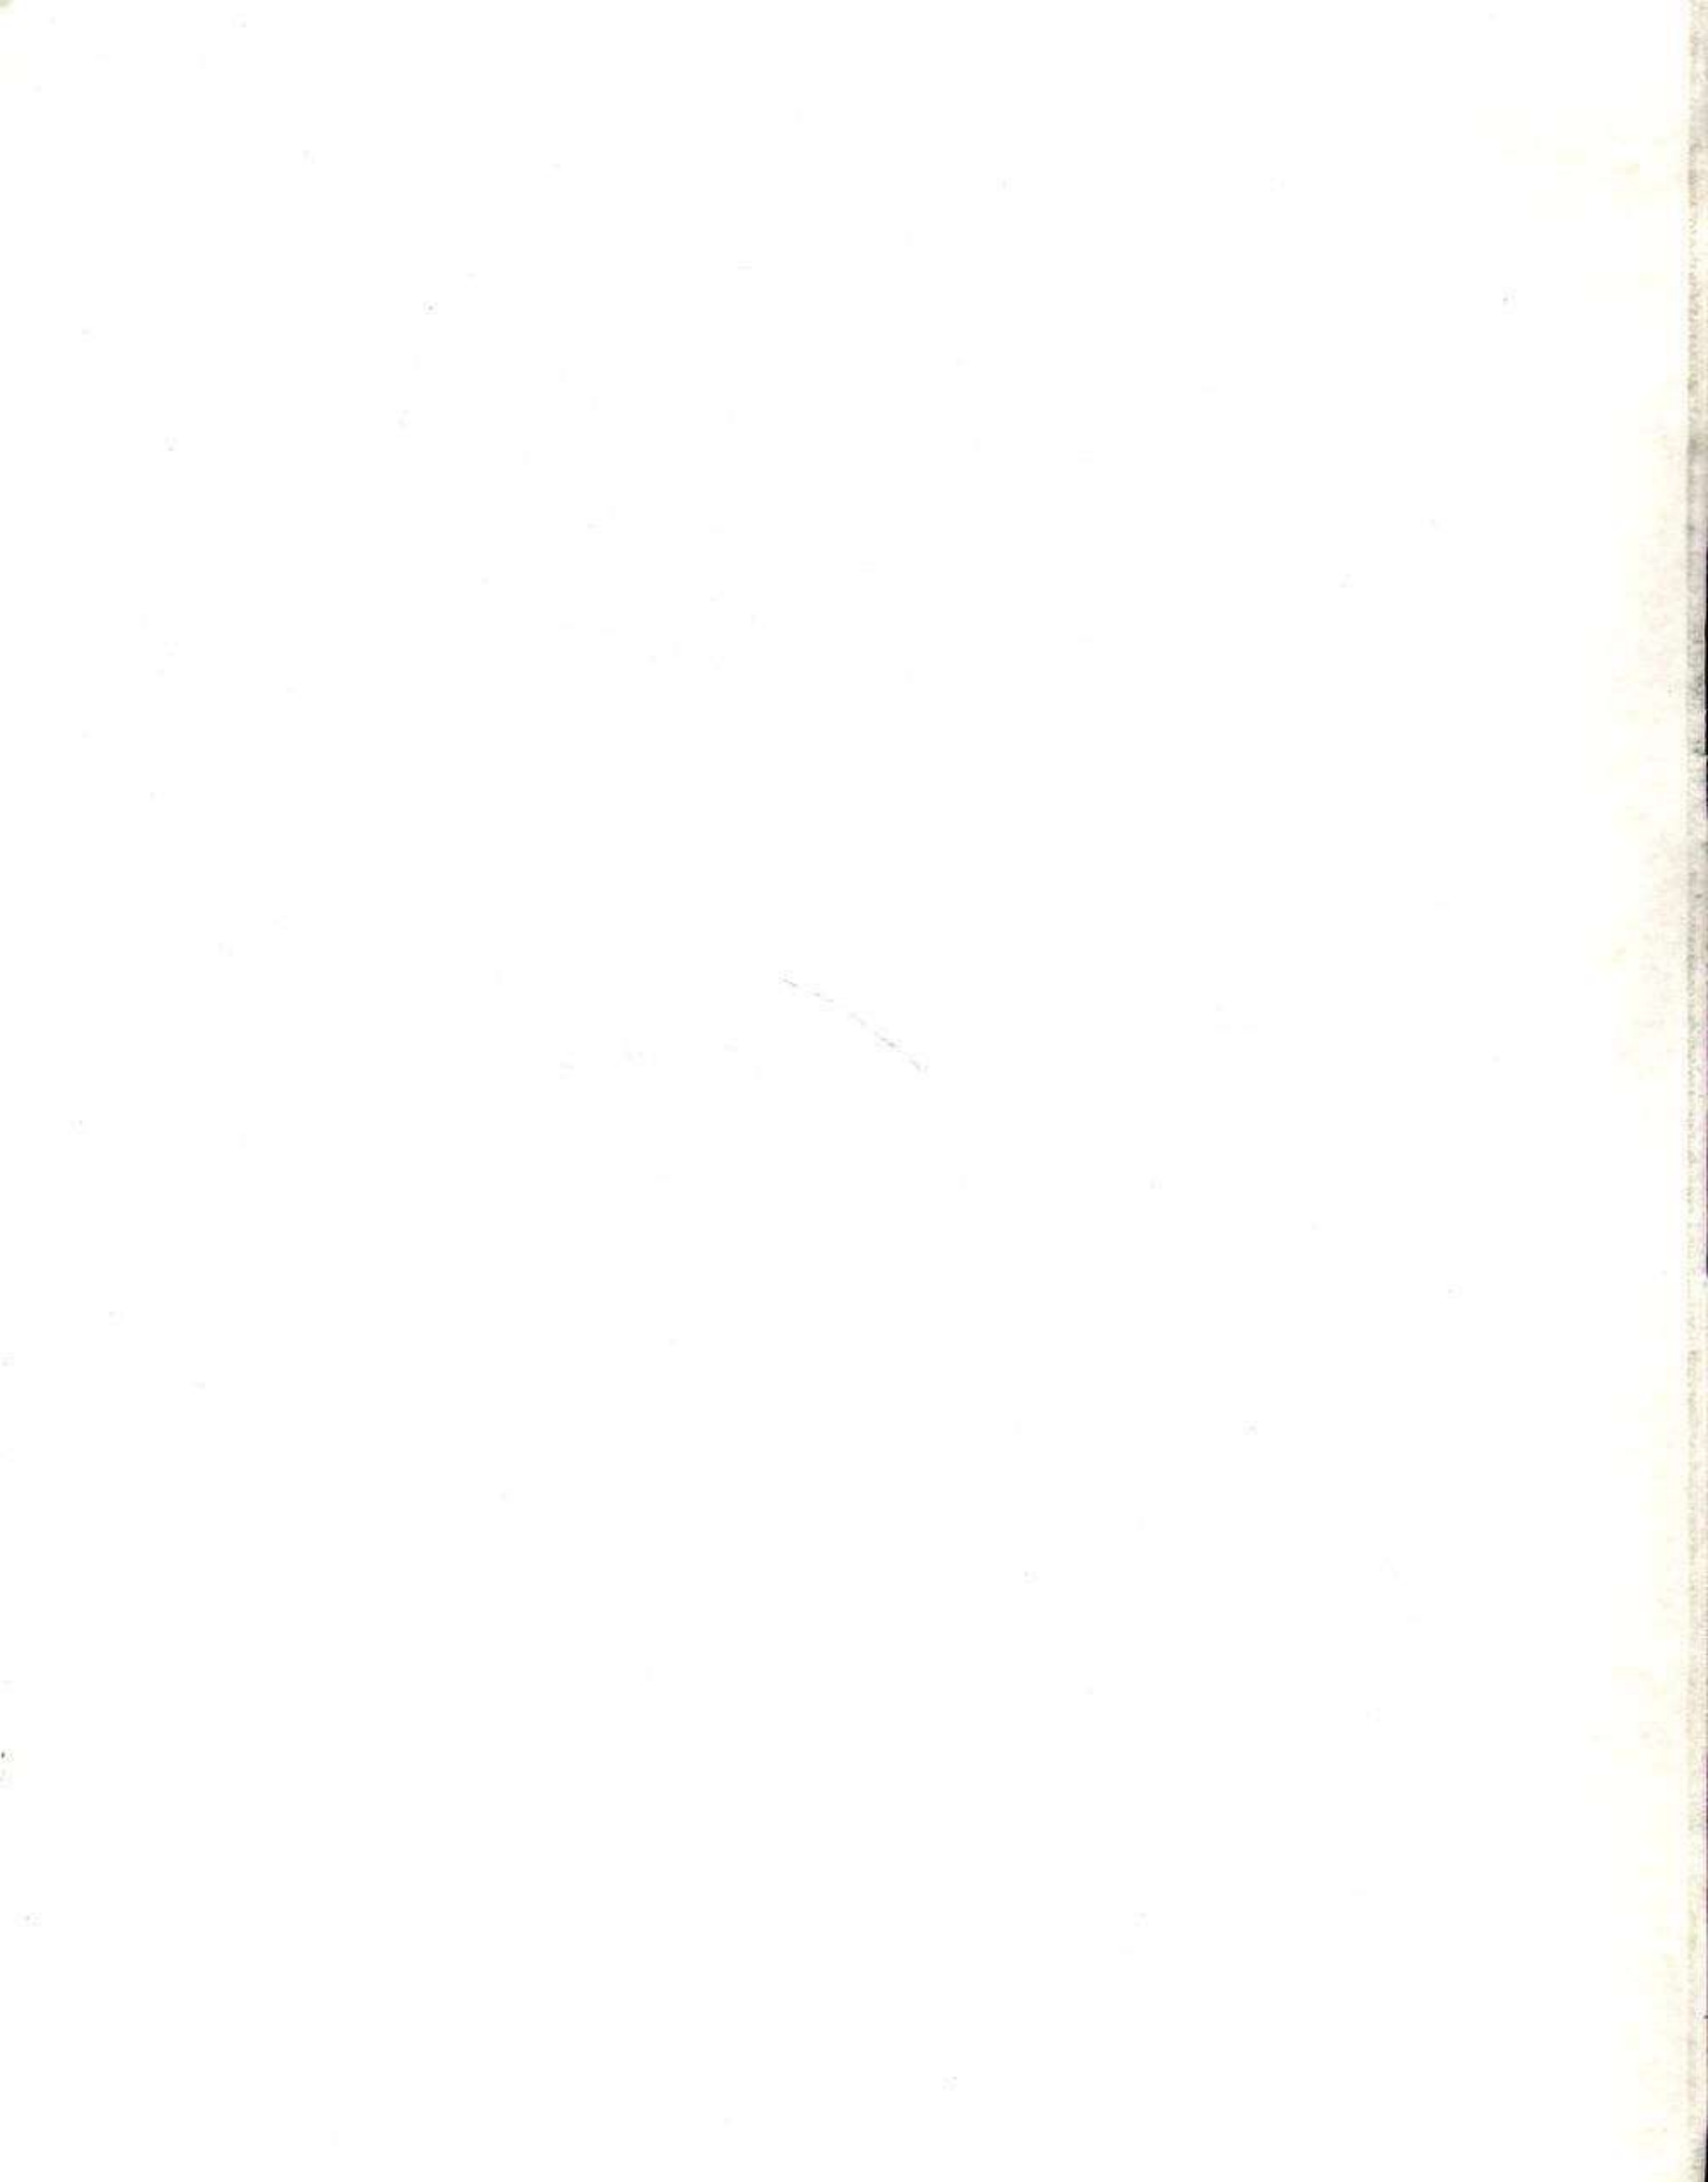

NOTES

READER COMMENTS

The Buell Motorcycle Company maintains a continuous effort to improve the quality and usefulness of its publications. To do this effectively, we need user feedback - your critical evaluation of this manual.

Please comment on the completeness, accuracy, organization, usability, and readability of this manual.

Please list the page, item, and part number(s) of any errors you find in this manual.

Please tell us how we can improve this manual.

Occupation:

Name:

Dealership:

Street:

Department:

City:

State:

Zip:

2009 Buell 1125 Models Service Manual (99491-09Y)

Please clip out and mail to:
Service Communications Department
Buell Motorcycle Company
P.O. Box 653
Milwaukee, WI USA 53201

ABOUT THIS MANUAL

GENERAL

This Service Manual has been prepared with two purposes in mind. First, it will acquaint the user with the construction of the Buell product and assist in the performance of basic maintenance and repair. Secondly, it will introduce to the professional Buell Technician the latest field-tested and factory-approved major repair methods. We sincerely believe that this Service Manual will make your association with Buell products more pleasant and profitable.

HOW TO USE YOUR SERVICE MANUAL

Refer to the table below for the content layout of this manual.

NO.	CHAPTER
1	Maintenance
2	Chassis
3	Engine
4	Fuel System
5	Cooling System
6	Drive/Transmission
7	Electrical
A	Appendix A Connector Repair
B	Appendix B Wiring
C	Appendix C Valve Lash
D	Appendix D Conversions
E	Appendix E Glossary

Use the TABLE OF CONTENTS (which follows this FOREWORD) and the INDEX (at the back of this manual) to quickly locate subjects. Sections and topics in this manual are sequentially numbered for easy navigation.

For example, a cross-reference shown as **2.1 SPECIFICATIONS** refers to chapter 2 CHASSIS, heading 2.1 SPECIFICATIONS.

For quick and easy reference, all pages contain a section number followed by a page number. For example, **page 3-5** refers to page 5 in section 3.

A number of acronyms and abbreviations are used in this document. See the E.1 GLOSSARY for a list of acronyms, abbreviations and definitions.

PREPARATION FOR SERVICE

WARNING

Stop the engine when refueling or servicing the fuel system. Do not smoke or allow open flame or sparks near gasoline. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00002a)

Good preparation is very important for efficient service work. A clean work area at the start of each job will allow you to perform the repair as easily and quickly as possible, and will reduce the incidence of misplaced tools and parts. A motorcycle that is excessively dirty should be cleaned before work starts. Cleaning will occasionally uncover sources of trouble. Tools, instruments and any parts needed for the job should be

gathered before work is started. Interrupting a job to locate tools or parts is a distraction and causes needless delay.

NOTES

- *To avoid unnecessary disassembly, carefully read all relative service information before repair work is started.*
- *In figure legends, the number which follows the name of a part indicates the quantity necessary for one complete assembly.*

SERVICE BULLETINS

In addition to the information presented in this manual, Buell Motor Company will periodically issue Service Bulletins to Buell dealers. Service Bulletins cover interim engineering changes and supplementary information. Consult the Service Bulletins to keep your product knowledge current and complete.

USE GENUINE REPLACEMENT PARTS

WARNING

Do not use aftermarket parts and custom made front forks which can adversely affect performance and handling. Removing or altering factory installed parts can adversely affect performance and could result in death or serious injury. (00001a)

To verify satisfactory and lasting repairs, carefully follow the manual instructions and use only genuine Buell replacement parts. This is your assurance that the parts you are using will fit right, operate properly and last longer.

WARNINGS AND CAUTIONS

Statements in this manual preceded by the following words are of special significance.

WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury. (00119a)

CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. (00139a)

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage. (00140a)

NOTE

Refers to important information, and is placed in italic type. It is recommended that you take special notice of these items.

Proper service and repair is important for the safe, reliable operation of all mechanical products. The service procedures recommended and described in this manual are effective methods for performing service operations.

WARNING

Always wear proper eye protection when using hammers, arbor or hydraulic presses, gear pullers, spring compressors, slide hammers and similar tools. Flying parts could result in death or serious injury. (00496b)

Some of these service operations require the use of tools specially designed for the purpose. These special tools should be used when and as recommended. It is important to note that some warnings against the use of specific service methods, which could damage the motorcycle or render it unsafe, are stated in this manual. However, please remember that these warnings are not all-inclusive. Inadequate safety precautions could result in death or serious injury.

Since Buell Motorcycle Company could not possibly know, evaluate or advise the service trade of all possible ways in which service might be performed, or of the possible hazardous consequences of each method, we have not undertaken any such broad evaluation. Accordingly, anyone who uses a service procedure or tool which is not recommended by Buell Motorcycle Company must first thoroughly satisfy himself that neither his nor the operator's safety will be jeopardized as a result. Failure to do so could result in death or serious injury.

PRODUCT REFERENCES

WARNING

Read and follow warnings and directions on all products. Failure to follow warnings and directions can result in death or serious injury. (00470b)

When reference is made in this manual to a specific brand name product, tool or instrument, an equivalent product, tool or instrument may be substituted.

Kent-Moore Products

All tools mentioned in this manual with an "HD", "J" or "B" preface must be ordered through SPX Kent-Moore. For ordering

information or product returns, warranty or otherwise, visit www.spx.com.

Loctite Sealing and Threadlocking Products

Some procedures in this manual call for the use of Loctite products. If you have any questions regarding Loctite product usage or retailer/wholesaler locations, please contact Loctite Corp. at www.loctite.com.

PRODUCT REGISTERED MARKS

Alcantara S.p.A., Allen, Amp Multilock, Bluetooth, Brembo, Delphi, Deutsch, Dunlop, Dynojet, Fluke, G.E. Versilube, Gunk, Hydroseal, Hylomar, Kevlar, Lexan, Loctite, Lubriplate, Keps, K&N, Magnaflux, Marson Thread-Setter Tool Kit, MAXI fuse, Molex, MPZ, Multilock, Novus, Packard, Pirelli, Permatex, Philips, PJ1, Pozidriv, Robinair, S100, Sems, Snap-on, Teflon, Threadlocker, Torca, Torco, TORX, Tufoil, Tyco, Ultratorch, Velcro, X-Acto, and XM Satellite Radio are among the trademarks of their respective owners.

H-D MICHIGAN, INC. TRADEMARK INFORMATION

1125CR, 1125R, Blast, Buell, Firebolt, Glaze, Gloss, Harley, Harley-Davidson, HD, H-D, Lightning, Sunwash, Tender, Triple Tail, Thunderstorm, Ulysses, Uniplanar, ZTL and ZTL-2 are among the trademarks of H-D Michigan, Inc.

CONTENTS

All photographs, illustrations and procedures in this manual may not necessarily depict the most current model or component, but are based on the latest production information available at the time of publication.

Since product improvement is our continual goal, Buell Motorcycle Company reserves the right to change specifications, equipment or designs at any time without notice and without incurring obligation.

MAINTENANCE

1.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	1-1
---	-----

1.2 GENERAL

Servicing a New Motorcycle.....	1-3
Safe Operating Maintenance.....	1-3
Shop Practices.....	1-3
Repair Notes.....	1-3
Safety.....	1-3
Removing Parts.....	1-3
Cleaning.....	1-3
Disassembly and Assembly.....	1-3
Checking Torques on Fasteners with Lock Patches.....	1-4
Magnetic Parts Trays.....	1-4
Repair and Replacement Procedures.....	1-4
Hardware and Threaded Parts.....	1-4
Threadlocking Agents.....	1-4
Wiring, Hoses and Lines.....	1-4
Instruments and Gauges.....	1-4
Bearings.....	1-4
Bushings.....	1-4
Gaskets.....	1-4
Lip Type Seals.....	1-4
O-Rings (Preformed Packings).....	1-4
Gears.....	1-5
Shafts.....	1-5
Part Replacement.....	1-5
Exhaust System Leakage.....	1-5
Cleaning.....	1-5
Part Protection.....	1-5
Cleaning Process.....	1-5
Rust or Corrosion Removal.....	1-5
Bearings.....	1-5
Tool Safety.....	1-5
Air Tools.....	1-5
Wrenches.....	1-5
Pliers/Cutters/Pry bars.....	1-5
Hammers.....	1-5
Punches/Chisels.....	1-6
Screwdrivers.....	1-6
Ratchets and Handles.....	1-6
Sockets.....	1-6
Storage Units.....	1-6

1.3 MAINTENANCE SCHEDULE

General.....	1-7
--------------	-----

1.4 FUEL AND OIL

Fuel.....	1-9
Gasoline Blends: Buell Models.....	1-9
Engine Lubrication.....	1-9

1.5 ENGINE OIL AND FILTER

Checking Oil Level.....	1-10
Oil Level Cold Check.....	1-10
Oil Level Hot Check.....	1-10
Engine Oil Change: Buell 1125 Models.....	1-11

1.6 AIR FILTER ELEMENT

Intake Cover.....	1-13
Removal.....	1-13
Installation.....	1-13
Removal.....	1-13

Cleaning and Inspection.....	1-14
Installation.....	1-14

1.7 THROTTLE CABLES

Throttle Cable Adjustment.....	1-15
--------------------------------	------

1.8 TIRES AND WHEELS

Tire Replacement: Buell Pirelli Tires.....	1-16
Inspection.....	1-16
When To Replace Tires.....	1-16
Wheel Bearings.....	1-16

1.9 BLEEDING CLUTCH FLUID LINE

Hydraulic Clutch: Buell 1125 Models.....	1-17
General.....	1-17
Checking Fluid Level.....	1-17
Bleeding.....	1-17
Reservoir Banjo Bolt.....	1-17
Bleeder Valve.....	1-18

1.10 DRIVE BELT MAINTENANCE

Inspection.....	1-19
Rear Sprocket.....	1-19
Drive Belt.....	1-19
Idler Pulley.....	1-21

1.11 BRAKE SYSTEM MAINTENANCE

General.....	1-22
Checking Fluid Level.....	1-22
Front Brake Fluid Reservoir.....	1-22
Rear Brake Fluid Reservoir.....	1-23
Bleeding Brakes.....	1-23
Bleeding Front Brake.....	1-23
Bleeding Rear Brake.....	1-24
Brake Pedal Adjustment.....	1-25
Brake Pad Thickness.....	1-26
Brake Rotor Thickness.....	1-27
Brake Pad Replacement.....	1-27
Front Pad Removal.....	1-27
Front Pad Installation.....	1-28
Rear Pad Removal.....	1-28
Rear Pad Installation.....	1-29

1.12 SPARK PLUGS

Spark Plug Clean.....	1-31
Automatic.....	1-31
Manual.....	1-31
Plug Deposits.....	1-31
Replacement.....	1-31
Removal.....	1-31
Installation.....	1-32
Cleaning.....	1-33

1.13 HEADLAMP

Headlamp Alignment.....	1-34
Headlamp Adjustment: 1125 Models.....	1-34
Horizontal Adjustment.....	1-34
Vertical Adjustment (1125R).....	1-34
Vertical Adjustment (1125CR).....	1-35

1.14 BATTERY MAINTENANCE

General.....	1-36
Cleaning and Inspection.....	1-37
Voltmeter Test.....	1-37
Voltmeter Test.....	1-37
Charging Battery.....	1-37

TABLE OF CONTENTS

Safety Precautions.....	1-37
Using a Battery Charger.....	1-37
Disconnection and Removal.....	1-38
Storage.....	1-39
Installation and Connection.....	1-39

1.15 ENGINE COOLANT

Coolant Level: Buell 1125 Models.....	1-41
Coolant Type.....	1-41
Checking Level in Coolant Sight Gauge (Quick Check).....	1-41
Checking and Adding Coolant in Expansion Tank.....	1-41
Bleeding Coolant.....	1-42

1.16 VALVE CLEARANCE

Valve Lash.....	1-43
Lash Measurement.....	1-43
Lash Adjustment.....	1-44

1.17 STEERING HEAD BEARINGS

Inspection.....	1-47
Resistance Test.....	1-47

1.18 STORAGE

General.....	1-48
Removal From Storage.....	1-48

1.19 TROUBLESHOOTING

General.....	1-49
Engine.....	1-49
Starter Motor Does Not Operate or Does Not Turn Engine Over.....	1-49
Engine Turns Over But Does Not Start.....	1-49
Starts Hard.....	1-49
Starts But Runs Irregularly or Misses.....	1-49
Spark Plug Fouls Repeatedly.....	1-49
Pre-Ignition or Detonation (Knocks or Pings).....	1-49
Overheating.....	1-50
Valve Train Noise.....	1-50
Excessive Vibration.....	1-50
Check Engine Light Illuminates During Operation.....	1-50
Lubrication System.....	1-50
Engine Uses Too Much Oil Or Smokes Excessively... ..	1-50
Engine Leaks Oil From Cases, Hoses, Etc.....	1-50
Low Oil Pressure.....	1-50
High Oil Pressure.....	1-50
Electrical System.....	1-50
Alternator Does Not Charge.....	1-50
Alternator Charge Rate Is Below Normal.....	1-50
Speedometer Operates Erratically.....	1-50
Transmission.....	1-50
Shifts Hard.....	1-50
Jumps Out Of Gear.....	1-51
Clutch Slips.....	1-51
Clutch Drags Or Does Not Release.....	1-51
Clutch Chatters.....	1-51
Clutch.....	1-51
Slips.....	1-51
Drags or Does Not Release.....	1-51
Chatters.....	1-51
Chassis.....	1-51
Irregular/Inadequate Brake Action.....	1-51

Handling Irregularities.....	1-51
Cooling System.....	1-51
Overheats.....	1-51
Suspension.....	1-51

CHASSIS

2.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	2-1
---	-----

2.2 SPECIFICATIONS

1125 Models.....	2-6
Suspension Settings.....	2-6

2.3 VEHICLE IDENTIFICATION NUMBER (VIN)

Vehicle Identification Number: Buell 1125 Models.....	2-8
---	-----

2.4 BODY WORK, COVERS, GUARDS AND GUIDES

Body Work.....	2-10
Covers, Guards and Guides.....	2-12

2.5 TIRES

General.....	2-14
New Tires.....	2-14
Repair.....	2-14
Troubleshooting.....	2-14
Specifications.....	2-15
Tire Size.....	2-15
Rim Size.....	2-15
Dismounting.....	2-16
Cleaning and Inspection.....	2-16
Mounting: Diablo Corsa III.....	2-16
Wheel and Valve Stems.....	2-16
Using the Tire Machine.....	2-16
Inflate Tire.....	2-18
Runout.....	2-18
Lateral.....	2-18
Radial.....	2-19
Tire Balancing.....	2-19

2.6 WHEELS

Troubleshooting.....	2-20
Front Wheel.....	2-20
Removal.....	2-20
Installation.....	2-21
Inspection and Repair.....	2-22
Inspection.....	2-22
Wheel Bearings.....	2-22
Brake Rotor.....	2-22
Rear Wheel.....	2-22
Removal.....	2-22
Installation.....	2-24
Repair.....	2-25
Inspection.....	2-25
Drive Sprocket.....	2-25
Brake Rotor.....	2-25
Wheel Bearings.....	2-26
Wheel Rim Runout.....	2-27

Lateral Runout.....2-27
 Radial Runout.....2-27
 Wheel Bearings.....2-28
 Removal.....2-28
 Installation: Rotor Side Bearing.....2-29
 Installation: Opposite Side Bearing.....2-30

2.7 FRONT BRAKE

Front Brake Hand Lever.....2-32
 Master Cylinder/Reservoir: Removal.....2-32
 Master Cylinder/Reservoir: Repair.....2-33
 Disassembly.....2-33
 Cleaning and Inspection.....2-33
 Assembly.....2-34
 Master Cylinder/Reservoir: Installation.....2-35
 Front Brake Fluid Line.....2-36
 Removal.....2-36
 Installation.....2-36
 Caliper: Removal and Installation.....2-38
 Removal.....2-38
 Installation.....2-38
 Caliper: Repair.....2-38
 Disassembly.....2-38
 Clean and Inspect.....2-39
 Assembly.....2-39

2.8 REAR BRAKE

Rear Brake Pedal.....2-41
 Removal.....2-41
 Installation.....2-41
 Master Cylinder/Reservoir Removal.....2-41
 Master Cylinder.....2-41
 Reservoir.....2-42
 Master Cylinder/Reservoir: Installation.....2-43
 Reservoir.....2-43
 Master Cylinder.....2-43
 Brake Fluid Line.....2-44
 Removal.....2-44
 Installation.....2-45
 Caliper.....2-46
 Removal.....2-46
 Installation.....2-46

2.9 FRONT FORK

Removal.....2-47
 Disassembly.....2-47
 Drain the Fork Oil.....2-47
 Fork Disassembly.....2-48
 Cleaning and Inspection.....2-51
 Assembly.....2-51
 Preassembly.....2-51
 Fill with Fork Oil.....2-51
 Final Assembly.....2-52
 Fork Clamps: 1125R.....2-53
 Removal.....2-53
 Installation.....2-53
 Fork Clamps: 1125CR.....2-54
 Removal.....2-54
 Installation.....2-54
 Installation.....2-55

2.10 STEERING HEAD BEARINGS

Removal.....2-56
 Installation.....2-56

2.11 SHOCK ABSORBER

Replacement.....2-59
 Removal.....2-59
 Installation.....2-59

2.12 SWINGARM AND BRACE

Axle Sliders.....2-61
 Brace.....2-61
 Swingarm: Removal.....2-61
 Swingarm: Repair.....2-62
 Swingarm: Installation.....2-63

2.13 FRAME

Service.....2-64
 K-Brackets.....2-65
 Motor Mounts.....2-65

2.14 SUBFRAME

Tail Section.....2-66
 Subframe Pan.....2-66
 Removal.....2-66
 Installation.....2-67
 Subframe.....2-68
 Removal.....2-68
 Installation.....2-68

2.15 FAIRING AND HEADLAMP ASSEMBLY: 1125R

Windshield.....2-70
 Cleaning.....2-70
 Fairing.....2-70
 Removal.....2-70
 Installation.....2-70
 Headlamp Assembly.....2-71
 Removal.....2-71
 Installation.....2-71
 Support Bracket.....2-72
 Removal.....2-72
 Installation.....2-73
 Headlamp/Fairing Support Bracket.....2-74
 Removal.....2-74
 Installation.....2-74

2.16 WINDSCREEN AND HEADLAMP ASSEMBLY: 1125CR

Windscreen.....2-75
 Headlamp Assembly.....2-75
 Removal.....2-75
 Installation.....2-76

2.17 HANDLEBARS: 1125R

Left Clip-On.....2-77
 Removal.....2-77
 Installation.....2-77
 Left Hand Grip: All Models.....2-77
 Right Clip-on.....2-78

TABLE OF CONTENTS

Removal.....	2-78
Installation.....	2-78

2.18 HANDLEBARS: 1125CR

Left Side.....	2-80
Removal.....	2-80
Installation.....	2-80
Right Side.....	2-80
Removal.....	2-80
Installation.....	2-80
Handlebar.....	2-81

2.19 FOOTPEGS, HEEL GUARDS AND MOUNTS

Rider.....	2-82
Wear Peg.....	2-82
Footpeg.....	2-82
Heel Guards.....	2-82
Right Side Rider Footpeg Mount.....	2-82
Left Side Rider Footpeg Mount.....	2-83
Passenger.....	2-83
Footpeg.....	2-83
Heel Guard.....	2-84
Mount.....	2-84

2.20 SEAT

Removal.....	2-85
Rider Seat.....	2-85
Pillion.....	2-85
Installation.....	2-85
Rider Seat.....	2-85
Pillion.....	2-86
Pillion Lock.....	2-86
Removal.....	2-86
Installation.....	2-87

2.21 SIDESTAND

Sidestand.....	2-89
Removal and Disassembly.....	2-89
Assembly and Installation.....	2-90
Sidestand Stop Bracket.....	2-90

ENGINE

3.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	3-1
---	-----

3.2 SPECIFICATIONS

General.....	3-4
--------------	-----

3.3 TROUBLESHOOTING

Compression Test.....	3-7
Diagnosing Smoking Engine or High Oil Consumption.....	3-7
Oil Pressure Test.....	3-7
Troubleshooting Tables.....	3-8

3.4 ENGINE ROTATION

Down Rotation.....	3-13
Prepare the Motorcycle.....	3-13
Front of Motorcycle.....	3-13

Upper Engine.....	3-14
Left Side.....	3-15
Right Side.....	3-16
Muffler.....	3-16
Rotate Engine.....	3-17
Up Rotation.....	3-18
Rotate Engine.....	3-18
Muffler.....	3-18
Left Side.....	3-18
Front of Motorcycle.....	3-18
Upper Engine.....	3-19
Return to Service.....	3-19

3.5 ENGINE REPLACEMENT

Engine Removal.....	3-20
Preparation.....	3-20
Upper Engine.....	3-21
Left Side.....	3-21
Right Side.....	3-22
Drain the Fluids/Oil Cooler.....	3-23
K-Brackets.....	3-24
Motor Mounts.....	3-25
Engine Disassembly.....	3-27
Engine Assembly.....	3-28
Engine Installation.....	3-28
Motor Mounts and K-Brackets.....	3-28
Right Side.....	3-29
Front of Engine.....	3-29
Left Side.....	3-30
Final Tighten Exhaust System.....	3-30
Upper Engine.....	3-31
Return to Service.....	3-32

3.6 REBUILD TIMING INSTRUCTIONS

Timing.....	3-33
Front Cylinder TDC.....	3-33
270 Degree Rotation.....	3-33
Rear Cylinder TDC.....	3-33
Top Dead Center (TDC).....	3-35
General.....	3-35
Locking Crankshaft.....	3-35

3.7 CAMSHAFT ASSEMBLY

Valve Covers.....	3-36
Removal.....	3-36
Installation.....	3-36
Removal.....	3-37
Disassembly.....	3-38
Cleaning and Inspection.....	3-40
Installation (If camshafts or cam sprocket were not removed).....	3-41
Assembly/Installation.....	3-42

3.8 CYLINDER HEADS

Cylinder Head: Removal.....	3-45
Disassembly.....	3-45
Cleaning and Inspection.....	3-47
Cylinder Heads.....	3-47
Spark Plug Threads.....	3-47
Valves.....	3-47
Valve Seats.....	3-47
Valve Guides.....	3-48

Valve Springs.....3-48
 Cutting Valve Seats.....3-48
 Assembly.....3-50
 Cylinder Head: Installation.....3-50

3.9 CYLINDERS AND PISTONS

Removal and Disassembly.....3-52
 Cleaning and Inspection.....3-53
 Clean and Inspect Piston and Cylinder.....3-53
 Checking Piston Pin.....3-53
 Checking Lower Connecting Rod Bearing.....3-54
 Checking Cylinder Gasket Surface.....3-54
 Measuring Cylinder Bore and Cylinder-to-Piston
 Clearance.....3-54
 Deglazing Cylinder.....3-55
 Assembly and Installation.....3-56
 Installing Piston Rings.....3-56
 Installing Piston.....3-57
 Installing Cylinder.....3-58

3.10 CLUTCH SIDE

Clutch Case Vent Tube.....3-60
 Removal.....3-60
 Installation.....3-60
 Clutch Cover.....3-61
 Removal.....3-61
 Installation.....3-61
 P-Clamp.....3-63
 Balancer: Water Pump Shaft.....3-63
 Balancer: Bottom.....3-63
 Removal.....3-63
 Installation.....3-64
 Oil Pump.....3-65
 Removal.....3-65
 Inspection.....3-67
 Installation.....3-67
 Oil Strainer.....3-68

3.11 ALTERNATOR SIDE

Oil Filter.....3-70
 Pressure Retaining Valve.....3-71
 Sealing Sleeve.....3-71
 Ignition Cover.....3-72
 Removal.....3-72
 Installation.....3-73
 Balancer: Top.....3-74
 Removal.....3-74
 Bearing and Oil Seal.....3-75
 Installation.....3-76
 Starter Friction Clutch.....3-77
 Removal.....3-77
 Installation.....3-78
 Crankcase Breather.....3-79
 General.....3-79
 Replacement.....3-79

3.12 VALVE TRAIN DRIVE

Front Cylinder.....3-81
 Removal.....3-81
 Installation.....3-81
 Rear Cylinder.....3-81
 Removal.....3-81

Installation.....3-82

3.13 CRANKCASE

Split Crankcase.....3-83
 Clutch Side Components Removal.....3-83
 Alternator Side Components Removal.....3-83
 Disassembly.....3-84
 Oil Sump.....3-85
 Removal.....3-85
 Installation.....3-85
 Oil Nozzles.....3-86
 Oil Passage Plugs.....3-86
 Clutch Shaft Bearing: Left Case.....3-86
 Pressure Cavity: Left Case.....3-86
 Oil Nozzle: Left Case.....3-86
 Oil Nozzle: Right Case.....3-86
 Water Pump Shaft Bearing.....3-87
 Removal.....3-87
 Installation.....3-87
 Main Bearings.....3-88
 Removal.....3-88
 Installation.....3-88
 P-Clamp.....3-89
 Join Crankcase Halves.....3-89
 Assembly.....3-89
 Crankcase Gasket.....3-89
 Clutch Side Components Installation.....3-91
 Alternator Side Components Installation.....3-92

3.14 CRANKSHAFT

Removal.....3-93
 Disassembly.....3-93
 Cleaning and Inspection.....3-94
 Assembly.....3-94
 Installation.....3-94

FUEL SYSTEM

4.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....4-1

4.2 AIR CLEANER ASSEMBLY

Ram Air Intake Snorkel.....4-3
 Baseplate.....4-3
 Removal.....4-3
 Installation.....4-4
 Throttle Mount Gasket.....4-5
 Removal.....4-5
 Installation.....4-5

4.3 SENSORS

Bank Angle Sensor (BAS).....4-6
 Replacement.....4-6
 Barometric Pressure Sensor (BARO).....4-6
 Fuel Pressure Sensor.....4-7
 4-7
 Installation.....4-7
 Intake Air Temperature Sensor (IAT).....4-7
 Removal.....4-7
 Installation.....4-8
 Manifold Absolute Pressure Sensor (MAP).....4-8

TABLE OF CONTENTS

Removal.....	4-8
Installation.....	4-8
Oxygen Sensors (O2).....	4-8
General.....	4-8
Front.....	4-8
Rear.....	4-9
Throttle Position Sensor (TPS).....	4-10
Replacement.....	4-10
Manual TPS Reset.....	4-10

4.4 THROTTLE CONTROL

Throttle Control.....	4-11
Removal and Disassembly.....	4-11
Cleaning and Inspection.....	4-11
Assembly and Installation.....	4-11
Throttle Cable Replacement.....	4-12
Removal.....	4-12
Installation.....	4-12
Idle Air Control (IAC).....	4-13
Removal.....	4-13
Installation.....	4-13

4.5 THROTTLE BODY

Intake Leak Test.....	4-14
Leak Tester.....	4-14
Test.....	4-14
Injector Leak Test.....	4-15
Fuel Rail.....	4-15
Removal.....	4-15
Installation.....	4-15
Fuel Injectors.....	4-16
Removal.....	4-16
Installation.....	4-17
Throttle Body Removal.....	4-17
Removal.....	4-17
Inspection and Disassembly.....	4-18
Intake Flanges.....	4-18
Throttle Body Installation.....	4-18
Intake Flanges.....	4-18
Assembly.....	4-19
Throttle Body.....	4-19

4.6 ACTIVE INTAKE

Cable Adjustment.....	4-21
Removal.....	4-22
Installation.....	4-22

4.7 EXHAUST SYSTEM

Muffler: Removal.....	4-23
Right Side.....	4-23
Left Side.....	4-23
Headers.....	4-24
Removal.....	4-24
Installation.....	4-24
Muffler: Installation.....	4-24
Right Side.....	4-24
Left Side.....	4-25
Final Tighten.....	4-25

4.8 FUEL TANK

Draining the Fuel Tank.....	4-26
Fuel Cap Retaining Ring.....	4-26

Removal.....	4-26
Installation.....	4-26
Vent Valve.....	4-27
General.....	4-27
Removal.....	4-27
Installation.....	4-27
Vent Hose Routing.....	4-28
Tank Set Screws.....	4-29
Battery Ground.....	4-29
Wire Guide/Fuel Pump Cover.....	4-29

4.9 FUEL PUMP

Fuel Pressure Test.....	4-30
Wire Guide/Fuel Pump Cover.....	4-31
Removal.....	4-31
Installation.....	4-32
Fuel Pump: Removal.....	4-33
Fuel Pump: Installation.....	4-34

4.10 EVAPORATIVE EMISSIONS CONTROL (EVAP): CA MODELS

General.....	4-36
Repair.....	4-36
Vent Hose Routing.....	4-36
Canister Removal.....	4-36
Canister Installation.....	4-36

COOLING SYSTEM

5.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	5-1
---	-----

5.2 SPECIFICATIONS

General.....	5-2
--------------	-----

5.3 COOLANT FLOW

Description.....	5-3
Water Pump.....	5-3
Warm Up and the Thermostat.....	5-3
Operating Temperature and the Radiators.....	5-3
Cooling Fans.....	5-3
Pressure Cap.....	5-3
Overflow Tank.....	5-3
Engine Coolant Temperature (ECT) Sensor.....	5-4
Skip Spark.....	5-4
Replacement.....	5-4
Troubleshooting.....	5-4
Low Engine Temperature.....	5-4
High Engine Temperature.....	5-4
Coolant Leaks.....	5-4
Pressure Cap.....	5-4
Pressure Cap Test.....	5-5
System Pressure Test.....	5-5
Leak Detection Dye Test.....	5-6
Tests for Blown Gasket.....	5-7

5.4 ENGINE COOLANT

Freeze Point Test.....	5-8
Replacing Coolant.....	5-8
Drain the Coolant: Right Side Radiator.....	5-8
Drain the Coolant: Left Side Radiator.....	5-9

Fill with Coolant.....5-10

5.5 THERMOSTAT

Removal.....5-11

Installation.....5-12

5.6 WATER PUMP

Removal.....5-13

Installation.....5-14

5.7 COOLANT PIPES AND HOSES

Removal.....5-18

Installation.....5-19

5.8 RADIATORS

Removal.....5-21

 Left Side.....5-21

 Right Side.....5-21

Installation.....5-22

 Left Side.....5-22

 Right Side.....5-22

Overflow Tank.....5-23

5.9 OIL COOLER

Removal.....5-25

Installation.....5-25

Oil Line Fittings.....5-26

DRIVE/TRANSMISSION

6.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....6-1

6.2 SPECIFICATIONS

General.....6-3

6.3 TROUBLESHOOTING

General.....6-5

6.4 CLUTCH ACTUATOR

Clutch Lever Removal and Installation.....6-7

 Removal.....6-7

 Installation.....6-7

Clutch Master Cylinder/Reservoir: Removal.....6-7

Clutch Master Cylinder/Reservoir: Repair.....6-8

 Disassembly.....6-8

 Cleaning and Inspection.....6-9

 Assembly.....6-9

Clutch Master Cylinder/Reservoir Installation.....6-10

Clutch Fluid Line.....6-11

 Removal.....6-11

 Installation.....6-12

Secondary Clutch Actuator.....6-12

 Removal.....6-12

 Installation.....6-14

Secondary Actuator Repair.....6-15

 Disassembly.....6-15

 Cleaning and Inspection.....6-15

 Assembly.....6-17

6.5 CLUTCH

Vacuum Assist Hose.....6-18

Vacuum Assist Diaphragm.....6-19

 Removal.....6-19

 Installation.....6-19

Inner Diaphragm Cover Oil Seal.....6-21

Oil Jet.....6-22

Clutch Pack.....6-22

 Removal.....6-22

 Clutch Springs.....6-22

 Friction Plates.....6-23

 Steel Plates.....6-23

 Installation.....6-23

Pressure Plate Bearing.....6-25

Clutch Basket.....6-26

 Removal.....6-26

 Installation.....6-27

6.6 PRIMARY DRIVE

Primary Drive Assembly.....6-28

 Disassembly.....6-28

 Assembly.....6-28

Primary Drive Engine Sprocket.....6-31

6.7 SHIFT LINKAGE

Shift Lever.....6-32

Shift Shaft.....6-32

 Removal and Disassembly.....6-32

 Assembly and Installation.....6-32

Detent Wheel.....6-33

Index Shim.....6-33

6.8 TRANSMISSION

VSS Trigger Wheel.....6-35

 Removal.....6-35

 Installation.....6-35

Transmission: Removal.....6-36

Mainshaft.....6-36

 Disassembly.....6-36

 Assembly.....6-37

Clutch Shaft.....6-37

 Disassembly.....6-37

 Assembly.....6-38

Shift Drum and Forks.....6-38

Transmission: Installation.....6-39

 Assembly.....6-39

 Verify Operation.....6-40

6.9 TRANSMISSION CASE BEARINGS AND SEALS

Location.....6-41

Shift Shaft Seals.....6-41

 Right Case Seal (Inner).....6-41

 Left Case Seal (Outer).....6-41

Fork Drum.....6-42

 Right Case Bearing.....6-42

 Left Bearing.....6-42

Mainshaft.....6-43

 Right Case Bearing.....6-43

 Mainshaft Seal.....6-44

 Left Case Bearing.....6-44

TABLE OF CONTENTS

Clutch Shaft.....	6-45
Right Case Bearing.....	6-45
Left Case Bearing.....	6-46

6.10 FINAL DRIVE SPROCKET

Pulley Assembly.....	6-47
Removal.....	6-47
Installation.....	6-47
Rubber Compensator Dampers.....	6-49

6.11 DRIVE BELT AND IDLER PULLEY

General.....	6-50
Drive Belt Tension.....	6-50
Belt Handling.....	6-50
Drive Belt Removal.....	6-51
Drive Belt Installation.....	6-52
Idler.....	6-52
Removal.....	6-52
Installation.....	6-52

ELECTRICAL

7.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	7-1
---	-----

7.2 SPECIFICATIONS

General.....	7-3
--------------	-----

7.3 IGNITION SWITCH/FORK LOCK: 1125R

Replacement.....	7-4
Removal.....	7-4
Installation.....	7-4
Repair.....	7-5
Disassembly.....	7-5
Assembly.....	7-5

7.4 IGNITION SWITCH/FORK LOCK: 1125CR

Replacement.....	7-6
Removal.....	7-6
Installation.....	7-6

7.5 ELECTRONIC CONTROL MODULE (ECM)

Replacement.....	7-7
------------------	-----

7.6 IGNITION COILS

Front.....	7-8
Rear.....	7-8

7.7 BATTERY CABLES

Negative Battery Cable.....	7-9
Removal.....	7-9
Installation.....	7-9
Positive Battery Cable.....	7-10
Removal.....	7-10
Installation.....	7-10

7.8 STARTER

Solenoid.....	7-12
Removal.....	7-12
Installation.....	7-13

Starter: Removal.....	7-14
Starter: Installation.....	7-15

7.9 VOLTAGE REGULATOR

Removal.....	7-16
Installation.....	7-16

7.10 ALTERNATOR

Removal and Disassembly.....	7-17
Rotor.....	7-17
Stator.....	7-17
Assembly and Installation.....	7-18
Rotor.....	7-18
Stator.....	7-20

7.11 HORN

Removal.....	7-21
Installation.....	7-21

7.12 TURN SIGNALS

Front Turn Signals/Mirrors: 1125R.....	7-22
Removal.....	7-22
Installation.....	7-22
Front Turn Signals/Mirrors: 1125CR.....	7-23
Removal.....	7-23
Installation.....	7-23
Rear Turn Signals.....	7-24
Removal.....	7-24
Installation.....	7-24

7.13 HEADLAMP: 1125R

Bulbs.....	7-25
Marker Lamp.....	7-25
Headlamp Bulb.....	7-25
Wire Harness.....	7-26
Removal.....	7-26
Installation.....	7-27

7.14 HEADLAMP: 1125CR

Bulbs.....	7-28
High Beam.....	7-28
Marker Lamp.....	7-28
Low Beam.....	7-28
Horizontal Alignment.....	7-29
Wire Harness.....	7-29

7.15 TAIL AND LICENSE PLATE LAMP

Tail Lamp.....	7-31
Removal.....	7-31
Installation.....	7-31
License Plate Lamp.....	7-31
Bulb Replacement.....	7-31
Wire Harness and Lens.....	7-31
License Plate Bracket.....	7-32
Removal.....	7-32
Installation.....	7-33

7.16 FUSES AND RELAYS

Fuse Block.....	7-35
Fuses.....	7-35
Battery (Main) Fuse.....	7-35

Relays.....	7-36
7.17 SWITCHES AND CONNECTORS	
Auxiliary Connector [160].....	7-37
Brake Light Switch: Front.....	7-37
Brake Light Switch: Rear.....	7-37
CAN Bus Connector.....	7-38
Clutch Interlock Switch.....	7-38
Neutral Indicator Switch.....	7-39
Test.....	7-39
Removal.....	7-39
Installation.....	7-39
Oil Pressure Switch.....	7-40
Sidestand Sensor (HDI).....	7-40
7.18 CRANKSHAFT POSITION SENSOR (CKP)	
Removal.....	7-42
Installation.....	7-42
7.19 VEHICLE SPEED SENSOR (VSS)	
Removal.....	7-44
Installation.....	7-44
7.20 HANDLEBAR SWITCH HOUSINGS	
Left Switch Housing.....	7-45
Removal.....	7-45
Installation.....	7-46
Right Switch Housing.....	7-46
Removal.....	7-46
Installation.....	7-47
7.21 INSTRUMENT CLUSTER	
Replacement: 1125R.....	7-48
Replacement: 1125CR.....	7-49
7.22 ENGINE HARNESS	
Removal.....	7-50
Remove the Engine from the Chassis.....	7-50
Wire Harness Support.....	7-50
Repair.....	7-50
Disassembly.....	7-50
Assembly.....	7-51
Installation.....	7-52
Mount the Wire Harness.....	7-52
Install Engine.....	7-52
7.23 MAIN WIRE HARNESS	
Removal.....	7-54
Access the Tail Section.....	7-54
Separate Connectors and Connections.....	7-54
Access Front Harness.....	7-55
Remove from Engine.....	7-56
Wire Harness Front Bracket.....	7-57
1125R.....	7-57
1125CR.....	7-57
Installation.....	7-57
Fit to Engine.....	7-57
Front Harness.....	7-58
Install Rear Harness.....	7-58

7.24 COOLING FANS

Removal.....	7-60
Left Side.....	7-60
Right Side.....	7-60
Fuel Pump: Installation.....	7-61
Installation.....	7-62
Left Side.....	7-62
Right Side.....	7-62

APPENDIX A CONNECTOR REPAIR

A.1 AMP MULTILOCK CONNECTORS

AMP Multilock Connector Repair.....	A-1
General.....	A-1
Separating Pin and Socket Housings.....	A-1
Mating Pin and Socket Housings.....	A-1
Removing Terminals from Housing.....	A-1
Inserting Terminals into Housing.....	A-2
Preparing Wire Leads for Crimping.....	A-2
Crimping Terminals to Leads.....	A-3
Inspecting Crimped Terminals.....	A-4

A.2 AUTOFUSE ELECTRICAL CONNECTORS

Autofuse Connector Repair.....	A-5
General.....	A-5
Disassembly.....	A-5
Assembly.....	A-5

A.3 DELPHI CONNECTORS

Delphi Connector Repair.....	A-6
General.....	A-6
Separating Pin and Socket Housings.....	A-6
Mating Pin and Socket Housings.....	A-6
Removing Socket Terminals.....	A-6
Installing Socket Terminals.....	A-6

A.4 DELPHI MAIN FUSE HOUSING

Delphi Main Fuse Housing Repair.....	A-8
General.....	A-8
Removing Main Fuse.....	A-8
Installing Main Fuse.....	A-8
Removing Socket Terminals.....	A-8
Installing Socket Terminals.....	A-8

A.5 DEUTSCH ELECTRICAL CONNECTORS

Deutsch Connector Repair.....	A-10
General.....	A-10
Separating Pin and Socket Housings.....	A-10
Mating Pin and Socket Housings.....	A-10
Removing Socket Terminals.....	A-10
Installing Socket Terminals.....	A-10
Removing Pin Terminals.....	A-12
Installing Pin Terminals.....	A-12
Crimping Terminals.....	A-13

A.6 DEUTSCH STANDARD TERMINAL REPAIR

Deutsch Standard Terminal Crimps.....	A-14
Preparing Wire Leads for Crimping.....	A-14

TABLE OF CONTENTS

Crimping Terminal to Lead.....	A-14
Inspecting Crimps.....	A-14

A.7 DEUTSCH SOLID BARREL MINI TERMINAL REPAIR

Deutsch Solid Barrel Terminal Crimps.....	A-15
Preparing Wire Leads For Crimping.....	A-15
Adjusting Crimper Tool.....	A-15
Crimping a Barrel Contact To Wire Lead.....	A-15
Inspecting Crimps.....	A-15

A.8 DEUTSCH MINI TERMINAL REPAIR

Deutsch Mini Terminal Crimps.....	A-17
Preparing Wire Leads for Crimping.....	A-17
Crimping a Mini Terminal to Wire Lead.....	A-17
Inspecting Crimps.....	A-17

A.9 MOLEX CONNECTORS

Molex Connector Repair.....	A-18
Separating Pin and Socket Housings.....	A-18
Mating Pin and Socket Housings.....	A-18
Removing Terminals.....	A-18
Installing Terminals.....	A-18
Crimp Terminal to Lead.....	A-19
Prepare Lead.....	A-19
Prepare Tool.....	A-19
Position Terminal in the Punch/Die.....	A-20
Insert Stripped Lead.....	A-20
Crimp Terminal to Lead.....	A-20
Inspect Crimp.....	A-21

A.10 PACKARD 150 METRI-PACK CONNECTORS

150 Metri-Pack Connector Repair.....	A-22
General.....	A-22
Separating Pin and Socket Housings.....	A-22
Mating Pin and Socket Housings.....	A-22
Removing Socket Terminal.....	A-22
Inserting Socket Terminal.....	A-22

A.11 PACKARD 280 METRI-PACK RELAY AND FUSE BLOCK CONNECTORS

Fuse Block Repair.....	A-24
Removing Socket Terminals.....	A-24
Installing Socket Terminals.....	A-24
Crimping Terminals.....	A-24

A.12 PACKARD 480 METRI-PACK CONNECTORS

480 Metri-Pack Connector Repair.....	A-25
General.....	A-25
Separating Pin and Socket Housings.....	A-25
Mating Pin and Socket Housings.....	A-25
Removing Socket Terminals.....	A-25
Installing Socket Terminals.....	A-25

A.13 PACKARD 630 METRI-PACK CONNECTORS

630 Metri-Pack Connector Repair.....	A-26
General.....	A-26

Separating Pin and Socket Housings.....	A-26
Mating Pin and Socket Housings.....	A-26
Removing Socket Terminal.....	A-26
Installing Socket Terminal.....	A-26

A.14 PACKARD METRI-PACK TERMINALS

Metri-Pack Terminal Crimps.....	A-27
Matching Terminal To Crimper.....	A-27
Preparing Wire Lead.....	A-27
Crimping Wire Core.....	A-27
Crimping Insulation/Seal.....	A-27
Inspecting Crimps.....	A-28

A.15 PACKARD ECM CONNECTOR

Packard 100W Connector Repair.....	A-29
General.....	A-29
Separating Socket Housing From ECM.....	A-29
Mating Socket Housing To ECM.....	A-29
Removing Socket Terminal.....	A-29
Installing Socket Terminal.....	A-29
Crimping Terminals.....	A-29

A.16 PACKARD MICRO-64 CONNECTORS

Packard Micro-64 Connector Repair.....	A-31
General.....	A-31
Separating Pin and Socket Housings.....	A-31
Mating Pin and Socket Housings.....	A-31
Removing Terminal.....	A-31
Installing Terminal.....	A-31
Preparing Wire Leads for Crimping.....	A-32
Crimping Terminals.....	A-32
Inspecting Crimps.....	A-32

A.17 SEALED SPLICE CONNECTORS

Sealed Splice Connector Repair.....	A-34
General.....	A-34
Preparing Wire Leads.....	A-34
Splicing Wire Leads.....	A-34
Inspecting Seals.....	A-34

APPENDIX B WIRING

B.1 CONNECTORS

Connector Locations.....	B-1
Function/Location.....	B-1
Place and Color.....	B-1
Connector Number.....	B-1
Repair Instructions.....	B-1

B.2 WIRING DIAGRAMS

Wiring Diagram Information.....	B-3
Wire Color Codes.....	B-3
Wiring Diagram Symbols.....	B-3
2009 1125 Wiring Diagrams.....	B-4

APPENDIX C VALVE LASH

C.1 VALVE TAPPET SHIMS

Tables.....	C-1
-------------	-----

**C.2 VALVE LASH CALCULATION
WORKSHEET 1**

Worksheet 1.....C-2

**C.3 VALVE LASH CALCULATION
WORKSHEET 2**

Worksheet 2.....C-4

APPENDIX D CONVERSIONS

D.1 LENGTH CONVERSION

Conversion Table.....D-1

D.2 FLUID CONVERSION

United States System.....D-2

Metric System.....D-2

British Imperial System.....D-2

D.3 TORQUE CONVERSION

United States System.....D-3

Metric System.....D-3

APPENDIX E GLOSSARY

E.1 GLOSSARY

Acronyms and Abbreviations.....E-1

REFERENCE MATERIAL

TOOLS.....I

TORQUE VALUES.....VII

INDEX.....XXI