

PIONEERING SINCE 1903

# REPAIR MANUAL 2014



FC 450 EU

Art. no. 3403000en



Husqvarna®  
MOTORCYCLES



# INTRODUCTION

1

Read this repair manual carefully and thoroughly before beginning work.

The vehicle will only be able to meet the demands placed on it if the specified service work is performed regularly and properly.

This repair manual was written to correspond to the latest state of this model series. We reserve the right to make changes in the interest of technical advancement without updating this repair manual at the same time.

We shall not provide a description of general workshop methods. Likewise, safety rules that apply in a workshop are not specified here. It is assumed that the repair work will be performed by a fully trained mechanic.

All specifications are non-binding. Husqvarna Motorcycles GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. Husqvarna accepts no liability for delivery options, deviations from illustrations and descriptions, as well as misprints and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of supply.

© 2015 Husqvarna Motorcycles GmbH, Mattighofen Austria

All rights reserved

Reproduction, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.



ISO 9001(12 100 6061)

Husqvarna Motorcycles applies quality assurance processes that lead to the highest possible product quality as defined in the ISO 9001 international quality management standard.

Issued by: TÜV Management Service

REG. NO. 12 100 6061

Husqvarna Motorcycles GmbH

5230 Mattighofen, Austria



3403000en

08/2015

# TABLE OF CONTENTS

2

1	MEANS OF REPRESENTATION.....	6	6.32	Changing the steering head bearing.....	40
1.1	Symbols used .....	6	6.33	Adjusting the steering head bearing play .....	41
1.2	Formats used .....	6	7	HANDLEBAR, CONTROLS.....	42
2	SAFETY ADVICE .....	7	7.1	Handlebar position.....	42
2.1	Repair Manual.....	7	7.2	Adjusting the handlebar position .....	42
2.2	Safety advice .....	7	7.3	Adjusting the basic position of the clutch lever .....	42
2.3	Degrees of risk and symbols .....	7	7.4	Checking the throttle cable routing .....	43
2.4	Work rules.....	7	7.5	Checking the play in the throttle cable .....	43
3	IMPORTANT NOTES.....	8	7.6	Adjusting the play in the throttle cable .....	44
3.1	Manufacturer and implied warranty .....	8	8	FRAME .....	45
3.2	Operating and auxiliary substances .....	8	8.1	Checking the frame.....	45
3.3	Spare parts, accessories .....	8	9	SHOCK ABSORBER, SWINGARM.....	46
3.4	Figures .....	8	9.1	Adjusting the high-speed compression damping of the shock absorber.....	46
4	SERIAL NUMBERS.....	9	9.2	Adjusting the low-speed compression damping of the shock absorber.....	46
4.1	Chassis number .....	9	9.3	Adjusting the rebound damping of the shock absorber.....	47
4.2	Type label.....	9	9.4	Measuring rear wheel sag unloaded.....	47
4.3	Engine number.....	9	9.5	Checking the static sag of the shock absorber.....	47
4.4	Fork part number .....	9	9.6	Checking the riding sag of the shock absorber.....	48
4.5	Shock absorber article number .....	9	9.7	Adjusting the spring preload of the shock absorber.....	48
5	MOTORCYCLE.....	10	9.8	Adjusting the riding sag .....	49
5.1	Raising the motorcycle with a lift stand .....	10	9.9	Removing the shock absorber.....	49
5.2	Removing the motorcycle from the lift stand.....	10	9.10	Installing the shock absorber.....	50
5.3	Starting .....	10	9.11	Checking the shock absorber linkage .....	51
5.4	Starting the motorcycle for a check.....	11	9.12	Servicing the shock absorber .....	53
6	FORK, TRIPLE CLAMP .....	12	9.13	Removing the spring .....	54
6.1	Adjusting the compression damping of the fork.....	12	9.14	Disassembling the damper .....	54
6.2	Adjusting the rebound damping of the fork .....	12	9.15	Disassembling the piston rod .....	55
6.3	Bleeding the fork legs .....	12	9.16	Disassembling the seal ring retainer .....	56
6.4	Cleaning the dust boots of the fork legs.....	13	9.17	Changing the pilot bushing .....	57
6.5	Loosening the fork protection.....	13	9.18	Checking the damper .....	58
6.6	Positioning the fork protection.....	13	9.19	Removing the heim joint .....	58
6.7	Removing the fork legs .....	14	9.20	Installing the heim joint .....	59
6.8	Installing the fork legs.....	14	9.21	Assembling the seal ring retainer .....	60
6.9	Removing the fork protector.....	15	9.22	Assembling the piston rod .....	61
6.10	Installing the fork protector.....	15	9.23	Assembling the damper .....	62
6.11	Conducting major fork service.....	15	9.24	Bleeding and filling the damper .....	64
6.12	Conducting minor fork service.....	16	9.25	Filling the damper with nitrogen .....	66
6.13	Disassembling the fork legs.....	16	9.26	Installing the spring .....	67
6.14	Disassembling the cartridge .....	19	9.27	Checking the swingarm .....	68
6.15	Disassembling the piston rod .....	21	9.28	Removing the swingarm .....	68
6.16	Disassembling the screw cap with the membrane holder.....	22	9.29	Installing the swingarm .....	69
6.17	Disassembling the screw sleeve.....	23	9.30	Changing the swingarm bearing .....	70
6.18	Checking the fork legs .....	24	10	EXHAUST .....	73
6.19	Checking the fork legs - during a minor fork service.....	25	10.1	Removing the manifold .....	73
6.20	Changing the pilot bushing.....	26	10.2	Installing the manifold .....	73
6.21	Assembling the screw sleeve .....	27	10.3	Removing the main silencer .....	74
6.22	Assembling the screw cap with the membrane holder .....	27	10.4	Installing the main silencer .....	74
6.23	Assembling the piston rod .....	28	10.5	Changing the glass fiber yarn filling of the main silencer .....	74
6.24	Assembling the cartridge .....	30	11	AIR FILTER .....	76
6.25	Assembling the fork legs .....	31	11.1	Removing the air filter box lid .....	76
6.26	Bleeding and filling the cartridge .....	34	11.2	Installing the air filter box lid .....	76
6.27	Filling the cartridge with nitrogen .....	36	11.3	Removing the air filter .....	76
6.28	Greasing the steering head bearing .....	37			
6.29	Removing the lower triple clamp .....	37			
6.30	Installing the lower triple clamp .....	38			
6.31	Checking the steering head bearing play .....	39			

# TABLE OF CONTENTS

3

11.4	Installing the air filter.....	76
11.5	Cleaning the air filter and air filter box .....	77
11.6	Sealing the air filter box .....	77
12	FUEL TANK, SEAT, TRIM.....	78
12.1	Opening the filler cap.....	78
12.2	Closing the filler cap .....	78
12.3	Removing the right side cover.....	78
12.4	Installing the right side cover.....	79
12.5	Removing the seat.....	79
12.6	Mounting the seat.....	79
12.7	Removing the fuel tank.....	79
12.8	Installing the fuel tank.....	80
12.9	Checking the fuel pressure.....	81
12.10	Changing the fuel pump .....	82
12.11	Changing the fuel filter.....	84
12.12	Changing the fuel screen.....	86
13	MASK, FENDER .....	88
13.1	Removing the front fender .....	88
13.2	Installing the front fender .....	88
13.3	Removing the start number plate .....	88
13.4	Installing the start number plate .....	89
14	WHEELS.....	90
14.1	Checking the tire air pressure.....	90
14.2	Checking the tire condition.....	90
14.3	Checking the brake discs .....	90
14.4	Checking the spoke tension .....	91
14.5	Front wheel .....	92
14.5.1	Removing the front wheel .....	92
14.5.2	Installing the front wheel .....	92
14.5.3	Removing the brake disc of the front brake .....	93
14.5.4	Installing the brake disc of the front brake.....	93
14.5.5	Changing the front wheel bearing .....	93
14.6	Rear wheel .....	95
14.6.1	Removing the rear wheel.....	95
14.6.2	Installing the rear wheel.....	95
14.6.3	Removing the brake disc of the rear brake....	96
14.6.4	Installing the brake disc of the rear brake.....	96
14.6.5	Checking the chain tension.....	97
14.6.6	Adjusting the chain tension.....	97
14.6.7	Adjusting the chain guide.....	98
14.6.8	Checking the chain, rear sprocket, engine sprocket, and chain guide.....	98
14.6.9	Checking for chain dirt accumulation .....	100
14.6.10	Cleaning the chain.....	100
14.6.11	Changing the drivetrain kit .....	101
14.6.12	Changing the rear wheel bearing .....	102
15	WIRING HARNESS, BATTERY .....	105
15.1	Changing the main fuse.....	105
15.2	Removing the battery.....	105
15.3	Installing the battery .....	106
15.4	Checking the charging voltage .....	106
15.5	Checking the quiescent current.....	106
15.6	Checking the capacitor.....	107
15.7	Checking the starter relay.....	107
16	BRAKE SYSTEM .....	109
16.1	Checking the front brake linings .....	109
16.2	Changing the front brake linings.....	109
16.3	Checking the free travel of the hand brake lever .....	110
16.4	Adjusting the basic position of the hand brake lever .....	111
16.5	Checking the brake fluid level of the front brake .....	111
16.6	Adding front brake fluid .....	112
16.7	Changing the front brake fluid .....	113
16.8	Checking the rear brake linings .....	114
16.9	Changing the rear brake linings.....	114
16.10	Checking the free travel of foot brake lever.....	116
16.11	Adjusting the basic position of the foot brake lever .....	116
16.12	Checking the rear brake fluid level .....	116
16.13	Adding rear brake fluid .....	117
16.14	Changing the rear brake fluid .....	118
17	ENGINE .....	120
17.1	Removing the engine .....	120
17.2	Installing the engine .....	124
17.3	Engine disassembly .....	129
17.3.1	Preparations .....	129
17.3.2	Draining the engine oil.....	129
17.3.3	Removing the clutch push rod .....	130
17.3.4	Removing the oil filter.....	130
17.3.5	Removing the starter motor .....	130
17.3.6	Removing the spark plug .....	130
17.3.7	Removing the valve cover .....	131
17.3.8	Removing the alternator cover .....	131
17.3.9	Positioning the engine at ignition top dead center .....	131
17.3.10	Removing the timing chain tensioner .....	132
17.3.11	Removing the camshaft .....	132
17.3.12	Removing the cylinder head.....	133
17.3.13	Removing the piston .....	133
17.3.14	Removing the rotor.....	134
17.3.15	Removing the timing chain.....	134
17.3.16	Removing the ignition pulse generator .....	135
17.3.17	Removing the suction pump .....	135
17.3.18	Removing the water pump cover .....	135
17.3.19	Removing the clutch cover.....	136
17.3.20	Removing the clutch discs .....	136
17.3.21	Removing the outer clutch hub.....	137
17.3.22	Removing the torque limiter .....	138
17.3.23	Removing the starter idler gear .....	138
17.3.24	Removing the shift shaft.....	138
17.3.25	Removing the shift drum locating unit .....	138
17.3.26	Removing the locking lever .....	139
17.3.27	Removing the force pump.....	139
17.3.28	Removing the primary gear .....	140
17.3.29	Removing the freewheel gear.....	140
17.3.30	Removing the left engine case section .....	140
17.3.31	Removing the shift rails .....	141
17.3.32	Removing the shift drum .....	141
17.3.33	Removing the shift forks .....	141
17.3.34	Removing the transmission shafts .....	142
17.3.35	Removing the crankshaft .....	142
17.4	Work on individual parts .....	142
17.4.1	Work on the right section of the engine case .....	142
17.4.2	Work on the left section of the engine case .....	144

# TABLE OF CONTENTS

4

17.4.3	Removing the oil pressure regulator valve .....	145
17.4.4	Checking spring length of oil pressure regulator valve .....	145
17.4.5	Installing the oil pressure regulator valve.....	146
17.4.6	Changing the crankshaft seal ring in the clutch cover.....	146
17.4.7	Removing the water pump .....	146
17.4.8	Installing the water pump .....	147
17.4.9	Removing the timing chain sprocket.....	148
17.4.10	Installing the timing chain sprocket.....	148
17.4.11	Changing the connecting rod, conrod bearing, and crank pin .....	148
17.4.12	Checking crankshaft run-out at bearing pin.....	150
17.4.13	Cylinder - Nikasil® coating.....	150
17.4.14	Checking/measuring the cylinder.....	150
17.4.15	Checking/measuring the piston .....	151
17.4.16	Checking the piston ring end gap .....	151
17.4.17	Measuring the piston/cylinder mounting clearance .....	152
17.4.18	Checking the oil pumps .....	152
17.4.19	Disassembling the autodecompressor.....	152
17.4.20	Assembling the autodecompressor .....	153
17.4.21	Checking camshaft .....	154
17.4.22	Checking the timing assembly .....	154
17.4.23	Removing the rocker arm.....	155
17.4.24	Removing the valves .....	155
17.4.25	Changing camshaft bearing .....	156
17.4.26	Checking the valves .....	156
17.4.27	Checking valve springs .....	157
17.4.28	Checking valve spring seat .....	157
17.4.29	Checking the cylinder head.....	157
17.4.30	Checking the rocker arm shafts .....	158
17.4.31	Installing the valves .....	158
17.4.32	Installing the rocker arm.....	159
17.4.33	Checking the clutch .....	160
17.4.34	Checking the shift mechanism .....	161
17.4.35	Preassembling the shift shaft .....	162
17.4.36	Disassembling the main shaft .....	163
17.4.37	Disassembling the countershaft.....	163
17.4.38	Checking the transmission.....	164
17.4.39	Assembling the main shaft .....	165
17.4.40	Assembling the countershaft.....	166
17.4.41	Checking the starter drive .....	167
17.4.42	Checking the freewheel.....	167
17.4.43	Removing the freewheel.....	168
17.4.44	Installing the freewheel.....	168
17.5	Engine assembly .....	169
17.5.1	Installing the crankshaft .....	169
17.5.2	Installing the transmission shafts .....	169
17.5.3	Installing the shift forks .....	169
17.5.4	Installing the shift drum .....	170
17.5.5	Installing the shift rails.....	170
17.5.6	Installing the left engine case .....	170
17.5.7	Installing the freewheel gear.....	171
17.5.8	Installing the primary gear .....	171
17.5.9	Installing the force pump.....	171
17.5.10	Installing the locking lever .....	172
17.5.11	Installing the shift drum locating unit .....	173
17.5.12	Installing the shift shaft .....	173
17.5.13	Installing the starter idler gear .....	173
17.5.14	Installing the torque limiter .....	173
17.5.15	Installing the outer clutch hub .....	173
17.5.16	Installing the clutch discs .....	174
17.5.17	Installing the clutch cover .....	176
17.5.18	Installing the water pump cover .....	177
17.5.19	Installing the suction pump .....	177
17.5.20	Installing the ignition pulse generator .....	177
17.5.21	Installing the timing chain.....	178
17.5.22	Installing the rotor.....	178
17.5.23	Installing the piston .....	178
17.5.24	Installing the cylinder head.....	180
17.5.25	Installing the camshaft .....	181
17.5.26	Installing the timing chain tensioner.....	181
17.5.27	Checking the valve clearance .....	182
17.5.28	Adjusting the valve clearance.....	182
17.5.29	Installing the alternator cover .....	183
17.5.30	Installing the valve cover .....	183
17.5.31	Installing the spark plug .....	183
17.5.32	Installing the starter motor .....	184
17.5.33	Installing the oil filter.....	184
17.5.34	Installing the clutch push rod .....	184
17.5.35	Installing the oil screens .....	184
17.5.36	Removing the engine from the engine assembly stand .....	185
18	CLUTCH .....	186
18.1	Checking/correcting the fluid level of the hydraulic clutch.....	186
18.2	Changing the hydraulic clutch fluid .....	186
19	WATER PUMP, COOLING SYSTEM .....	187
19.1	Cooling system .....	187
19.2	Checking the antifreeze and coolant level.....	187
19.3	Checking the coolant level.....	188
19.4	Draining the coolant.....	188
19.5	Refilling coolant .....	189
20	LUBRICATION SYSTEM .....	190
20.1	Oil circuit .....	190
20.2	Checking the engine oil level .....	190
20.3	Changing the engine oil and oil filter, cleaning the oil screens .....	191
20.4	Adding engine oil .....	193
20.5	Checking the engine oil pressure .....	193
21	IGNITION SYSTEM.....	195
21.1	Ignition coil - checking the secondary winding.....	195
21.2	Checking the spark plug connector.....	195
21.3	Alternator - checking stator winding.....	195
21.4	Removing the stator.....	196
21.5	Installing the stator .....	196
22	ELECTRIC STARTER.....	197
22.1	Checking the starter motor .....	197
23	THROTTLE VALVE BODY .....	198
23.1	Adjusting the idle speed .....	198
23.2	Executing the initialization run .....	198
24	TECHNICAL DATA .....	200
24.1	Engine .....	200
24.2	Engine tolerance, wear limits .....	200
24.3	Engine tightening torques.....	201

# TABLE OF CONTENTS

5

24.4	Capacities .....	202
24.4.1	Engine oil.....	202
24.4.2	Coolant.....	202
24.4.3	Fuel.....	202
24.5	Chassis .....	202
24.6	Electrical system.....	203
24.7	Tires .....	203
24.8	Fork.....	203
24.9	Shock absorber .....	204
24.10	Chassis tightening torques .....	204
25	CLEANING/PROTECTIVE TREATMENT .....	206
25.1	Cleaning the motorcycle.....	206
26	STORAGE.....	207
26.1	Storage .....	207
26.2	Preparing for use after storage .....	207
27	SERVICE SCHEDULE.....	208
27.1	Service schedule.....	208
27.2	Service work (as additional order) .....	209
28	WIRING DIAGRAM .....	210
28.1	Page 1 of 3.....	210
28.2	Page 2 of 3.....	212
28.3	Page 3 of 3.....	214
29	SUBSTANCES.....	216
30	AUXILIARY SUBSTANCES.....	217
31	SPECIAL TOOLS.....	219
32	STANDARDS .....	233
	INDEX .....	234

# 1 MEANS OF REPRESENTATION

6

## 1.1 Symbols used

The meaning of specific symbols is described below.



Indicates an expected reaction (e.g. of a work step or a function).



Indicates an unexpected reaction (e.g. of a work step or a function).



Indicates a page reference (more information is provided on the specified page).



Indicates information with more details or tips.



Indicates the result of a testing step.



Denotes a voltage measurement.



Denotes a current measurement.



Denotes a resistance measurement.

## 1.2 Formats used

The typographical formats used in this document are explained below.

**Proprietary name** Identifies a proprietary name.

**Name®** Identifies a protected name.

**Brand™** Identifies a trademark.

**Underlined terms** Refer to technical details of the vehicle or indicate technical terms, which are explained in the glossary.

## 2 SAFETY ADVICE

7

### 2.1 Repair Manual

Read this Repair Manual carefully and thoroughly before beginning work. It contains useful information and tips that will help you repair and maintain your vehicle.

This manual assumes that the necessary special Husqvarna tools and Husqvarna workplace and workshop equipment are available.

### 2.2 Safety advice

A number of safety instructions need to be followed to operate the vehicle safely. Therefore, read this manual carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.



#### Info


The vehicle has various information and warning labels at prominent locations. Do not remove information/warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

### 2.3 Degrees of risk and symbols




#### Danger

Indicates a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.

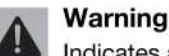

#### Warning

Indicates a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.

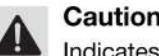

#### Caution

Indicates a danger that may lead to minor injuries if the appropriate measures are not taken.

#### Note

Indicates a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.



#### Warning

Indicates a danger that will lead to environmental damage if the appropriate measures are not taken.

### 2.4 Work rules

Special tools are necessary for certain tasks. The tools are not contained in the vehicle but can be ordered under the number in parentheses. E.g.: bearing puller (15112017000)

During assembly, non-reusable parts (e.g. self-locking screws and nuts, seals and seal rings, O-rings, pins, lock washers) must be replaced by new parts.

In some instances, a thread locker (e.g. **Loctite®**) is required. The manufacturer instructions for use must be followed.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Change damaged or worn parts.

After you complete the repair or service work, check the operating safety of the vehicle.

### 3    **IMPORTANT NOTES**

8

#### **3.1    Manufacturer and implied warranty**

The work prescribed in the service schedule must be carried out by an authorized Husqvarna Motorcycles workshop only and confirmed both in the customer's Service & Warranty Booklet and in the **Husqvarna Motorcycles Dealer.net**; otherwise, all warranty claims will be void. Damage or secondary damage caused by tampering with and/or conversions on the vehicle are not covered by the warranty.

Additional information on the manufacturer or implied warranty and the procedures involved can be found in the Service & Warranty Booklet.

#### **3.2    Operating and auxiliary substances**



##### **Warning**

**Environmental hazard** Improper handling of fuel is a danger to the environment.

- Do not allow fuel to get into the ground water, the ground, or the sewage system.

Use the operating and auxiliary substances (such as fuel and lubricants) as specified in the manual.

#### **3.3    Spare parts, accessories**

Only use spare parts and accessories approved and/or recommended by Husqvarna. Husqvarna accepts no liability for other products and any resulting damage or loss.

The current **Husky Power** parts for your vehicle can be found on the Husqvarna website.

International Husqvarna Motorcycles website: [www.husqvarna-motorcycles.com](http://www.husqvarna-motorcycles.com)

#### **3.4    Figures**


The figures contained in the manual may depict special equipment.

In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.

# 4 SERIAL NUMBERS


9

## 4.1 Chassis number

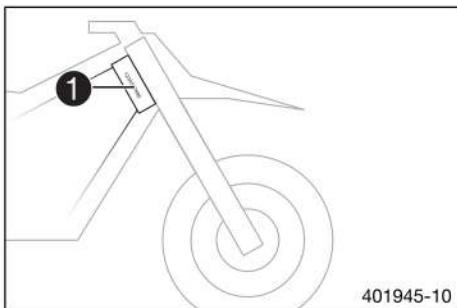


The chassis number 1 is stamped on the right side of the steering head.

## 4.2 Type label

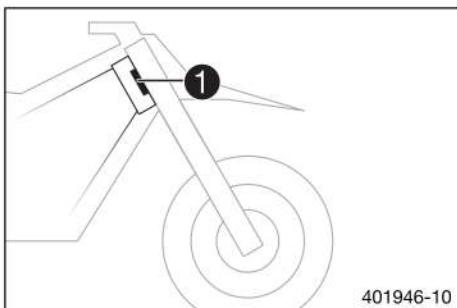


The type label 1 is fixed to the front of the steering head.

## 4.3 Engine number

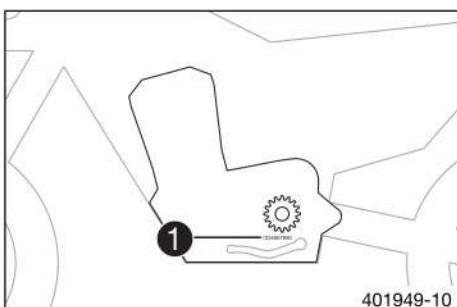


The engine number 1 is stamped on the left side of the engine under the engine sprocket.

## 4.4 Fork part number

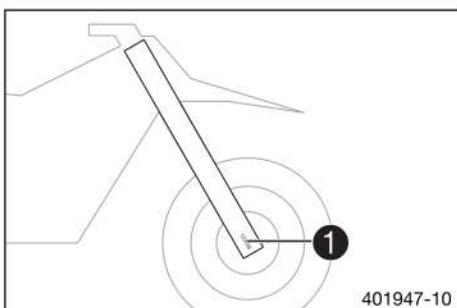

The fork part number 1 is stamped on the inside of the axle clamp.

## 4.5 Shock absorber article number

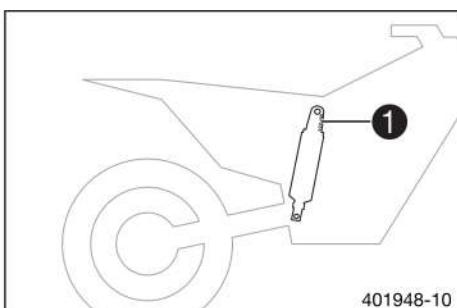

The shock absorber article number 1 is stamped on the top of the shock absorber above the adjusting ring towards the engine side.