



SCR950



Service Manual



LIT-11616-30-15

EAS20002

**SCR95H/SCR95HC
SERVICE MANUAL**
©2016 by Yamaha Motor Corporation, U.S.A.
First edition, June 2016
All rights reserved.
Any reproduction or unauthorized use
without the written permission of
Yamaha Motor Corporation, U.S.A.
is expressly prohibited.
Printed in U.S.A.
P/N LIT-11616-30-15

IMPORTANT

This manual was produced by the Yamaha Motor Company, Ltd. primarily for use by Yamaha dealers and their qualified mechanics. It is not possible to include all the knowledge of a mechanic in one manual. Therefore, anyone who uses this book to perform maintenance and repairs on Yamaha vehicles should have a basic understanding of mechanics and the techniques to repair these types of vehicles. Repair and maintenance work attempted by anyone without this knowledge is likely to render the vehicle unsafe and unfit for use.

This model has been designed and manufactured to perform within certain specifications in regard to performance and emissions. Proper service with the correct tools is necessary to ensure that the vehicle will operate as designed. If there is any question about a service procedure, it is imperative that you contact a Yamaha dealer for any service information changes that apply to this model. This policy is intended to provide the customer with the most satisfaction from his vehicle and to conform to federal environmental quality objectives.





Yamaha Motor Company, Ltd. is continually striving to improve all of its models. Modifications and significant changes in specifications or procedures will be forwarded to all authorized Yamaha dealers and will appear in future editions of this manual where applicable.

TIP

- This Service Manual contains information regarding periodic maintenance to the emission control system. Please read this material carefully.
- Designs and specifications are subject to change without notice.

IMPORTANT MANUAL INFORMATION

Particularly important information is distinguished in this manual by the following notations.

	<p>This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.</p>
	<p>A WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.</p>
	<p>A NOTICE indicates special precautions that must be taken to avoid damage to the vehicle or other property.</p>
	<p>A TIP provides key information to make procedures easier or clearer.</p>

HOW TO USE THIS MANUAL

This manual is intended as a handy, easy-to-read reference book for the mechanic. Comprehensive explanations of all installation, removal, disassembly, assembly, repair and check procedures are laid out with the individual steps in sequential order.

- The manual is divided into chapters and each chapter is divided into sections. The current section title “1” is shown at the top of each page.
- Sub-section titles “2” appear in smaller print than the section title.
- To help identify parts and clarify procedure steps, there are exploded diagrams “3” at the start of each removal and disassembly section.
- Numbers “4” are given in the order of the jobs in the exploded diagram. A number indicates a disassembly step.
- Symbols “5” indicate parts to be lubricated or replaced. Refer to “SYMBOLS”.
- A job instruction chart “6” accompanies the exploded diagram, providing the order of jobs, names of parts, notes in jobs, etc.
- Jobs “7” requiring more information (such as special tools and technical data) are described sequentially.

1
↓
GENERATOR AND STARTER CLUTCH

GENERATOR AND STARTER CLUTCH

Removing the stator coil

Order	Job/Parts to remove	Qty	Remarks
	Engine oil		Drain. Refer to "CHANGING THE ENGINE OIL" on page 3-22.
	Sidestand/Drive pulley cover		Refer to "BELT DRIVE" on page 4-71.
1	Rectifier/regulator coupler	1	Disconnect.
2	Crankshaft position sensor coupler	1	Disconnect.
3	Damper cover	1	
4	Generator cover damper	1	
5	Crankshaft end accessing screw	1	

5-40

GENERATOR AND STARTER CLUTCH

REMOVING THE GENERATOR

1. Remove:

- Generator rotor bolt "1"
- Washer

TIP

- While holding the generator rotor "2" with the sheave holder "3", loosen the generator rotor bolt.
- Do not allow the sheave holder to touch the projection on the generator rotor.

Sheave holder
90890-01701
Primary clutch holder
YS-01880-A

2. Remove:

- Generator rotor "1" (with the flywheel puller "2")
- Woodruff key

NOTICE

To protect the end of the crankshaft, place an appropriate sized socket between the flywheel puller set center bolt and the crankshaft.

Flywheel puller
90890-01362
Heavy duty puller
YU-33270-B

REMOVING THE STARTER CLUTCH

1. Remove:

- Starter clutch bolts "1"
- Starter clutch

TIP

While holding the generator rotor "2" with the sheave holder "3", loosen the starter clutch bolts.

Sheave holder
90890-01701
Primary clutch holder
YS-01880-A

CHECKING THE STARTER CLUTCH

1. Check:

- Starter clutch rotors
- Damage/wear → Replace.

2. Check:

- Starter clutch idle gears
- Starter clutch gear
- Burns/chips/roughness/wear → Replace the defective part(s).

3. Check:

- Starter clutch gear's contacting surfaces
- Damage/pitting/wear → Replace the starter clutch gear.

4. Check:

- Starter clutch operation

5-43

SYMBOLS

The following symbols are used in this manual for easier understanding.

TIP

The following symbols are not relevant to every vehicle.



















SYMBOL	DEFINITION	SYMBOL	DEFINITION
	Serviceable with engine mounted		Gear oil
	Filling fluid		Molybdenum disulfide oil
	Lubricant		Brake fluid
	Special tool		Wheel bearing grease
	Tightening torque		Lithium-soap-based grease
	Wear limit, clearance		Molybdenum disulfide grease
	Engine speed		Silicone grease
	Electrical data		Apply locking agent (LOCTITE®).
	Engine oil		Replace the part with a new one.



TABLE OF CONTENTS

GENERAL INFORMATION	1
SPECIFICATIONS	2
PERIODIC CHECKS AND ADJUSTMENTS	3
CHASSIS	4
ENGINE	5
FUEL SYSTEM	6
ELECTRICAL SYSTEM	7
TROUBLESHOOTING	8