

---

# CONTENTS

## CHAPTER 1. GENERAL INFORMATION










<b>MOTORCYCLE IDENTIFICATION</b> .....	1-1
VEHICLE IDENTIFICATION NUMBER .....	1-1
ENGINE SERIAL NUMBER.....	1-1
<b>IMPORTANT INFORMATION</b> .....	1-2
PREPARATION FOR REMOVAL .....	1-2
ALL REPLACEMENT PARTS .....	1-2
GASKETS, OIL SEALS, AND O-RINGS .....	1-2
LOCK WASHERS/PLATES AND COTTER PINS .....	1-3
BEARINGS AND OIL SEALS .....	1-3
CIRCLIPS.....	1-3
<b>SPECIAL TOOLS</b> .....	1-4
FOR TUNE UP.....	1-4
FOR ENGINE SERVICE .....	1-5
FOR CHASSIS SERVICE .....	1-8
FOR ELECTRICAL COMPONENTS .....	1-9

## CHAPTER 2. SPECIFICATIONS

<b>SPECIFICATIONS</b> .....	2-1
GENERAL SPECIFICATIONS.....	2-1
MAINTENANCE SPECIFICATIONS .....	2-4
ENGINE .....	2-4
CHASSIS.....	2-11
ELECTRICAL.....	2-14
GENERAL TORQUE SPECIFICATIONS.....	2-16
DEFINITION OF UNITS .....	2-16
LUBRICATION POINT AND GRADE OF LUBRICANT.....	2-17
<b>LUBRICATION DIAGRAM</b> .....	2-19
<b>COOLANT DIAGRAM</b> .....	2-20
<b>CABLE ROUTING</b> .....	2-21

## CHAPTER 3. PERIODIC INSPECTION AND ADJUSTMENT

INTRODUCTION .....	3-1
MAINTENANCE INTERVALS CHART .....	3-1
PERIODIC MAINTENANCE EMISSION CONTROL SYSTEM .....	3-1
GENERAL MAINTENANCE/LUBRICATION .....	3-2
COWLING REMOVAL AND INSTALLATION .....	3-4
ENGINE .....	3-7
EXUP CABLE ADJUSTMENT (For California only) .....	3-7
VALVE CLEARANCE ADJUSTMENT .....	3-8
CARBURETOR SYNCHRONIZATION .....	3-15
IDLE SPEED ADJUSTMENT .....	3-17
THROTTLE CABLE FREE PLAY ADJUSTMENT .....	3-18
SPARK PLUG INSPECTION .....	3-19
IGNITION TIMING CHECK .....	3-20
COMPRESSION PRESSURE MEASUREMENT .....	3-21
ENGINE OIL LEVEL INSPECTION .....	3-23
ENGINE OIL REPLACEMENT .....	3-23
ENGINE OIL FILTER REPLACEMENT .....	3-24
CLUTCH ADJUSTMENT .....	3-26
AIR FILTER CLEANING .....	3-27
CARBURETOR JOINT INSPECTION .....	3-27
FUEL LINE INSPECTION .....	3-27
CRANKCASE VENTILATION HOSE INSPECTION .....	3-28
EXHAUST SYSTEM INSPECTION .....	3-28
COOLANT LEVEL INSPECTION .....	3-29
COOLANT REPLACEMENT .....	3-29
CHASSIS .....	3-32
FRONT BRAKE ADJUSTMENT .....	3-32
REAR BRAKE ADJUSTMENT .....	3-32
BRAKE FLUID INSPECTION .....	3-33
BRAKE PAD INSPECTION .....	3-33
REAR BRAKE LIGHT SWITCH ADJUSTMENT .....	3-33
BRAKE HOSE INSPECTION .....	3-34
AIR BLEEDING .....	3-34
DRIVE CHAIN SLACK ADJUSTMENT .....	3-35
DRIVE CHAIN LUBRICATION .....	3-37
STEERING HEAD INSPECTION .....	3-37
FRONT FORK INSPECTION .....	3-40
REAR SHOCK ABSORBER ADJUSTMENT .....	3-40
TIRE INSPECTION .....	3-41
WHEEL INSPECTION .....	3-42
CABLE INSPECTION .....	3-43
LUBRICATION .....	3-43









	
GEN INFO	<b>1</b>
	
SPEC	<b>2</b>
	
INSP ADJ	<b>3</b>
	
ENG	<b>4</b>
	
COOL	<b>5</b>
	
CARB	<b>6</b>
	
CHAS	<b>7</b>
	
ELEC	<b>8</b>
	
TRBL SHTG	<b>9</b>

<b>ELECTRICAL</b> .....	3-44
BATTERY INSPECTION .....	3-44
FUSE INSPECTION .....	3-46
HEADLIGHT BEAM ADJUSTMENT .....	3-46
HEADLIGHT BULB REPLACEMENT .....	3-47
TAIL/BRAKE BULB REPLACEMENT .....	3-48

## CHAPTER 4. ENGINE OVERHAUL

<b>ENGINE REMOVAL</b> .....	4-1
LOWER COWLING, CENTER COWLING, UPPER COWLING AND TOP COVER .....	4-1
FUEL TANK .....	4-1
ENGINE OIL .....	4-1
COOLANT .....	4-1
AIR FILTER CASE AND CARBURETOR .....	4-2
RADIATOR .....	4-2
MUFFLER ASSEMBLY .....	4-4
CLUTCH CABLE AND DRIVE CHAIN .....	4-4
LEADS .....	4-5
ENGINE REMOVAL .....	4-5
<b>ENGINE DISASSEMBLY</b> .....	4-7
CYLINDER HEAD COVER, CAMSHAFT AND CYLINDER HEAD .....	4-7
CYLINDER AND PISTON .....	4-10
STARTER CLUTCH .....	4-12
CLUTCH .....	4-13
A.C. MAGNETO .....	4-14
WATER PUMP .....	4-15
OIL PUMP AND SHIFT SHAFT .....	4-16
OIL PAN AND OIL STRAINER .....	4-17
STARTER MOTOR .....	4-18
CRANKCASE DISASSEMBLY .....	4-18
TRANSMISSION, SHIFTER AND SHIFT CAM .....	4-19
CRANKSHAFT .....	4-20
VALVE PAD AND VALVE .....	4-21
CONNECTING ROD .....	4-23
INNER ROTOR (OIL PUMP) .....	4-23
<b>INSPECTION AND REPAIR</b> .....	4-24
CYLINDER HEAD .....	4-24
VALVE .....	4-25
VALVE GUIDE .....	4-26
VALVE GUIDE .....	4-27
VALVE SEAT .....	4-30
VALVE SPRING .....	4-31
VALVE LIFTER .....	4-31
CAMSHAFT, CAM CHAIN AND CAM SPROCKET .....	4-31
CYLINDER AND PISTON .....	4-33

PISTON RING AND PISTON PIN .....	4-35
CRANKSHAFT AND CONNECTING ROD .....	4-37
OIL PUMP .....	4-41
PRIMARY DRIVE .....	4-42
STARTER CLUTCH .....	4-43
CLUTCH .....	4-44
TRANSMISSION .....	4-46
RELIEF VALVE AND PIPE .....	4-47
CRANKCASE .....	4-47
BEARING AND OIL SEAL .....	4-47
YAMAHA EXHAUST VARIABLE VALVE (For California only) .....	4-48
<b>ENGINE ASSEMBLY AND ADJUSTMENT .....</b>	<b>4-49</b>
INNER ROTOR (OIL PUMP) .....	4-49
CONNECTING ROD .....	4-49
CRANKSHAFT .....	4-50
VALVE PAD AND VALVE .....	4-51
CRANKCASE .....	4-54
TRANSMISSION .....	4-55
TRANSMISSION, SHIFTER AND SHIFT CAM .....	4-56
CRANKCASE ASSEMBLY .....	4-57
STARTER MOTOR .....	4-59
OIL PAN AND OIL STRAINER .....	4-59
OIL PUMP AND SHIFT SHAFT .....	4-60
A.C. MAGNETO .....	4-61
CLUTCH .....	4-63
STARTER CLUTCH .....	4-65
PISTON AND CYLINDER .....	4-67
CYLINDER HEAD AND CAMSHAFT .....	4-70
CAM CHAIN TENSIONER .....	4-75
REMOUNTING ENGINE .....	4-76
YAMAHA EXHAUST VARIABLE VALVE (For California only) .....	4-78

	
GEN INFO	1
	
SPEC	2
	
INSP ADJ	3
	
ENG	4
	
COOL	5
	
CARB	6
	
CHAS	7
	
ELEC	8
?	
TRBL SHTG	9

---

## CHAPTER 5. COOLING SYSTEM

<b>RADIATOR</b> .....	5-1
REMOVAL .....	5-2
INSPECTION .....	5-3
INSTALLATION .....	5-4
<b>WATER PUMP AND THERMOSTATIC VALVE</b> .....	5-6
REMOVAL .....	5-7
INSPECTION .....	5-9
INSTALLATION .....	5-10









## CHAPTER 6. CARBURETOR

<b>CARBURETOR</b> .....	6-1
SECTION VIEW .....	6-2
REMOVAL .....	6-3
DISASSEMBLY .....	6-5
INSPECTION .....	6-6
ASSEMBLY .....	6-8
INSTALLATION .....	6-9
ADJUSTMENT .....	6-10

## CHAPTER 7. CHASSIS

<b>FRONT WHEEL</b> .....	7-1
REMOVAL .....	7-2
INSPECTION .....	7-2
INSTALLATION .....	7-4
<b>REAR WHEEL</b> .....	7-7
REMOVAL .....	7-8
INSPECTION .....	7-8
INSTALLATION .....	7-9

<b>FRONT AND REAR BRAKE</b> .....	7-10
BRAKE PAD REPLACEMENT .....	7-12
CALIPER DISASSEMBLY .....	7-16
MASTER CYLINDER DISASSEMBLY .....	7-18
INSPECTION AND REPAIR .....	7-19
ASSEMBLY .....	7-21
<b>FRONT FORK</b> .....	7-28
REMOVAL .....	7-29
DISASSEMBLY .....	7-30
INSPECTION .....	7-31
ASSEMBLY .....	7-32
INSTALLATION .....	7-34
<b>STEERING HEAD AND HANDLEBAR</b> .....	7-36
REMOVAL .....	7-38
INSPECTION .....	7-41
INSTALLATION .....	7-42
<b>REAR SHOCK ABSORBER AND SWINGARM</b> .....	7-47
HANDLING NOTES .....	7-49
DISPOSAL NOTES .....	7-49
REMOVAL .....	7-49
INSPECTION .....	7-52
INSTALLATION .....	7-54
<b>DRIVE CHAIN AND SPROCKET</b> .....	7-56
REMOVAL .....	7-56
INSPECTION AND CLEANING .....	7-56
INSTALLATION .....	7-57

	
<b>GEN INFO</b>	<b>1</b>
	
<b>SPEC</b>	<b>2</b>
	
<b>INSP ADJ</b>	<b>3</b>
	
<b>ENG</b>	<b>4</b>
	
<b>COOL</b>	<b>5</b>
	
<b>CARB</b>	<b>6</b>
	
<b>CHAS</b>	<b>7</b>
	
<b>ELEC</b>	<b>8</b>
<b>?</b>	
<b>TRBL SHTG</b>	<b>9</b>

---









## CHAPTER 8. ELECTRICAL

<b>FZR400U/SUC CIRCUIT DIAGRAM</b> .....	8-1
<b>ELECTRICAL COMPONENTS</b> .....	8-3
<b>CHECKING OF SWITCHES</b> .....	8-5
SWITCH CONNECTION AS SHOWN IN MANUAL .....	8-5
CHECKING SWITCH FOR TERMINAL CONNECTION .....	8-5
<b>CHECKING OF BULBS</b> .....	8-8
KINDS OF BULBS .....	8-8
CHECKING BULB CONDITION .....	8-8
<b>IGNITION SYSTEM</b> .....	8-11
CIRCUIT DIAGRAM .....	8-11
DIGITAL IGNITION CONTROL SYSTEM DESCRIPTION .....	8-13
OPERATION .....	8-13
TROUBLESHOOTING .....	8-14
<b>ELECTRIC STARTING SYSTEM</b> .....	8-21
CIRCUIT DIAGRAM .....	8-21
STARTING CIRCUIT OPERATION .....	8-23
TROUBLESHOOTING .....	8-24
STARTER MOTOR .....	8-30
<b>CHARGING SYSTEM</b> .....	8-33
CIRCUIT DIAGRAM .....	8-33
TROUBLESHOOTING .....	8-35
<b>LIGHTING SYSTEM</b> .....	8-39
CIRCUIT DIAGRAM .....	8-39
TROUBLESHOOTING .....	8-41
LIGHTING SYSTEM CHECK .....	8-44
<b>SIGNAL SYSTEM</b> .....	8-49
CIRCUIT DIAGRAM .....	8-49
TROUBLESHOOTING .....	8-51
SIGNAL SYSTEM CHECK .....	8-53
<b>COOLING SYSTEM</b> .....	8-69
CIRCUIT DIAGRAM .....	8-69
TROUBLESHOOTING .....	8-71
<b>FUEL SYSTEM</b> .....	8-75
CIRCUIT DIAGRAM .....	8-75
FUEL PUMP CIRCUIT OPERATION .....	8-77
TROUBLESHOOTING .....	8-78
FUEL PUMP TEST .....	8-82

<b>YAMAHA EXHAUST VARIABLE VALVE SYSTEM</b>	
(For California only) .....	8-83
CIRCUIT DIAGRAM .....	8-83
TROUBLESHOOTING .....	8-85
<b>METER ASSEMBLY</b> .....	8-89
REMOVAL .....	8-90
INSTALLATION .....	8-91

## CHAPTER 9. TROUBLESHOOTING

<b>STARTING FAILURE/HARD STARTING</b> .....	9-1
<b>POOR IDLE SPEED PERFORMANCE</b> .....	9-3
<b>POOR MEDIUM AND HIGH SPEED PERFORMANCE</b> .....	9-4
<b>FAULTY GEAR SHIFTING</b> .....	9-4
<b>CLUTCH SLIPPING/Dragging</b> .....	9-5
<b>OVERHEATING OR OVER-COOLING</b> .....	9-6
<b>FAULTY BRAKE</b> .....	9-7
<b>FRONT FORK OIL LEAKAGE/MALFUNCTION</b> .....	9-7
<b>INSTABLE HANDLING</b> .....	9-8
<b>FAULTY SIGNALS AND LIGHTS</b> .....	9-9
<b>FAULTY EXUP (For California only)</b> .....	9-10

	<b>GEN INFO</b>	<b>1</b>
	<b>SPEC</b>	<b>2</b>
	<b>INSP ADJ</b>	<b>3</b>
	<b>ENG</b>	<b>4</b>
	<b>COOL</b>	<b>5</b>
	<b>CARB</b>	<b>6</b>
	<b>CHAS</b>	<b>7</b>
	<b>ELEC</b>	<b>8</b>
<b>?</b>	<b>TRBL SHTG</b>	<b>9</b>



---

# CONTENTS

<b>GENERAL INFORMATION</b> .....	1
<b>MOTORCYCLE IDENTIFICATION</b> .....	1
<b>VEHICLE IDENTIFICATION NUMBER</b> .....	1
<b>ENGINE SERIAL NUMBER</b> .....	1
<b>SPECIFICATIONS</b> .....	2
<b>GENERAL SPECIFICATIONS</b> .....	2
<b>MAINTENANCE SPECIFICATIONS</b> .....	3
<b>CHASSIS</b> .....	3
<b>TIGHTENING TORQUE</b> .....	4
<b>GENERAL TORQUE SPECIFICATIONS</b> .....	5
<b>PERIODIC INSPECTIONS AND ADJUSTMENTS</b> .....	6
<b>CHASSIS</b> .....	6
<b>DRIVE CHAIN SLACK ADJUSTMENT</b> .....	6
<b>CHASSIS</b> .....	8
<b>REAR WHEEL</b> .....	8
<b>REMOVAL</b> .....	9
<b>INSPECTION</b> .....	10
<b>INSTALLATION</b> .....	10
<b>STATIC WHEEL BALANCE ADJUSTMENT</b> .....	11
<b>FRONT AND REAR BRAKE</b> .....	12
<b>BRAKE PAD REPLACEMENT</b> .....	14
<b>CALIPER DISASSEMBLY</b> .....	19
<b>MASTER CYLINDER DISASSEMBLY</b> .....	21
<b>INSPECTION AND REPAIR</b> .....	23
<b>ASSEMBLY</b> .....	26



**GENERAL  
INFORMATION**


**MOTORCYCLE IDENTIFICATION  
VEHICLE IDENTIFICATION NUMBER**

The vehicle identification number ① is stamped into the right side of the steering head.

**Starting serial number:**  
**FZR400A (Except for California):**  
**JYA3BFE0 \* LA012101**  
**FZR400SAC (For California):**  
**JYA3FHC0 \* LA003101**

**NOTE:** \_\_\_\_\_

The vehicle identification number is used to identify your motorcycle and may be used to register your motorcycle with the licensing authority in your state.

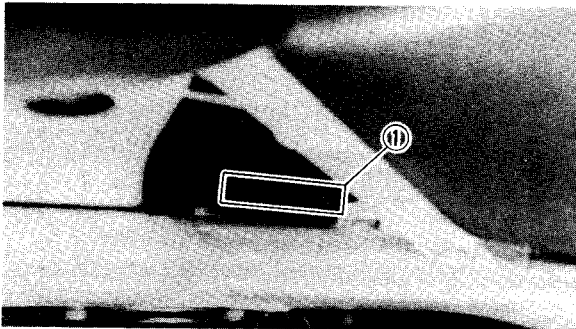

**ENGINE SERIAL NUMBER**


The engine serial number ① is stamped into the right side of the engine.

**Starting serial number:**  
**FZR400A (Except for California):**  
**3BF-012101**  
**FZR400SAC (For California):**  
**3FH-003101**


**NOTE:** \_\_\_\_\_

- The first three digits of these numbers are for model identifications; the remaining digits are the unit production number.
- Designs and specifications are subject to change without notice.

**FZR400A**

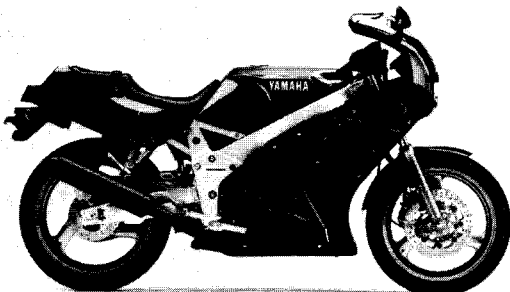

**FZR400SAC**

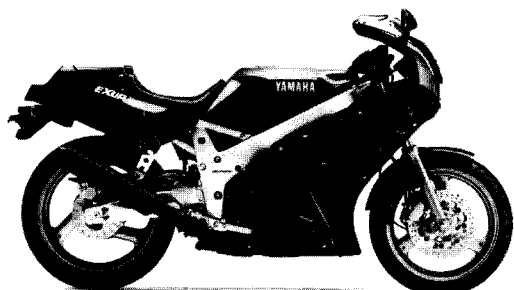




**SPECIFICATIONS**

**GENERAL SPECIFICATIONS**

Model	FZR400A/FZR400SAC	
Model Code Number:	3BF5 (FZR400A) 3FH3 (FZR400SAC)	
Vehicle Identification Number:	JYA3BFEO * LA012101 (FZR400A) JYA3FHCO * LA003101 (FZR400SAC)	
Engine Starting Number:	3BF-012101 (FZR400A) 3FH-003101 (FZR400SAC)	
Basic Weight: With Oil and Full Fuel Tank	188 kg (414 lb) (FZR400A) 191 kg (421 lb) (FZR400SAC)	
Tire: Type Size Manufacture (Type)	Front	Rear
	Tubeless 110/70R17-54H BRIDGESTONE (CY15) DUNLOP (K510F)	Tubeless 140/60R18-64H BRIDGESTONE (CY16) DUNLOP (K510)

**MAINTENANCE SPECIFICATIONS**

**CHASSIS**

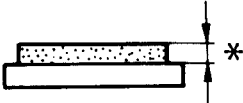Model	FZR400A/FZR400SAC
<p>Front Suspension:</p> <p>Front Fork Travel</p> <p>Front Spring Free Length</p> <p>&lt; Limit &gt;</p> <p>Collar Length</p> <p>Spring Rate:                   K1</p> <p>  K2</p> <p>Stroke                            K1</p> <p>  K2</p> <p>Optional Spring</p> <p>Oil Capacity</p> <p>Oil Level (Fully Compression)</p> <p>Oil Grade</p>	<p>130 mm (5.12 in)</p> <p>412 mm (16.2 in)</p> <p>408 mm (16.1 in)</p> <p>160 mm (6.3 in)</p> <p>4.4 N/mm (0.5 kg/mm, 25.2 lb/in)</p> <p>6.6 N/mm (0.7 kg/mm, 37.5 lb/in)</p> <p>0.0 ~ 90 mm (0.0 ~ 3.54 in)</p> <p>90 ~ 130 mm (3.54 ~ 5.12 in)</p> <p>No</p> <p>440 cm<sup>3</sup> (15.5 Imp oz, 14.9 US oz)</p> <p>92 mm (3.62 in)</p> <p>Bellow the top of inner fork tube without fork spring</p> <p>Yamaha Fork Oil 10WT or equivalent</p>
<p>Front Disc Brake:</p> <p>Type</p> <p>Disc Outside Diameter x Thickness</p> <p>Pad Thickness                   Inner</p> <p>  &lt; Limit &gt; *</p> <p>Pad Thickness                   Outer</p> <p>  &lt; Limit &gt; *</p> <div data-bbox="405 984 645 1087" style="text-align: center;">  </div> <p>Master Cylinder Inside Diameter</p> <p>Caliper Cylinder Inside Diameter</p> <p>Brake Fluid Type</p>	<p>Dual</p> <p>282 x 4 mm (11.10 x 0.16 in)</p> <p>5.5 mm (0.22 in)</p> <p>0.5 mm (0.02 in)</p> <p>5.5 mm (0.22 in)</p> <p>0.5 mm (0.02 in)</p> <p>15.87 mm (0.62 in)</p> <p>32.10 mm (1.26 in)</p> <p>DOT # 4 or DOT # 3</p>